

 CROSSBEATS

EPIC

---

LITE

---

USER MANUAL





**TOUCH ENABLED EARBUDS  
WITH ANC MODE**





## OVERVIEW

1. Touch area
2. Charging pin earbud
3. Reset button
4. LED lights on case
5. USB-C charging port

1



Take out the earbuds from the charging case

2



The earbuds will auto power ON

3



Search for EPIC-LITE in your phone's Bluetooth list

4



Click to connect

---

**FIRST TIME PAIRING**

# MONO PAIRING & RESET

---

## MONO PAIRING



For mono mode, take out either of the earbuds when already paired



 
The music will automatically play in that particular earbud

## RESET



Place the earbuds inside the charging case and with the lid open press and hold the button on the charging case until the green light flashes for 4 times.

Note:  Tap  Touch and hold



NOTE: Available only on devices that have Voice Assistant enabled

CONTROLS

# DIFFERENT SOUND MODES

---



**NORMAL MODE**

**AMBIENT MODE**

**ACTIVE NOISE  
CANCELLING MODE**

NOTE: Press and hold on the either of the earbuds for 2 seconds to switch between the different modes.





Connect and use the TYPE-C cable provided in the box for charging

---

**CHARGING**

## LED INDICATORS ON CASE

---




- Red light flashes for 4 times when earbuds are replaced in the charging case.
- Full battery – Green light flashes for four seconds
- Low battery – Red light flashes for four seconds
- Ultra-low battery – Red light flashes for five times


Press the reset button on the charging case once to check the battery level.

- < 20% - Red light remains on
- > 20% – Green light remains on





 +91 96112 93293

 +91 96112 93293

 [support@crossbeats.com](mailto:support@crossbeats.com)