句

# nen Buds

**USER MANUAL** 



# **POWER ON**

Take the earphones out of the charging case and it will automatically turn on

or

Touch and hold both the earbuds for 2 secs to turn them on

# **POWER OFF**

Place the earbuds back in the charging case to turn it off



### FIRST TIME PAIRING

- Take out the earbuds from the charging case
- The earbuds will auto power ON
- Search for 'CB-Neobuds' in your phone's BT list
- Click to connect



#### MONO PAIRING

- For mono mode, take out either of the earbuds when already paired
- The music will automatically play in that particular earbud

# RESET

Place the earbuds back in the case and press and hold the reset button for 10 secs, green light flashes for 3 times on the charging case

and earbuds enter the pairing mode.

NOTE: Remove/Delete the existing 'CB-Neobuds' profiles from the phone's Bluetooth list.

#### **CONTROLS**

- Play/Pause Tap on either of the earbuds twice
- Previous tracks Touch and hold left earbuds for 2 secs
- Next tracks Touch and hold right earbuds for 2 secs
- Voice Assistants Tap on the left earbud 3 times
- Answer/Hang up calls Tap on either of the earbuds twice
- Reject incoming call Touch and hold on either of the earbuds for 2 secs
- Game mode Tap on the right earbud thrice

NOTE: Available only on devices that have Voice Assistant enabled

#### CHARGING

- Connect and use the Type-C cable provided in the box for charging.
- Full charge in less than 1.5 hours.

# LED INDICATORS ON CASE

Press the reset button on the charging case once to check the battery level of the earbuds

- > 90% Green 90% to 50% - Blue
- <50% Red

# LED INDICATORS ON EARBUDS

- Red light Earbuds charging
- Blue light flashes when taken out of the charging case
- Solid white Pairing
- Off Earbuds fully charged
- Red light flashes every 0.2 secs Earbuds low battery

# www.crossbeats.com

© +91 96112 93293 +91 96112 93293