

Operations परिचालन

01 Curd / Eco Mode (for type A models only)

Curd

- Press **Furd** to select a curd mode. The corresponding indicator turns on, and the Curd Maestro™ is set to the selected mode. (For detailed instructions regarding curd, refer to the "Curd Maestro™ (applicable models only)" section on page 28.)
- If you do not want to use the Curd Maestro™, press **On** to stop the Curd Maestro™ operation.

Eco Mode

- To turn on the Eco Mode, press and hold **Card** for 3 seconds until the Eco Mode indicator **Ca** turns on. When the Eco Mode is active, the temperature display turns off.
- To turn off the Eco Mode, press **Card** for 3 seconds until Eco Mode indicator **Ca** turns off.

02 e-Defrost

- Press and hold **e-Defrost** for 3 seconds until the e-Defrost indicator **De** turns on. The refrigerator will start the defrosting process.

NOTE

During the defrosting process, the temperature display turns off, and you cannot adjust the temperature. If you want to stop the defrosting process, press and hold **e-Defrost** for 3 seconds until the e-Defrost indicator **De** turns off.

03 Curd (for type A models only)

- Make sure you are using the Curd Maestro™. Press **Furd** to select the Curd Maestro™. The corresponding indicator turns on, and the Curd Maestro™ is set to the selected mode. (For detailed instructions regarding curd, refer to the "Curd Maestro™ (applicable models only)" section on page 28.)
- Press **On** to stop the Curd Maestro™ operation.

04 Eco Mode (for type B models only)

- To turn on the Eco Mode, press and hold **Card** for 3 seconds until the Eco Mode indicator **Ca** turns on. When the Eco Mode is active, the temperature display turns off.
- To turn off the Eco Mode, press **Card** for 3 seconds until Eco Mode indicator **Ca** turns off.

05 e-Defrost

- Press and hold **e-Defrost** for 3 seconds until the e-Defrost indicator **De** turns on. The refrigerator will start the defrosting process.

NOTE

During the defrosting process, the temperature display turns off, and you cannot adjust the temperature. If you want to stop the defrosting process, press and hold **e-Defrost** for 3 seconds until the e-Defrost indicator **De** turns off.

17

Operations परिचालन

03 Fridge / Power Cool फ्रिज / पावर कूल

फ्रिज फ्रीज

You can use the Fridge button to set the Fridge temperature or activate Power Cool. Press **Fridge** to activate the Fridge function. The corresponding indicator turns on, and the Fridge temperature is set to the selected mode. (For detailed instructions regarding Fridge, refer to the "Fridge (applicable models only)" section on page 28.)

पावर कूल पावर कूल

- To activate Power Cool, press and hold **Fridge** for 3 seconds until the Power Cool indicator **Pc** turns on.
- Power Cool speeds up the cooling process at maximum power to lower the Fridge temperature. The Power Cool process continues to run for several hours and then turns off, and the Fridge returns to the previous temperature setting.
- Use Power Cool to rapidly cool food that spoils quickly or to rapidly cool the refrigerator after the door has been left open for some time.
- To deactivate Power Cool, press and hold **Fridge** for 3 seconds until the Power Cool indicator **Pc** turns off.

NOTE

When the temperature of the refrigerator becomes too high after a power failure, the Power Resumption indicator **Pr** turns on to alert the user.

04 Eco Mode (for type B models only)

- To turn on the Eco Mode, press and hold **Card** for 3 seconds until the Eco Mode indicator **Ca** turns on. When the Eco Mode is active, the temperature display turns off.
- To turn off the Eco Mode, press **Card** for 3 seconds until Eco Mode indicator **Ca** turns off.

05 e-Defrost

- Press and hold **e-Defrost** for 3 seconds until the e-Defrost indicator **De** turns on. The refrigerator will start the defrosting process.

NOTE

During the defrosting process, the temperature display turns off, and you cannot adjust the temperature. If you want to stop the defrosting process, press and hold **e-Defrost** for 3 seconds until the e-Defrost indicator **De** turns off.

23

Maintenance रखरखाव

Handle and care खतरा और देखभाल

Chiller compartment फ्रिज चमकटोर

Pull the chiller compartment towards you until it meets the stopper. Tilt the front upward and pull the compartment out. Press and hold **Chiller** for 3 seconds until the Chiller indicator **Ch** turns on. The chiller compartment will start the defrosting process.

Shelves अलमारियाँ

Pull the shelf forward until it meets the stopper. Tilt the front of the shelf up and pull it out. Press and hold **Shelf** for 3 seconds until the Shelf indicator **Sh** turns on. The shelf will start the defrosting process.

Fresh Max (Applicable models only) फ्रेश मैक्स (केवल उपयुक्त मॉडल)

To facilitate storage or removal of food items in different sizes, you can reposition the Fresh Max divider by pulling the divider out and reinserting it in a different position.

Door bin Variety फ्रिज बिन वैरिटी

Slightly pull towards right-side and lift the door bin variety up. (This Door Bin Variety is adjustable and may be positioned to best fit your needs.) Push and hold **Door Bin** for 3 seconds until the Door Bin indicator **Db** turns on.

Door bin Jumbo / Fresh Max फ्रिज बिन जम्बो / फ्रेश मैक्स

Slightly pull towards right-side and lift the door bin Jumbo up. (This Door Bin Jumbo/Fresh Max is not adjustable; it fits in only one position.) Push and hold **Door Bin** for 3 seconds until the Door Bin indicator **Db** turns on.

35

Operations परिचालन

04 Eco Mode (for type B models only) ईको मोड (केवल उपयुक्त मॉडल)

To turn on the Eco Mode, press and hold **Card** for 3 seconds until the Eco Mode indicator **Ca** turns on. When the Eco Mode is active, the temperature display turns off.

To turn off the Eco Mode, press **Card** for 3 seconds until Eco Mode indicator **Ca** turns off.

05 e-Defrost

- Press and hold **e-Defrost** for 3 seconds until the e-Defrost indicator **De** turns on. The refrigerator will start the defrosting process.

NOTE

During the defrosting process, the temperature display turns off, and you cannot adjust the temperature. If you want to stop the defrosting process, press and hold **e-Defrost** for 3 seconds until the e-Defrost indicator **De** turns off.

29

Operations परिचालन

Dial type control Temperature adjustment तापमान समायोजन

DIAL At "Monsoon" POINT (3° N to 4° N)

- To maintain optimum temperature for food storage, set the control dial at the "Monsoon" position.
- Adjustment range: 3°C to 4°C.
- Adjustment range: 3°C to 4°C.
- Adjustment range: 3°C to 4°C.

DIAL At "Winter" POINT (1° 2° N to 3° N)

- When setting the control dial at the "Winter" Position, the Refrigerator becomes warmer.
- When large quantities of food is stored, "Winter" (1° 2° N) is the best position.
- Adjustment range: 1°C to 2°C.
- Adjustment range: 1°C to 2°C.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

39

Operations परिचालन

How to defrost फ्रिज बिन थोहराई

01 Defrosting (for type A models only)

- Check the layer thickness of the frost/ice formed on the walls of the ice-making compartment. If more frost is formed, please defrost.
- When the frost/ice layer is about 1 cm thick, press and hold **Defrost** for 3 seconds until the Defrost indicator **De** turns on. The refrigerator will start the defrosting process.

02 Defrosting (for type B models only)

- Check the layer thickness of the frost/ice formed on the walls of the ice-making compartment. If more frost is formed, please defrost.
- When the frost/ice layer is about 1 cm thick, press and hold **Defrost** for 3 seconds until the Defrost indicator **De** turns on. The refrigerator will start the defrosting process.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

39

Operations परिचालन

Special features विशेष चीजें

The actual image and special functions of your refrigerator may differ, depending on the model and the country.

Ice making ice बनाना

- Fill the tray up to 80% with water level. It is 80% full when you are done.
- Press **Ice** to start the ice-making process. The corresponding indicator turns on, and the ice-making process starts.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

39

Operations परिचालन

Curd Maestro™ (applicable models only) Curd Maestro™ (केवल उपयुक्त मॉडल)

How to use the Curd Maestro™

- Press **Furd** to select a curd mode. The corresponding indicator turns on, and the Curd Maestro™ is set to the selected mode. (For detailed instructions regarding curd, refer to the "Curd Maestro™ (applicable models only)" section on page 28.)
- If you do not want to use the Curd Maestro™, press **On** to stop the Curd Maestro™ operation.

Eco Mode

- To turn on the Eco Mode, press and hold **Card** for 3 seconds until the Eco Mode indicator **Ca** turns on. When the Eco Mode is active, the temperature display turns off.
- To turn off the Eco Mode, press **Card** for 3 seconds until Eco Mode indicator **Ca** turns off.

02 e-Defrost

- Press and hold **e-Defrost** for 3 seconds until the e-Defrost indicator **De** turns on. The refrigerator will start the defrosting process.

NOTE

During the defrosting process, the temperature display turns off, and you cannot adjust the temperature. If you want to stop the defrosting process, press and hold **e-Defrost** for 3 seconds until the e-Defrost indicator **De** turns off.

NOTE

During the defrosting process, the temperature display turns off, and you cannot adjust the temperature. If you want to stop the defrosting process, press and hold **e-Defrost** for 3 seconds until the e-Defrost indicator **De** turns off.

NOTE

During the defrosting process, the temperature display turns off, and you cannot adjust the temperature. If you want to stop the defrosting process, press and hold **e-Defrost** for 3 seconds until the e-Defrost indicator **De** turns off.

39

Operations परिचालन

CAUTION चेतावनी

Do not use the Curd Maestro™ for any purposes other than curd making.

Do not use the Curd Maestro™ for any purposes other than curd making.

Do not use the Curd Maestro™ for any purposes other than curd making.

Do not use the Curd Maestro™ for any purposes other than curd making.

Do not use the Curd Maestro™ for any purposes other than curd making.

Do not use the Curd Maestro™ for any purposes other than curd making.

39

Maintenance रखरखाव

Handle and care खतरा और देखभाल

Chiller compartment फ्रिज चमकटोर

Pull the chiller compartment towards you until it meets the stopper. Tilt the front upward and pull the compartment out. Press and hold **Chiller** for 3 seconds until the Chiller indicator **Ch** turns on. The chiller compartment will start the defrosting process.

Shelves अलमारियाँ

Pull the shelf forward until it meets the stopper. Tilt the front of the shelf up and pull it out. Press and hold **Shelf** for 3 seconds until the Shelf indicator **Sh** turns on. The shelf will start the defrosting process.

Fresh Max (Applicable models only) फ्रेश मैक्स (केवल उपयुक्त मॉडल)

To facilitate storage or removal of food items in different sizes, you can reposition the Fresh Max divider by pulling the divider out and reinserting it in a different position.

Door bin Variety फ्रिज बिन वैरिटी

Slightly pull towards right-side and lift the door bin variety up. (This Door Bin Variety is adjustable and may be positioned to best fit your needs.) Push and hold **Door Bin** for 3 seconds until the Door Bin indicator **Db** turns on.

Door bin Jumbo / Fresh Max फ्रिज बिन जम्बो / फ्रेश मैक्स

Slightly pull towards right-side and lift the door bin Jumbo up. (This Door Bin Jumbo/Fresh Max is not adjustable; it fits in only one position.) Push and hold **Door Bin** for 3 seconds until the Door Bin indicator **Db** turns on.

35

Maintenance रखरखाव

Handle and care खतरा और देखभाल

Chiller compartment फ्रिज चमकटोर

Pull the chiller compartment towards you until it meets the stopper. Tilt the front upward and pull the compartment out. Press and hold **Chiller** for 3 seconds until the Chiller indicator **Ch** turns on. The chiller compartment will start the defrosting process.

Shelves अलमारियाँ

Pull the shelf forward until it meets the stopper. Tilt the front of the shelf up and pull it out. Press and hold **Shelf** for 3 seconds until the Shelf indicator **Sh** turns on. The shelf will start the defrosting process.

Fresh Max (Applicable models only) फ्रेश मैक्स (केवल उपयुक्त मॉडल)

To facilitate storage or removal of food items in different sizes, you can reposition the Fresh Max divider by pulling the divider out and reinserting it in a different position.

Door bin Variety फ्रिज बिन वैरिटी

Slightly pull towards right-side and lift the door bin variety up. (This Door Bin Variety is adjustable and may be positioned to best fit your needs.) Push and hold **Door Bin** for 3 seconds until the Door Bin indicator **Db** turns on.

Door bin Jumbo / Fresh Max फ्रिज बिन जम्बो / फ्रेश मैक्स

Slightly pull towards right-side and lift the door bin Jumbo up. (This Door Bin Jumbo/Fresh Max is not adjustable; it fits in only one position.) Push and hold **Door Bin** for 3 seconds until the Door Bin indicator **Db** turns on.

35

Maintenance रखरखाव

Vegetable Box सब्जी बॉक्स

Pull the moisturizing veg box forward and take it out of the refrigerator. Lift the cover up and pull it out of the refrigerator. Press and hold **Veg Box** for 3 seconds until the Veg Box indicator **Vb** turns on. The vegetable box will start the defrosting process.

Door bin Variety फ्रिज बिन वैरिटी

Slightly pull towards right-side and lift the door bin variety up. (This Door Bin Variety is adjustable and may be positioned to best fit your needs.) Push and hold **Door Bin** for 3 seconds until the Door Bin indicator **Db** turns on.

Door bin Jumbo / Fresh Max फ्रिज बिन जम्बो / फ्रेश मैक्स

Slightly pull towards right-side and lift the door bin Jumbo up. (This Door Bin Jumbo/Fresh Max is not adjustable; it fits in only one position.) Push and hold **Door Bin** for 3 seconds until the Door Bin indicator **Db** turns on.

Door bin Jumbo / Fresh Max फ्रिज बिन जम्बो / फ्रेश मैक्स

Slightly pull towards right-side and lift the door bin Jumbo up. (This Door Bin Jumbo/Fresh Max is not adjustable; it fits in only one position.) Push and hold **Door Bin** for 3 seconds until the Door Bin indicator **Db** turns on.

Door bin Jumbo / Fresh Max फ्रिज बिन जम्बो / फ्रेश मैक्स

Slightly pull towards right-side and lift the door bin Jumbo up. (This Door Bin Jumbo/Fresh Max is not adjustable; it fits in only one position.) Push and hold **Door Bin** for 3 seconds until the Door Bin indicator **Db** turns on.

37

Maintenance रखरखाव

Cleaning सफाई

Regularly use a dry cloth to remove all foreign substances such as dust or water from the power cord terminals and contact points.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

39

Troubleshooting समस्या-निवारण

Before calling for service, review the checkpoints below. Any service calls regarding normal situations (not Defect Cases) will be charged to users.

General symptoms

Symptom	Possible causes	Solution
Power cord is not plugged in properly.	Power cord is not plugged in properly.	Properly plug in the power cord.
Power cord is not plugged in properly.	Power cord is not plugged in properly.	Properly plug in the power cord.
Power cord is not plugged in properly.	Power cord is not plugged in properly.	Properly plug in the power cord.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

39

Troubleshooting समस्या-निवारण

Before calling for service, review the checkpoints below. Any service calls regarding normal situations (not Defect Cases) will be charged to users.

General symptoms

Symptom	Possible causes	Solution
Power cord is not plugged in properly.	Power cord is not plugged in properly.	Properly plug in the power cord.
Power cord is not plugged in properly.	Power cord is not plugged in properly.	Properly plug in the power cord.
Power cord is not plugged in properly.	Power cord is not plugged in properly.	Properly plug in the power cord.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

39

Troubleshooting समस्या-निवारण

Condensation कंडेन्सेशन

Condensation forms on the interior walls, shelves, and other parts of the refrigerator.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

39

Troubleshooting समस्या-निवारण

Condensation कंडेन्सेशन

Condensation forms on the interior walls, shelves, and other parts of the refrigerator.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

NOTE

When the temperature of the refrigerator becomes above 5°C, the Auto Express Cooling Function turns on to quickly cool your refrigerator. This function turns off after 30 minutes, or when you open the door or press any buttons.

39

SAMSUNG Helpline - Call: 1800 40 SAMSUNG (7267864) / 1800 5 SAMSUNG (7267864)