




**YOUR HOME,  
NOW A THEATRE!**

## **EVOKEBAR 120**

**SOUNDBAR WITH SUBWOOFER**

 **made in india**



Bluetooth  
Connectivity



High  
Bass



120  
Watts

**USER MANUAL**

## Welcome

 
Thank you for purchasing the Ambrane EvokeBar 120 Soundbar with Subwoofer. We recommend you to read the instruction manual carefully before using the product

## Package Contents

- 1 N EvokeBar 120 Soundbar
- 1 N Subwoofer
- 2 N AAA Cells
- 2 N Wall Mount Clamps
- 1 N Remote
- 1 N RCA to AUX Cable
- 1 N User Manual Scan Card
- 1 N Rating Card

## Product Overview

Discover a whole new level of cinematic audio experience at home with the Ambrane EvokeBar 120 soundbar. Immerse yourself and groove to every beat with a 60W subwoofer! Watch your favourite movies in crystal clear quality with Cinematic 2.1 Surround Sound. Take your theatre experience to the next level with multiple EQ Modes and smart touch controls. Stay connected with various connectivity option

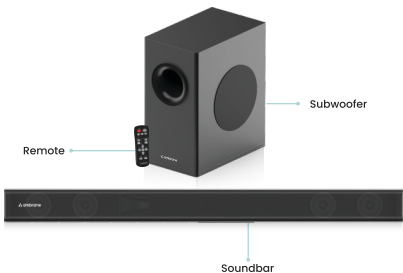

## Basic Operating Instructions

- **Power ON and Pairing**
- Press the Power button to turn on the speaker, it will turn on and enter into pairing mode.
- Search for Ambrane EvokeBar 120 on your device's Bluetooth list and select to connect.



S. No.	Button	Function
1.	POWER	Power ON/OFF
2.	MUTE	For Muting/Unmuting
3.	MODE	For selecting Connectivity Modes such as BT, AUX, USB, Optical, HDMI (ARC)
4.	3D	3D Surround EQ Mode
5.	GAME	Gaming EQ Mode
6.	BASS +	For increasing Bass
7.	BASS -	For decreasing Bass
8.	TREBLE +	For increasing Treble
9.	TREBLE -	For decreasing Treble
10.	VOL +	For increasing Volume
11.	VOL -	For decreasing Volume
12.	PREV	Previous Track
13.	NEXT	Next Track
14.	ROUND BUTTON	Play/Pause
15.	MUSIC	Music EQ Mode
16.	MOVIE	Movie EQ Mode

## How to Connect using Bluetooth 5.0

Turn ON the Soundbar by pressing the power button and by default the soundbar will enter into Bluetooth Mode. Search for "EvokeBar 120" in your device and click to pair.

## Important Notes

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
- If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.

- A. Pair your device with the player.
  - B. Play music via your device (if it supports A2DP).
  - C. Use supplied remote control to control play (if it supports AVRCP).
- 
- To pause/resume play, press the button on the remote control.
  - To change to next/previous to a track, press the buttons on the remote control.

 
To use **OPTICAL / HDMI ARC/ AUX/ USB Mode**, ensure that the unit is connected to the TV or audio device.

- A. Press the mode button repeatedly on the unit or press the mode buttons on the remote control to select the desired mode.
- B. Operate your audio device directly for playback features.
- C. Press the VOL +/- buttons to adjust the volume to your desired level.


## Remote Control Battery Replacement

Please insert the batteries as indicated below:


1. Remove the battery compartment cover.

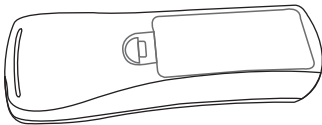

 2. Insert 2 AAA batteries according to the markings inside the compartment.

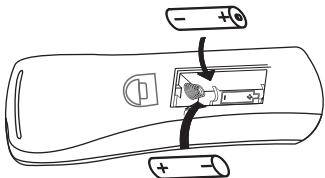

 3. Close the compartment.

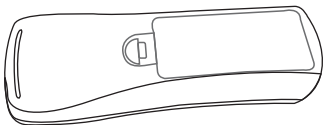

## IMPORTANT SAFETY INSTRUCTIONS



Caution: To reduce the risk of electric shock, do not dismantle the EvokeBar 120 and do not expose the apparatus to rain or moisture.



If the light flashes within an equilateral triangle this is to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



If the light flashes within an equilateral triangle this is to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.

## Important Notes

---

- Before turning on the power for the first time, make sure the power adaptor is properly connected.
- This soundbar is specially developed for LED/LCD/Plasma TVs: It should not be used in combination with CRT TVs (Cathode Ray Tube TVs) in order to avoid image interferences.
- Do not attempt to remove any screws, or open the casing of the unit; there are no user-serviceable parts inside. Refer all servicing to qualified service personnel.
- Operate the soundbar only as instructed in this manual and this instruction manual should be retained for future reference.
- If connected to a TV via Bluetooth there may be a sound lag between the TV and the device. To solve this, the best option is to connect the TV and Soundbar using an Aux/ optical/ HDMI output.
- The Soundbar may not be compatible with all Bluetooth capable TVs. In this case, please use an Aux/ Optical/ HDMI output to connect the TV and Soundbar to one another.
- Please ensure that the EvokeBar 120 is not exposed to the following:
  - Dripping or splashing water or placed in a humid atmosphere such as a bathroom.
  - Places exposed to direct sunlight or close to radiators.
  - On top of other stereo equipment that radiates too much heat.

- Blocking ventilation or in a dusty area.
- Areas where there is constant vibration.
- Humid or moist places.
- Do not place the soundbar near candles or other naked flames.

## Safety Instructions

---

- **Power Sources** - This soundbar should be operated only from the type of power source, indicated by the marking adjacent to the power cord entry.

**Grounding** - the soundbar is not required to be grounded. Ensure that the plug is fully inserted into the wall socket or extension cable to prevent pin exposure.

**Power Cord Protection** - Power-supply cords should be routed so that they are not likely to be walked on, kinked or pinched by items placed on or against them, paying particular attention to cords from plugs.

**Overloading** - Do not overload wall sockets, or extension cables, as this can result in a risk of a fire or electric shock.

**Ventilation** - The soundbar must be properly ventilated. Do not place the soundbar on a bed, sofa, or other similar surface. Do not cover the soundbar with any items such as table clothes, newspapers, etc.

**Heat** -The soundbar should be situated away from heat sources such as radiators, stoves, or other devices, including amplifiers that produce heat. No naked flame sources, such as lighted candles, should be placed on the Soundbar or subwoofer.

**Water and Moisture** -To reduce the risk of fire or electric shock, do not expose the soundbar to rain, dripping, splashing or excessive moisture such as in a sauna or bathroom. Do not use this soundbar near water, for example, near a bathtub,



washbowl, kitchen sink, laundry tub, wet basement or near a swimming pool or similar).

**Object and Liquid Entry** – Never push objects of any kind into this soundbar through openings, as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the soundbar. Do not place any object containing liquid on top of the soundbar.

**Accessories** – Do not place this soundbar on an unstable stand, tripod, bracket or table. The soundbar may fall, causing serious injury to a child or adult, and serious damage to the soundbar.

**Unused Periods** –The power cord of the soundbar should be unplugged from the mains during lightning storms or when the apparatus is left unused for a long period of time.

**Servicing** – Do not attempt to service this soundbar yourself, as opening or removing covers may expose you to dangerous voltage or other hazards and will void your warranty.

**Mains fuses** – For continued protection against fire hazards, use fuses only of the correct type and rating. The correct fuse specification for each voltage range is marked on the soundbar.

Do not turn up the volume while listening to a section with very low-level inputs or no audio signals. If you do, the speaker may be damaged when a peak level section is suddenly played.

Try to install the soundbar near a wall socket or extension cord to make sure that it is easily accessible.

The highest environmental temperature suitable for this soundbar is 35°C. If the soundbar may reset or not reset to the operation of control due to electrostatic discharge, just switch off and reconnect again, or move the soundbar to another location away from the TV.

## Battery

---

1. The batteries must not be exposed to excessive heat such as sunshine, fire etc.
2. The batteries should be drawn to the environmental aspects of battery disposal.
3. Battery usage - to prevent battery leakage which may result in body injuries, property damage, or damage to the apparatus: Install all batteries correctly, + and - as marked on the apparatus. Do not mix batteries (old and new or carbon and alkaline, etc.) Remove batteries when the unit is not used for a long time.

## Important Notes

---

- If connected to a TV via Bluetooth there may be a sound lag between the TV and the device. To solve this, the best option is to connect the TV and Soundbar using an Aux/ Optical/ HDMI output.
- The Soundbar may not be compatible with all Bluetooth capable TVs. In this case, please use an Aux/ Optical/ HDMI output to connect the TV and Soundbar to one another.

## Warning

---

This soundbar is not intended for use by persons (including children) with reduced physical sensory or epilepsy, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of by a person responsible for their safety.

1. To prevent possible hearing damage, do not listen at high volume levels for long periods of time or at a sudden high volume level.
2. Switch off the device whenever you are not using it, even if this is only for a short while.
3. The soundbar is not intended to be operated by means of an external timer or separate remote-control system.
4. Before operating this device, check the voltage of this system to see if it is identical to the voltage of your local power supply.

5. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table cloths, curtains etc. Make sure that there is at least 20 cm of space above and at least 5 cm of space on each side of the unit.
6. The soundbar must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on the apparatus.
7. To prevent fire or shock hazards, do not expose this device to hot places, rain, moisture or dust.
8. Do not locate this device near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
9. Do not place this device close to a strong magnetic field.
10. Do not place the device on an amplifier or receiver.
11. When removing the power plug from the wall socket, always pull directly on the plug, never pull on the cord.
12. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the TV screen.
13. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.

## **Troubleshooting**

---

### **No Sound**

Check that the Soundbar system is not set to standby.

Check that the correct source is selected.

### **No Sound/Low Volume**

(Computer or personal audio player connected to the Aux Port)

If the source has volume control, check that this is turned up.

### **No Sound (Digital Audio Source)**

Check that the sample rate of the source is in the correct range for the soundbar system.

### **No Remote Control Operation**

The batteries may be flat. Try replacing the batteries.

## Care and Cleaning

---

- After using the soundbar system please set it in Standby Mode.
- All care and cleaning operations should be carried out with the unit unplugged from the main power.
- The surface of the unit can be cleaned with a barely damp cloth and then dried carefully, Never use abrasives, abrasive cloths or chemical solvents.
- Loudspeaker grilles can be cleaned carefully with a soft cloth. If you wish to use an aerosol cleaning spray, do not spray directly on the cabinet; spray onto the cloth. Be careful not to damage the speakers.

## Warranty Card and Terms & Conditions

---

**NOTE:** For valid warranty claim, all information on the warranty certificate has to be completed and presented along with the original invoice.

- All warranty information, product features and specifications are subject to change without prior notice.
- All matters are subject to Delhi Jurisdiction.

- Ambrane Evokebar 120 comes with 365 days warranty from the date of purchase.
- Warranty can not be claimed if the product is damaged by wrong operation or force majeure.
- Accessories supplied with Ambrane Evokebar 120 are not covered under the warranty.

**CUSTOMER CARE:**

224, Second Floor, D-Mall, Netaji Subhash Place,  
Pitampura, Delhi, India - 110034

Contact No.: +911145911111,

E-mail: [care@ambraneindia.com](mailto:care@ambraneindia.com),

Web: [www.ambraneindia.com](http://www.ambraneindia.com)



"Listening at a high volume for a long time may damage your hearing."

**Join the Ambrane Ally!**

**@ambraneindia**

