



KEEP ROLLIN!



boAt

STONE 1208


Thank you for purchasing the boAt Stone 1208. You are now just a step away from the realm of Nirvana. Please follow this user manual carefully in case of any doubt that may arise. You can stay plugged into the sound with Bluetooth wireless technology, AUX, USB and TWS mode. This portable speaker has been designed for smooth interface that requires minimal of efforts. It's time to delve deeper into Nirvana.

Package Contents

- 1x Portable Wireless Speaker
- 1x Type-C Cable
- 1x Aux-in Cable
- 1x User Manual
- 1x Catalogue
- 1x Warranty Card
- 1x Shoulder Strap



Product Overview

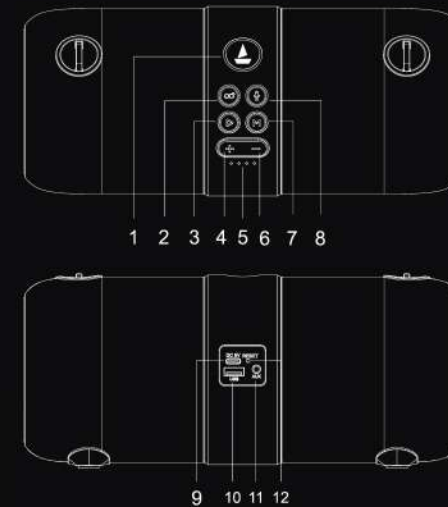

1. Power On/Off
2. TWS Button
3. Play/Pause
4. Forward/Volume Up
5. Battery Indicator
6. Backward/Volume Down
7. Mode Button
8. Voice Assistant Button
9. USB Type C Charging Interface
10. USB Port
11. AUX Port
12. RESET Jack

Basic Functions

Items	Instructions	LED status
Power On	Long press the Power button for 3 seconds	Blue LED flashes
Power Off	Long press the Power button for 3 seconds	Blue LED Turns Off
Pairing	Auto Pairing Mode	Blue LED starts flashing
Successful pairing	Select Stone 1208	Blue LED stays steady
Disconnect	long press TWS "TWS" button	Blue LED starts flashing
Receive a call	Short press the Play/Pause "▶" button to receive incoming calls	/
Reject the call	Long press the Play/Pause "▶" button for rejecting incoming calls	/
Hang up the call	Short press the Play/Pause "▶" button to hang up an ongoing call	/
Switch Calls between Speaker and Phone	Long press the Play/Pause "▶" button during the call for 2 seconds	/

Items	Instructions	LED status
Voice Assistant	Short press the Voice Assistant button "VA"	
Volume Up	Short press the Volume Up "▲" button in steps	/
Volume Down	Short press the Volume Down "▼" button in steps	/
Next track	Long press the Volume Up "▲" button	/
Previous Track	Long Press the Volume Down "▼" button.	/
Play/Pause	Short press the Play/Pause "▶" button.	/
Switch Modes	Short press the Mode button "M" to switch among playing modes: Bluetooth / FM Radio / USB / AUX	/
RGB Light	Long press the Mode button "M" to switch the RGB light ON or OFF	/

Bluetooth Connectivity:

- 1: Turn the speaker on and its LED indicator will blink blue in color until the pairing is done.
 - 2: Activate the phone's Bluetooth function and search for "Stone 1208". As soon as the speaker has been selected by you and paired, there will be a sound prompt indicating pairing and the blue LED will turn steady.
- NOTE:
- The speaker can automatically reconnect to the last paired device.
 - The speaker gets automatically turned off if there's no pairing for 10 minutes.

Disconnecting the Speaker:

- For disconnecting the Bluetooth connection, long press TWS "TWS" button.

RESET:

1. When we long press the voice assistant button for 3 seconds, speaker clears the paired list and then gets turned off, it doesn't automatically reconnect to the last paired device when the next time you turn the speaker on.
 2. Insert pointed insulated object (e.g.- toothpick) into the Reset jack
- NOTE: If the speaker doesn't turn off or doesn't respond, you could use the Reset functionality.

TWS Connection:

1. Turn the speakers on that you require to be forged into one, both under Bluetooth mode. Only need to set one of the two units.
2. Short press TWS "TWS" button till you hear a sound prompt, then start to pair.
3. A tone will be audible again with the white LED turning steady, it may take a few seconds before the two speakers connect
4. Activate phone's Bluetooth and search for 'Stone 1208' to establish pairing

NOTE: Once two units execute TWS function, they will be automatically paired again if next time they are turned on within effective range.

Disconnecting TWS:

- Short press TWS "TWS" button for stopping the TWS function or reconnect TWS
- Long press TWS "TWS" button for disconnecting both TWS and Bluetooth connectivity.

FM Radio:

1. Short press Mode "M" button to switch to FM mode.
2. Under radio mode, Long press Play/Pause "▶" button to auto search the FM Channel and it stores automatically.
3. Short-press Play/Pause "▶" button to mute the speaker.

USB Reader Mode

To play songs in the USB mode, you may plug the USB Flash Drive into the USB jack provided on the speaker. It will automatically switch to USB mode.

Charging:

- Connect one end of the provided charging cable to the charging input and the other end to an adaptor of DC 5V/2A.
- During charging, you could check charging status from the 4 LED white color charging indicators:

- ≥25%, 1st LED keeps solid, second light flickers, and 3rd and 4th lights stay off;
- ≥50%, 1st and 2nd LED keep solid, 3rd light flickers, 4th lights stays off;
- ≥75%, 1st and 2nd and 3rd LED keep solid, 4th light flickers;
- At Charging 100%, all 4 LEDs stay solid.

- When the remaining playtime comes down to around 20 minutes, there occur two sound prompts to indicate the same. One occurs when the remaining playtime is 20 minutes, and the final one occurs after the 2nd prompt, the device automatically gets switched off.

Note:
•Please note that this timeframe also depends on the volume level and the type of media

•Please don't use the speaker while it is in charging as it may decrease the battery's performance.

•The unit does not have power bank function, the USB port is only for music playback. It's forbidden to charge other devices via this unit or to connect other device via a USB cable.

AUX Mode

Utilize the provided audio cable to enjoy playback via the AUX mode. Simply connect the speaker (in ON state) to your media device via the cable and play.

Troubleshooting

- A.
- Question: The device cannot find "Stone 1208" on Bluetooth?
 - Reason: The speaker may not be in pairing mode.
 - Solution: Restart the speaker to search again.
- B.
- Question: The speaker is taking very long to charge?
 - Reason: The adapter's power output is too low, and the charging cable's consumption is too high.
 - Solution: Please choose the adapter with an output that is not less than DC 5V/2A and use the original charging cable.

Specifications

Bluetooth Version:	V5.0 BR
Net Weight:	1740g
Working Range:	12m
Driver Size:	76mm*2
Supported Profiles:	A2DP, AVRCP, HFP
Water Resistance Level:	IPX7
Frequency:	100Hz-20kHz
Input Voltage:	DC 5V/2A
Output Power:	14W
Charging Time:	Around 4 hours
Playing Time:	Up to 9 hours without RGB LED Up to 7 hours with RGB LED <small>(Playtime may vary according to the volume)</small>
Battery:	3.7V / 3600mAh

Safety Precautions

- Please note that the battery life of the speaker varies with the volume music is being played at. If at a lower volume, the battery life will be longer than when the speakers are playing at full volume
- If the speaker requires cleaning please ensure that it is done with the utmost of care. Furthermore, make sure it is turned off and disconnected from all Bluetooth devices. Do not use alcohol, benzene and other chemicals to clean the speaker. Do not allow the speaker within range of extremely hot or cold substances.
- Try to ensure that no physical damage comes to the speaker via falling, or coming into contact with hard surfaces or sharp edges.
- Do not dismantle the speaker or handle the battery in any way. If any issue arises with the speaker, please enlist the aid of a manufacturer. The battery must not be mishandled or replaced as when it can result in explosions or fire hazards. Therefore, please ensure that any servicing of the speaker is done through the service provider or manufacturer.
- If the speaker gets wet, please ensure that it is dried quickly and completely after coming into contact with water. Please do not allow the speaker to be submerged into water at any cost.