

Airdopes 191G

True Wireless Ear-buds

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 191G. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual. Also, you may refer to the same at times when you face any sort of difficulty.

Package Contents

- 1 1x boAt Airdopes 191G
- 2 1x Charging Case
- 3 1x Type-C Charging Cable
- 4 2x Pairs of Additional Earmuffs (Small & Large)
- 5 1x User Manual
- 6 1x Warranty Card
- 7 1x Catalogue
- 8 1x Read Me Card
- 9 1x FAQ Card

Overview

- 1 CTC (Capacitive Touch Control) / Power Button



 
Power On:

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Courtesy our IWP™ (Insta Wake N' Pair) technology, the earbuds power on automatically, get connected and enter the connection mode

OR

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds.

Step 2: After powering on, the earbuds enter the Connection Mode, indicated by alternate red and blue LED flashes on primary earbud.

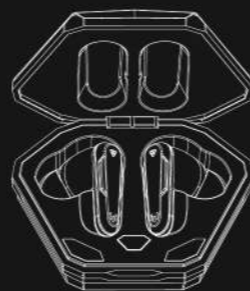

Connection Mode:

Step 3: Turn on the Bluetooth functionality on your phone/media device & scan

Step 4: Search for 'Airdopes 191G' and pair accordingly.

Congratulations! Your earbuds are now connected successfully via Bluetooth

 
Note:

- Pairing mode lasts for 5 minutes. If the pairing time is missed, then you will need to reconnect the earbuds and follow the above-mentioned procedure.
- Airdopes 191G remembers previously connected devices; once switched on, the earbuds automatically reconnect to the previously connected devices in working range.



Quick Guide on Functionalities

- 3 Seconds: Long touch left CTC for 3 sec to activate voice assistant
- 3 Seconds: Long touch both CTCs for 3 seconds to manually power on
- 5 Seconds: Long touch both CTCs for 5 seconds to manually power off
- 5 Seconds: Long touch both CTCs for 5 seconds to perform factory reset

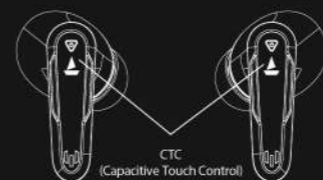

Single Earbud Usage

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for switching on the desired earbud

Step 2: The selected earbud automatically enters the connection mode indicated by LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 191G' to connect

Notes:

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage
- You cannot skip tracks or return to the previous tracks in Mono (single-earbud) mode



Charge the Earbuds:

- Step 1:** Please insert the earbuds back inside the charging case in correct orientation and close the lid
- Step 2:** During charging whenever the lid gets closed, LED1 and LED4 turn on to indicate that both left and right earbuds are getting charged respectively.
- Step 3:** Once the earbuds get fully charged, the charging case automatically switches off to save power.


Note:
- Before using the earbuds for the first time, it is recommended to fully charge the earbuds. Also, please keep the lid of the charging case closed while charging.

Charge The Case:

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

While the case is on charging, red LED flashes in sequence from LED1 to LED4 depending on the total remaining case battery. When the case gets fully charged, it gets indicated by all solid red LEDs.

Remaining Battery	LEDs Indication
0-25%	LED1 semi breathes
25%-50%	LED1 stays solid, LED2 semi breathes
50%-75%	LED1 and LED2 stay solid, LED3 semi breathes
75%-90%	LED1, LED2 and LED3 stay solid, LED4 semi breathes
Fully Charged	All LEDs stay solid

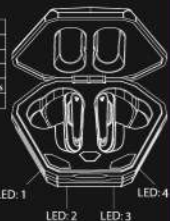 

Note: Charging Case Battery Issues / Error Handling Indicator - All the Red LEDs (LED1, LED2, LED3, LED4) blink swiftly for 10 seconds whenever you open the lid. Solution: Perform Factory Reset to resolve the issue.

Basic Functions:

- Voice Assistant: Long touch the left CTC for 3 seconds to activate the voice assistant
- Answer: Single tap CTC on either earbud to answer an incoming call
- Hang Up / Reject Call: Double tap the CTC on either earbud to end / reject call
- Play/Pause Music: Single tap either earbud's CTC to play or pause music
- Next Track: When playing music, double tap the right earbud's CTC to skip to the next song
- Previous Track: When playing music, double tap the left earbud's CTC to return to the previous song

Note:
• Volume can only be controlled via the media device



Voice Assistant:

 
Step 1: Long touch the CTC on left earbud for 3 seconds to activate your phone's default smart voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease

Tips: You may try the following commands,

- What is the weather?
- Play a song
- Set a reminder

Note: If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.

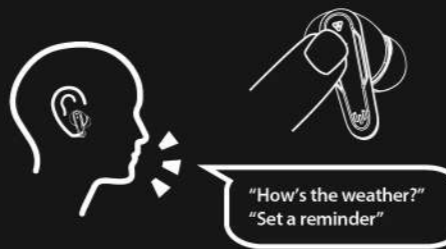

BEAST™ Mode

Long touch the right CTC for 3 seconds to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Long touch the right CTC for 3 seconds once again, to turn it off and return to standard Music Mode.
Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

ENx™ Tech

Our ENx™ (Environmental Noise Cancellation) tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the 4x mics are already equipped with the same and activated by default.

Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work space; literally anywhere!

Smart Power Off

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid. The earbuds automatically switch off (and enter charging mode).

Manual Power Off

Step 1: Long touch both CTCs for 5 seconds to manually power off the earbuds

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid.

Factory Reset:

Perform the factory reset in case you feel any difficulty while operating your Airdopes.

*NOTE: Before performing reset, clear "Airdopes 191G" from pairing device history by forgetting device.

 
Step 1: Take out both the earbuds from the case

Step 2: Long touch CTC on both the earbuds for 5 seconds; LED flashes quickly for 5 times

Step 3: Place the earbuds inside the case, close the lid and wait for 5 seconds

Step 4: Take out the earbuds from the case and perform a fresh connection

Congratulations! Your Airdopes 191G has been Reset

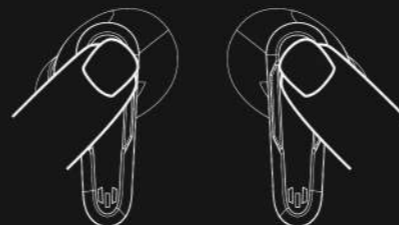

Specifications

Headphone Type	TWS
Bluetooth Version	V5.2
Music Playtime	Up to 6HRS per charge; Up to 24HRS additional with Case (at 60% volume)
ENx™ Tech Equipped Mics	4
IWP™ Tech	Yes
BEAST™ Mode	Yes; 60ms low latency
Transmission Range	10m
Driver Size	2x 6mm on each Earbud (4x Drivers)
Supported Codec	AAC/SBC
Frequency	20HZ-20KHZ
Battery	400mAh (Case) 40mAh*2 (Earbuds)
Charging Time	30min-45min (Earbuds) ; up to 1.5H (Case)
Charging Interface	USB Type C
Water Resistance	IPX5

Charging norms & Precautionary Guidelines: -

- 1) Charger/Brick/Adapter : 5V 2A
- 2) Cable/Wire : Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

Troubleshooting

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset
If Touch Controls don't seem to respond	After long usage, residual stains & perspiration can affect the touch control area, please use a clean cloth to wipe those areas softly

Warning:

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the phone / media device