

## **AIRDOPES 113**

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 113. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual. Also, you may refer to the same at times when you face any sort of difficulty.

### Package Contents

 
- 1x Charging Case
- 3 1x Type-C Charging
- User Manual 6 Warranty Card

 
(Small & Large)

Catalogue

### Overview

 CTC (Capacitive Touch Control) / Power Button






### Power On:

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Courtesy our IWP™ (Insta Wake N' Pair) technology, the earbuds power on automatically, get connected and enter the connection mode

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds

Step 2: After powering on, the earbuds enter the Connection Mode, indicated by alternate red and blue LED flashes on primary earbud and blue LED flashes once every 5 seconds on the secondary earbud

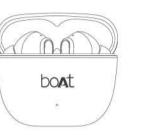

### Connection Mode:

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 113' and pair accordingly.

Congratulations! Your earbuds are now connected successfully via


then you will need to reconnect the earbuds and follow the above-mentioned procedure.

switched on, the earbuds automatically reconnect to the previously connected devices in working range.





### Quick Guide on Functionalities

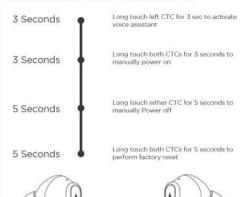

# . You cannot skip tracks or return to the previous tracks in Mono (single-earbud) mode boat

### Charge the Earbuds:

Step 1: Please insert the earbuds back inside the charging case in Step 2: During charging, the indicator on the earbuds stays solid

Step 3: Once the earbuds get fully charged, the charging case automatically switches off to save power, and the earbuds'

indicator turns off

fully charge the earbuds. Also, please keep the lid of the charging case closed while charging

### Charge The Case:

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

Red LED flashes in sequence charged, it gets indicated by



### **Basic Functions:**

Voice Assistant: Long touch the left CTC for 3 seconds to activate

Answer: Single tap the CTC on either earbud to answer an incoming

. Hang Up / Reject Call: Double tap the CTC on either earbud to end /

. Play/Pause Music: Single tap either earbud's CTC to play or pause

. Next Track: When playing music, double tap the right earbud's CTC to skip to the next song

· Previous Track: When playing music, double tap the left earbud's CTC to return to the previous song

· Volume can only be controlled via the media device



### Voice Assistant:


Step 1: Long touch the CTC on left earbud for 3 seconds to activate the smart voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease

Tips: You may try the following commands,

- · What is the weather?
- Play a song Set a reminder

Note: If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.

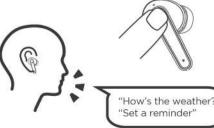

### BEAST™ Mode

Long touch the right CTC for 3 seconds to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Long touch the right CTC for 3 seconds once again, to turn it off and return to Music Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

### ENx™ Tech

Our ENx'\* tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx" as the mid s equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!

### Smart Power Off

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation The earbuds automatically switch off (and enter charging mode).

### Manual Power Off

Step 1: Long touch both CTCs for 5 seconds to manually power off the

Step 2: Once the earbuds get turned off, place them back inside the case

### Factory Reset:

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 113

\*NOTE: Before performing reset, clear "Airdopes 113" from pairing device history by forgetting device

Step 1: Take out both the earbuds from the case

Step 2: Long touch CTC on both the earbuds for 5 seconds; LED flashes quickly for 5 times

Step 3: Place the earbuds inside the case, close the lid and wait for 5

Step 4: Take out the earbuds from the case and perform a fresh

Congratulations! Your Airdopes 113 has been Reset





### Specifications

Headphone Type	TWS
Bluetooth Version	V5.2
Music Playtime	Up to 6HRS per charge; Up to 18HRS additional with Case (at 60% volume)
Standby Time	130H
Transmission Range	10m
Driver Size	13mm*2
luetooth Profiles	a2dp\avctp\avdtp\avrcp\gavdp\
	hfp\hid\spp\iopt\l2cap
Frequency	20HZ-20KHZ
Battery	300mAh (Case) 35mAh*2 (Earbuds)
Charging Time	30Min (Earbuds) ; 1.5H (Case)
Charging Interface	USB Type C
Water Resistance	IPX4

Charging norms & Precautionary Guidelines: -	
1) Charger/Brick/Adapter 2) Cable/Wire	: 5V 2A : Standard Cable (35 strands @0.10mm diameter/ strand)

ong as the specifications are as per above norms.

### Troubleshooting

Single Earbud Usage

mode indicated by LED flashes

search for 'Airdopes 113' to connect

Step 1: Please note that both the earbuds can be used in mono

mode. Use Smart / Manual Power On for switching on the desired

Step 2: The selected earbud automatically enters the connection

Step 3: Turn on Bluetooth on your phone/media device and

. To switch to Stereo mode, simply take out the other earbud

from the case. It will automatically power on and pair with the

previously selected earbud, hence enabling Stereo usage

Potential Problem	Solution
f one earbud is not working	Perform the Factory Reset
f earbuds are not in connection/scan mode	Perform the Factory Reset
f earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
f there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset
f Touch Controls don't seem to respond	After long usage, residual stains & perspiration can affect the touch control area, please use a clean cloth to wipe those areas softly

### Warning:

Please follow the instructions to operate

· Please don't use the earbuds in extreme temperatures

Please don't use the product near water

· Please keep the product away from heat sources, as the heat

Don't lam the ports such as charger port, LED port, etc.

. It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds'

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the phone / media device