

Functionalities

3 Seconds



Charge the Earbuds: Steps Please Insert the earbuds bac orientation.



- - 2 1x Charging Case 6 1x Warranty Card 7 1x Catalogue









DO's







Power On (First Time User):





Single Earbud Usage

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart Power On or Manual Power On for switching on the desired earbud.





Airdopes True Wireless Ear-buds

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 501 ANC. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss.

Knowledge of Bluetooth and device nnectivity is essential for steering this boat and

therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times when you face any sort of difficulty in future.

Charge The Case: Step: To charge the case, plug

Cose	Normal State (Not in Charging State)	Charging State	
Low battery	RED blinks (3 times) on opening the case lid/clicking reset button)	First shows the normal state and then go into RED breathing (Slow Pulse)	
30% - 70% battery	WHITE blinks (3 times) on opening the case lid/clicking reset button)	First shows the normal state and then WHITE breathing (Slow Pulse)	
More than GREEN blinks (3 times) on opening 70% battery the lid/clicking reset button!		First shows the normal state and then Green breathing (Slow Pulse)	



8 1x FAQ Card

Cose	Normal State (Not in Charging State)	Charging State
Low battery	RED blinks (3 times) on opening the case lid/clicking reset button)	First shows the normal state and then go into RED breathing (Slow Pulse)
30% - 70% battery	WHITE blinks (3 times) on opening the case lid/clicking reset button)	First shows the normal state and then WHITE breathing (Slow Pulse)
More than GREEN blinks (3 times) on opening 70% battery the lid/clicking reset button!		First shows the normal state and then Green breathing (Slow Pube)



Voice Assistant:

Smart Power Off

Step 1: After usage, remove both ti Step 2: Place the earbuds back into the charging case in correct orientation and close the lid.

Step 3: The earbuds will automatically sw

Manual Power Off

Step 2: Once the earbuds get turned off, plac case and close the lid.



Troubleshooting

Potential Problem	Solution Perform the Factory Reset	
If one earlied is not working		
If earbuds are not in connection/scan mode	Perform the Factory Reset	
If earbuds disconnect during phone call	Charge the earlands or perform the Factory Roset	
If there are other exceptions in unage	Place the carbuds back into the charging co and try using them again or perform the Factory Reset	
If Touch Controls don't seem to respond	After long usage, residual stains & perspirat can affect the touch control area, please use clean cloth to wipe those areas softly	

Warning:

Headphone Type	ANC TWS Earbuds
Bluetooth Version	V5.2
Water Resistance	IPX4
IWP Technology	Yes
ANC	Hybrid ANC (Up to 30dB)
Dual Microphones	Yes
Music Playtime	Up to 5.5H per charge; Up to 22H additional with Case
Standby	70H
Charging Technology	ASAP Fast Charge
Transmission Range	10m
Driver Size	8mm*2
Bluetooth Profiles	HEP/ HSP/ A2DP/ AVRCP
Frequency	20Hz-20kHz
Battery	500mAh (Case) 40mAh*2 (Earbuds)
Charging Time	2.5-3 Hours
Charoing Interface	Type C

Charging norms & Precautionary Guidelines: -		
1) Charger/Brick/Adapter 2) Cable/Wire	: 5V 2A : Standard Cable (35 strands @0.10mm diameter/ strand)	
Contraction and the contraction of the contraction		