PHILIPS



User manual



System positioning :

General information

Safety instructions

Please read carefully the safety mark on the back side and that no objects filled with liquids, such as vases, shall

Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the • Do not install near heat sources.
- loudspeaker cones. Please switch off the system from the wall socket,
- when not in use.
- Do not open the cover or back panel to avoid electrical shock or any other accidents. No userserviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer and soundbar. Care of the cabinet
- The MAINS plug is used as the disconnect device, the
 Use a soft cloth slightly moistened to clean the cabinet.
- disconnect device shall remain readily operable.

Accessories

Item	2RCA- 2RCA cable	Remote control	User manual	Optical cable	Power cable
Quantity	1	1	1	1	1

Bluetooth Operating Instruction

- 2. When selecting the Bluetooth mode. "." of "bt." in display will start blinking and you will hear an audio tone which indicates Bluetooth pairing mode.
- 3. For pairing with mobile phone or other Bluetooth devices, search the device named "Philips HTL8162" and pair it. Once paired, "." of "bt." slowly flash and come up with another audio tone. "." of "bt." will stop flash when playing music.
- 4. Press and hold " ▶I " for 3 seconds from remote control in order to force disconnect the Bluetooth connection.

Connections





Troubleshooting

Warning -

Problem	Solution
1. No power.	Check if the AC power cord is properly inserted into the AC mains socke
2. No sound or distorted sound.	Adjust the volume / select the correct source to choose the equipment that you want to hear through the system.
3. The remote control does not function properly.	Reduce the distance between the remote control and the system. Repl the batteries with new ones / Point the remote control directly towards IR sensor (located on front panel of the subwoofer) / Check that the ba are loaded correctly / Switch off the system for 30 seconds and then re
4. Low hum or buzz sound.	Place the product as far away as possible from electrical devices that m causing interference / Check power supply voltage and consult electric
5. The content of the USB flash drive cannot be read.	The USB flash drive format is not compatible with the system. Drive is formatted with a different file system which is not supported by this unit (e.g. I
 Slow operation of the USB flash drive / cannot detect USB flash drive. 	Big memory size USB flash drive will take longer time to read and play. / Take out USB drive and insert it again properly.
7. BT not working.	Reduce the distance or device is not paired.

总尺寸: 660x173mm 工艺: 风琴折 105G铜版纸双面印刷 成品尺寸: 110x86.5mm





PHILIPS Soundbar HTLINE USER MANUAL		<section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header>	<section-header><section-header><section-header><list-item><list-item><list-item><list-item><list-item><list-item><list-item><list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></section-header></section-header></section-header>	Top panel operation Image: constraint of the panel operation Image: constraint of the panel operation Image: constraint operation Image: const	 Permote controls 1. 0 : Power ON or Standby mode. 1. 0 : Power ON of fishor Proversa again to activate. 1. 0 : Power ON of fishor Proversa again to activate. 1. 0 : Power ON of fishor Proversa again to activate. 1. 0 : Power ON or Standby Proversa again to activate. 1. 0 : Power ON or Standby Proversa again to activate. 1. 0 : Power O	Register you product and get support at www.philips.com/welcome
User manual		Rem 2RCA-2RCA cable Remote control Oser manual Optical cable Power cable Quantity 1 1 1 1 1 2	(5) (6) (7)	You can press any button to resume. * AVAILABLE IF CONNECTED 4	30 seconds if there is no operation, and display off after another 90 seconds. You can press any button to resume. * AVAILABLE IF CONNECTED 5	Philips and the Philips Sheld Eribert are registered trademarks or Kommayler Philips NV, and are used under items This product has been manafactured by and is sold under the responsibility of MMD hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.
Audio source / player SOUNDBAR The so on the Source / player SOUNDBAR The so the factor Helpf - To a	stem positioning : subwoofer is recommended to be put the floor to get a better acoustic effect. soundbar is recommended to be put on flat desktop to get a better acoustic effect. pful Hint: a avoid magnetic interference, do not position ne speakers, too close to your TV.	 Bluetooth Operating Instruction Press SRC key from soundbar or remote control to Bluetooth mode; When selecting the Bluetooth mode. "," of "bt." in display will start blinking and you will hear an audio tone which indicates Bluetooth pairing mode. For pairing with mobile phone or other Bluetooth devices, search the device named "Philips HTL8162" and pair it. Once paired, "," of "bt." slowly flash and come up with another audio tone. "," of "bt." will stop flash when playing music. Press and hold " >II " for 3 seconds from remote control in order to force disconnect the Bluetooth connection. Note: While using Bluetooth, if external call comes, then speaker system goes in mute mode in order to protect privacy of mobile phone user. Operation resumes once the call is disconnected. 	Problem No or open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy the problem by following hints mentioned in below table. Problem Solution 1. No power. Check if the AC power cord is properly inserted into the AC mains socket. 2. No sound or distorted sound. Adjust the volume / select the correct source to choose the equipment that you want to hear through the system. 3. The remote control does not function properly. Reduce the distance between the remote control and the system. Replace the batteries with new ones / Point the remote control directly towards the IR sensor (located on front panel of the subwoofer) / Check that the batteries are loaded correctly / Switch off the system for 30 seconds and then restart. 4. Low hum or huzz sound Place the product as far away as possible from electrical devices that may be	Warranty This Philips soundbar is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase, should a defect develop during the warranty, TPV Technology India Pvt. Ltd., affiliate of MMD Hong Kong Holding Limited. undertake to repair the apparatus FREE OF CHARGE at any of is authorized service center in India. Defense is not accompanied with this warranty card. 1. Proof of purchase is not accompanied with this warranty card. 1. The aparatus is not used according to this user manual. 1. Defects are caused due to improper or reckless use. 2. A prepairs are done by persons other than Philips authorized service centre. 3. Defects are done by persons other than Philips authorized service centre. 4. Defects due to causes beyond control like lightning, abnormal voltage or while in transit to the purchase's residence. All Consumables and parts susceptible to normal wear and tear are not covered under this warranty. To detailed Terms and Conditions applicable, please refer <u>www.philips.com/support</u> .	Product specifications*Total system power160W RMSSoundbar power40W x2 RMSSubwoofer power80W RMSSeparation>40dbSNR>55dbAudio input socket2RCA- 2RCA cablePower consumption34.3 WSpeaker size8 inchesImpedance1 WaySpeaker size8 inchesImpedance4 OhmV5.0BT rangeUp to 10 metersUSB max capacityUp to 32GBplayabilityMP3 track	
C Subwoofer with built-in Multimedia amplifier	7	8	4. Low hum or buzz sound. Place the product as far away as possible from electrical devices that may be causing interference / Check power supply voltage and consult electrician. 5. The content of the USB flash drive cannot be read. The USB flash drive format is not compatible with the system. Drive is formatted with a different file system which is not supported by this unit (e.g. NTFS). 6. Slow operation of the USB flash drive / cannot detect USB flash drive / cannot detect USB flash drive. Big memory size USB flash drive will take longer time to read and play. / Take out USB drive and insert it again properly. 7. BT not working. Reduce the distance or device is not paired.	Model No. Product SI. No. Invoice Number Date of Purchase: Customer's Name and address:	Frequency range 60Hz - 150Hz Dimension (mm) W x H x D 240x 420 x 240 Weight 6.37kg *Specification subject to change without prior notice. Measured under specific conditions. .	

