 
 


Haier
Inspired Living

User Manual
MODEL
LE32B9600T
LE43B9600TF

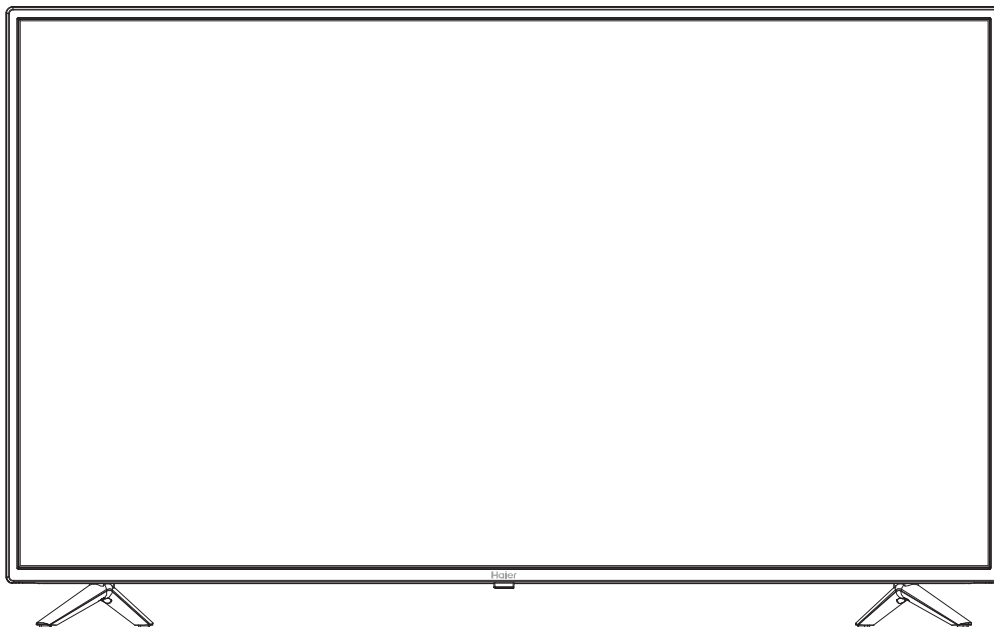

Illustrations in this guide are provided for reference only and may differ from actual product appearance. Product design and specification may be changed without notice.

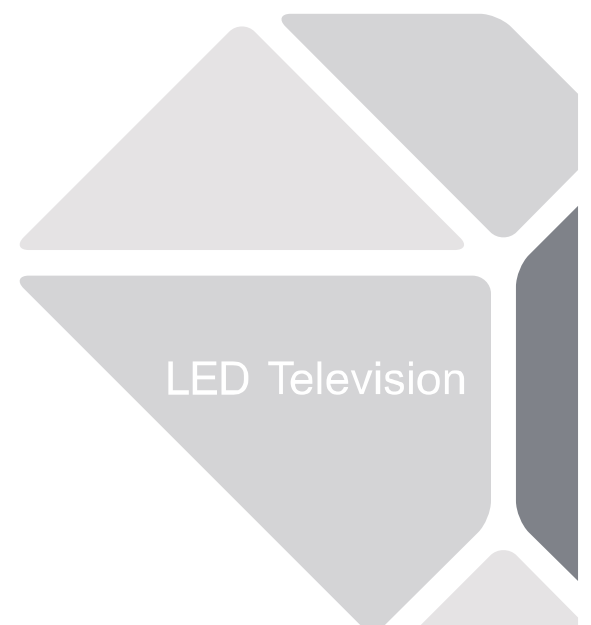 


Contents

- 1、 Safety and warnings
- 2、 Introduction
- 3、 Installation
- 4、 Remote Controller
- 5、 TV Operation
- 6、 Trouble shooting

IMPORTANT SAFETY INSTRUCTION

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lighting storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

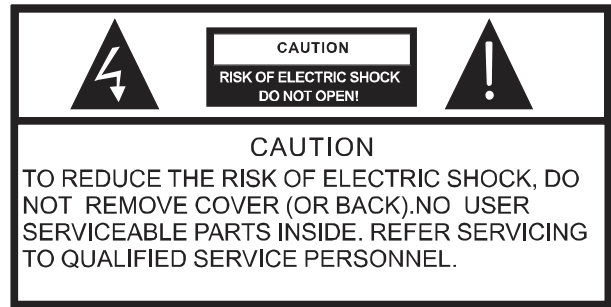

The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.



The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING:

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

 


This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.




This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


SAFETY AND WARNINGS

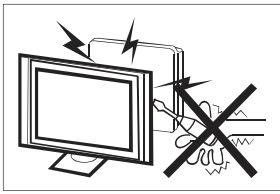

 
High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

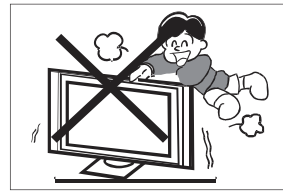

 
Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

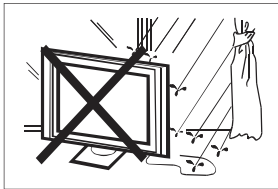

 
To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

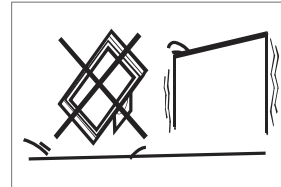

 
Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.

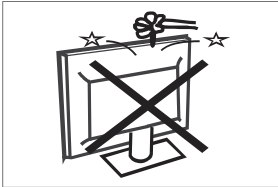

 
Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

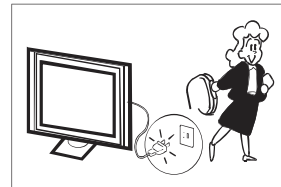

 
When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

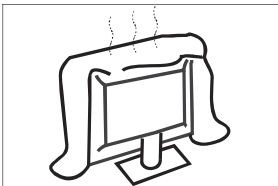

 
Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

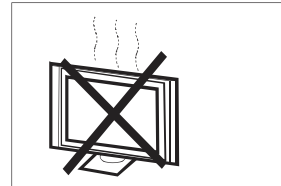

 Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

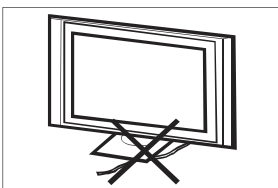

 Do not trap the power supply cord under the television receiver.

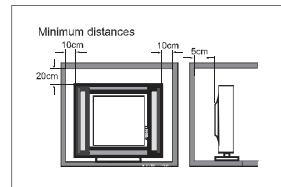

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.



If you are going to clean the product, Unplug the TV, use soft fabric, no water, never chemicals.

Note: the use of apparatus in moderate climates.

Main features

- ① Used as Television, display terminal, PC display;
- ② High luminance, wide viewing angle;
- ③ Can store 99 TV programs;
- ④ HDMI interface;
- ⑤ Multi-Media player (USB);

Accessories

Infrared Remote Controller
User's Manual


Main parameter

Viewing Picture Size (Diagonal)	32inch	43inch
Resolution	1036x768	1920x1080
Aspect Ratio	16 : 9	
TV System	PAL/DVB-T/T2 DVB-C	
Video Signal System	PAL, SECAM, NTSC	
Receiving Channel	ATV 48.25MHz-863.25MHz DTV VHF(50MHz-230MHz) UHF(474MHz-862MHz)	
Input Power Voltage	AC 100-240V 50/60Hz	
Power consumption	74W	
Audio Output Power (THD≤7%)	2 x 8W	
Signal input/output	RJ45 x 1 Analog RGB(VGA) x 1 PC AUDIO x 1 AV x 1 YCb (Pb)Cr (Pr) x 1 RFx 1 HEADPHONE OUTPUT x 1 High-Definition Multimedia Interface(HDMI) x 3 USB x 2 COAXIAL OUTPUT x 1	
Horizontal definition (TV line)	Composite Video input ≥ 350 YCb(Pb) Cr(Pr) ≥ 400	


HDMI

Stand Assemble Instruction

 - 1 Attach the stand base set to the bottom of the TV by firmly tightening the supplied 4pcs screws.

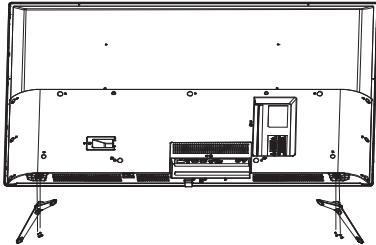

- 2 Finished.

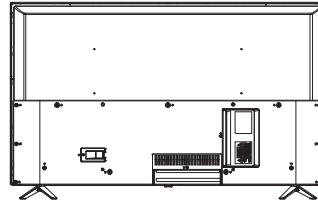 

INSTALLATION NOTES

Locate the TV in a room where light does not strike the screen directly. Total darkness or a reflection on the screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing. Allow enough space between the TV and the wall to permit ventilation.

Please do not attempt to rotate the TV on the stand.

Avoid excessively warm locations to prevent possible damage to the cabinet or premature component failure.

Wall Mounting Installation Guidelines

Use the four screws to fix the TV onto a wall mounting bracket (not included) via the four VESA standard holes on the back of the television.

Specification:

 
 
4 screws (not included) at size M6. The mounting holes are 5mm deep.

WARNING


Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

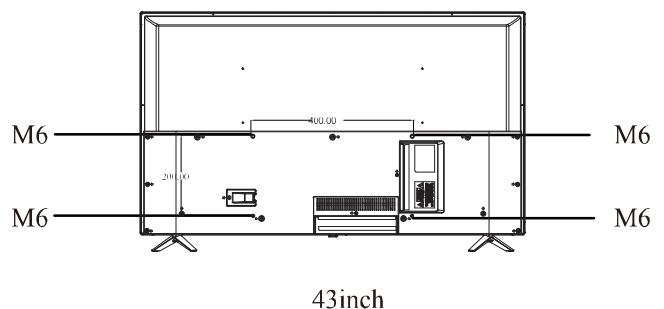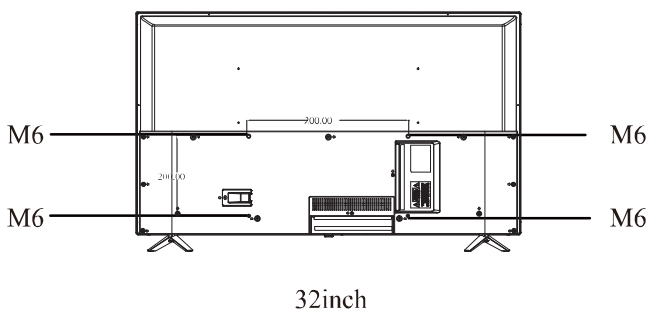

Front panel

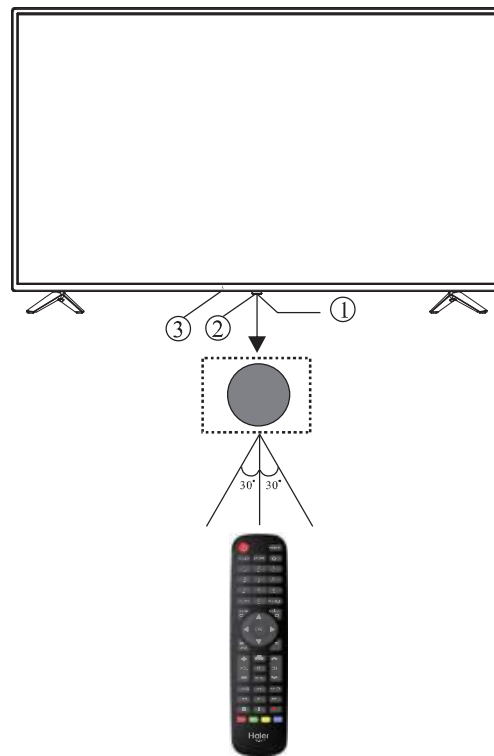 

1. Remote control sensor.
2. Indicator LED: BLUE ● STANDBY.
3. Key board

REAR AV Connections



All the terminals are (from left to right):

RJ45 , VGA, PC AUDIO, AUDIO INPUT, VIDEO INPUT, YPbPr INPUT, RF, HEADPHONE OUTPUT.

Note: VIDEO and YPbPr share one audio channel.

REAR AV Connections(SIDE)



 
All the terminals are (from left to right):

HDMI1, HDMI2, HDMI3, USB1, USB2, COAXIAL OUTPUT.

Note: Video and YPbPr share one audio channel.

When HDMI port get DVI signal ,the audio signal receives from the PC Audio channel.

ANTENNA

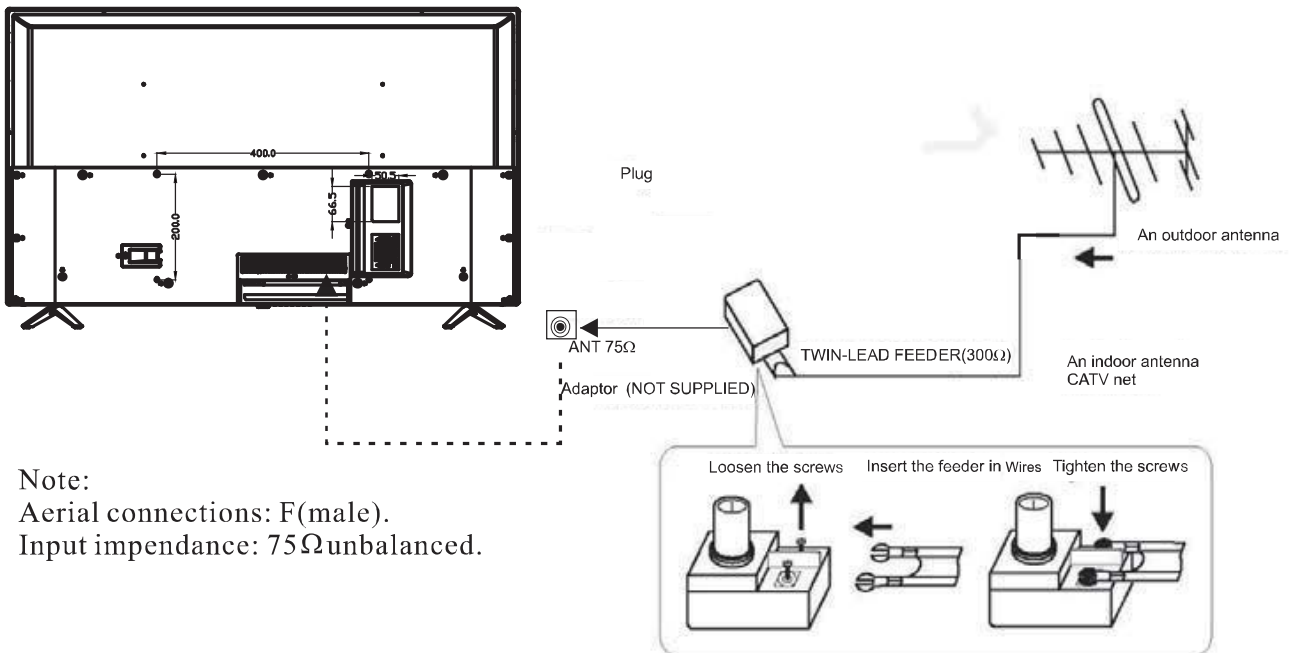

Note:
 Aerial connections: F(male).
 Input impedance: 75Ω unbalanced.

 
PC

 
STEPS:

Be sure both the TV and computer are set to Power off.

1. Connect VGA and audio cable.
2. Connect the power cord.
3. Power on the TV, switch to PC mode.
4. Power on the PC.

This sequence is very important.

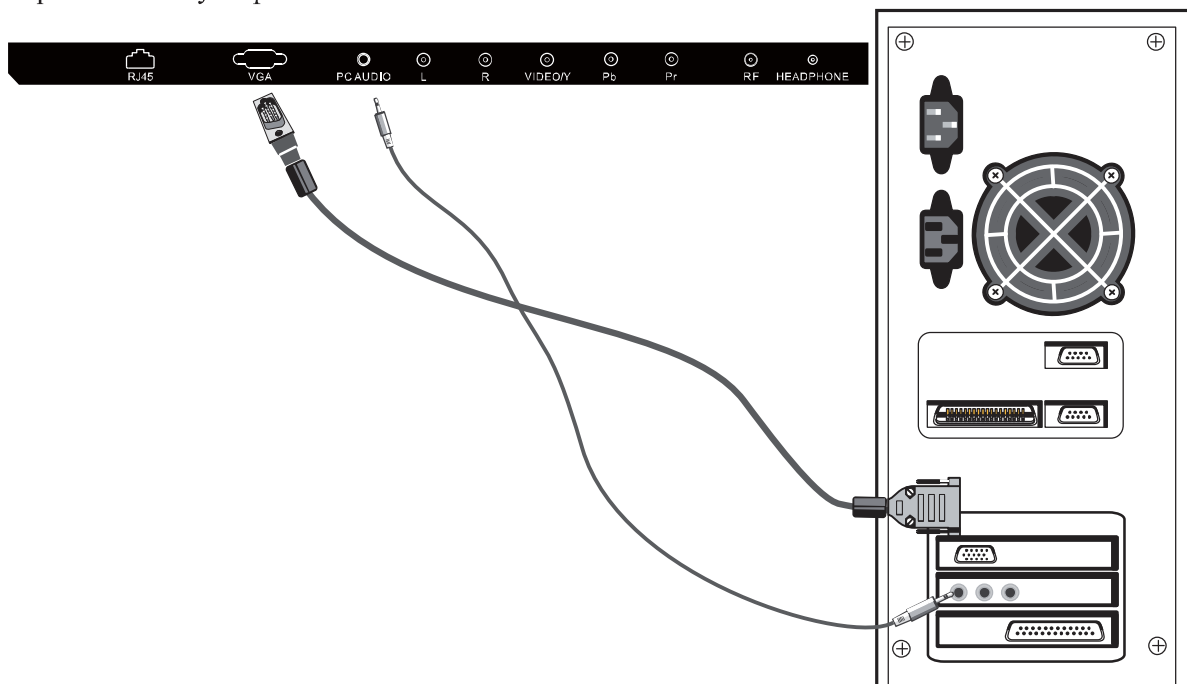

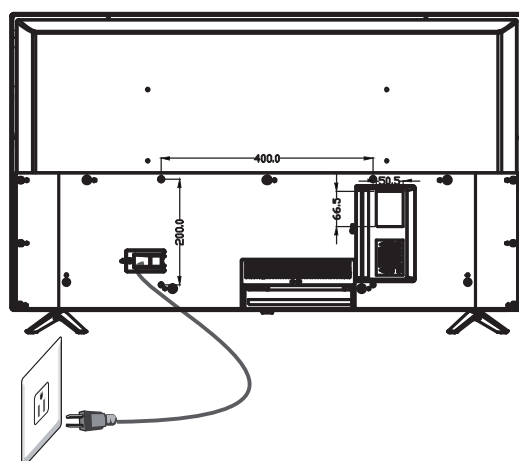

PRESET MODE (PC)

	RESOLUTION	V.Freq.(Hz)	H.Freq.(KHz)
1	800*600	60	37.88
2	1024*768	60	48.36
3	1360*768	60	47.7
4	1280*768	60	47.3
5	1920*1080	60	67.5

NOTE: PC V.Freq.(Hz) not more than 60Hz.


PRESET MODE (HDMI)

	Signal format	Freq (Hz)
1	480i/480P	60
2	576i/576P	50
3	720P	50/60
4	1080i/1080P	50/60

AV EQUIPMENT

This TV provides one group of AV ,one group of YPbPr for convenient connection to VCR, DVD or other video equipment. Please refer to the owner's manual of the equipment to be connected as well.

 You can use the input terminals on TV set rear as follows.

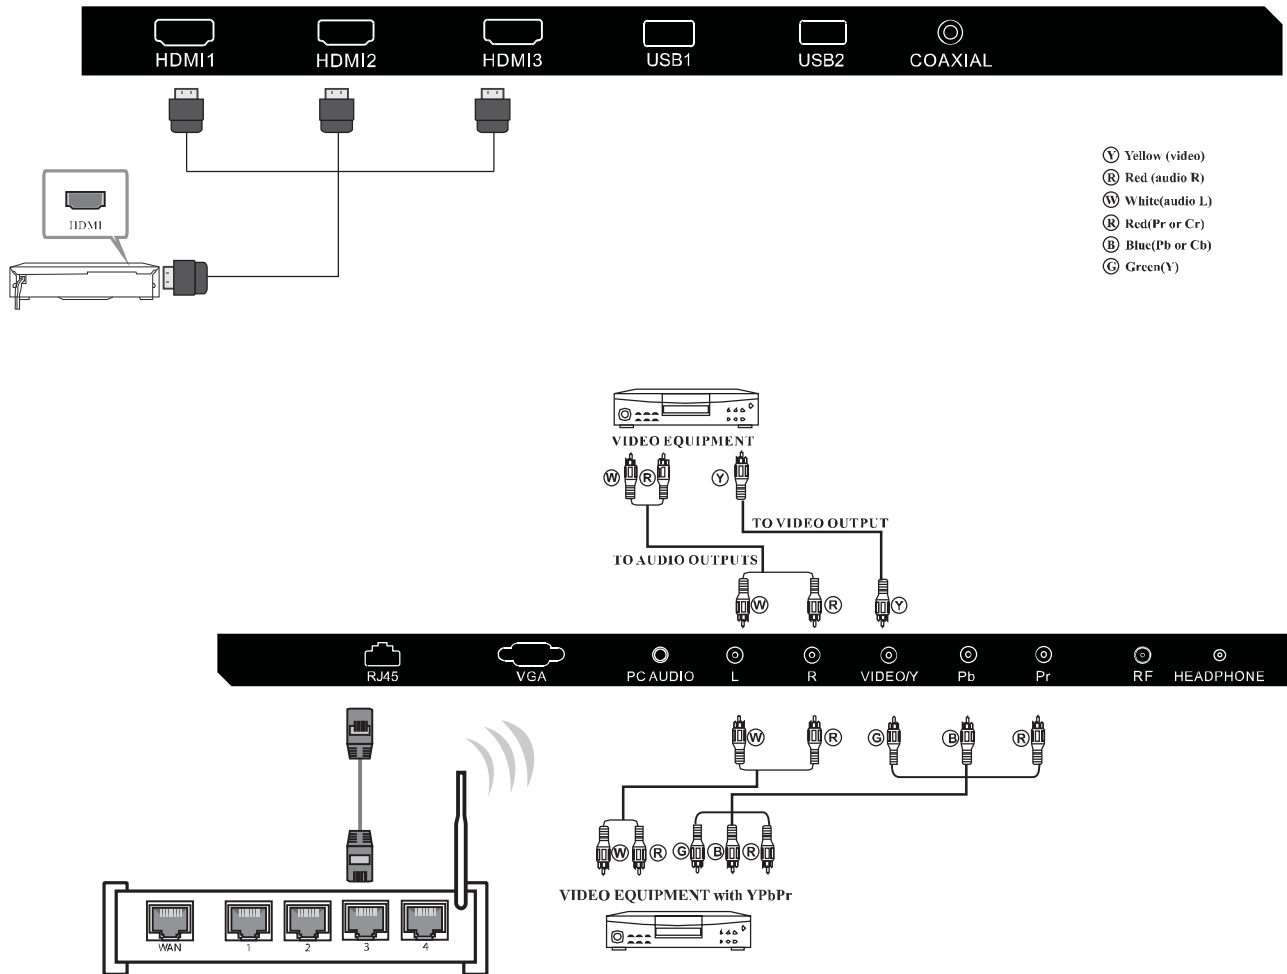


It can be connected to the following appliances: VCR, multi disc player, DVD, camcorder, video game or stereo system, etc.....

YPbPr can support these video formats:480i,576i,480p,576p,720p,1080i,1080P.

Note:

 
- 1.Video and YPbPr share one audio channel.
- 2.When HDMI port get DVI signal, the "PC Audio" channel is changed to receive the audio for HDMI port.
- 3.Sometimes it will not support in different device because the device supplies nonstandard signal.

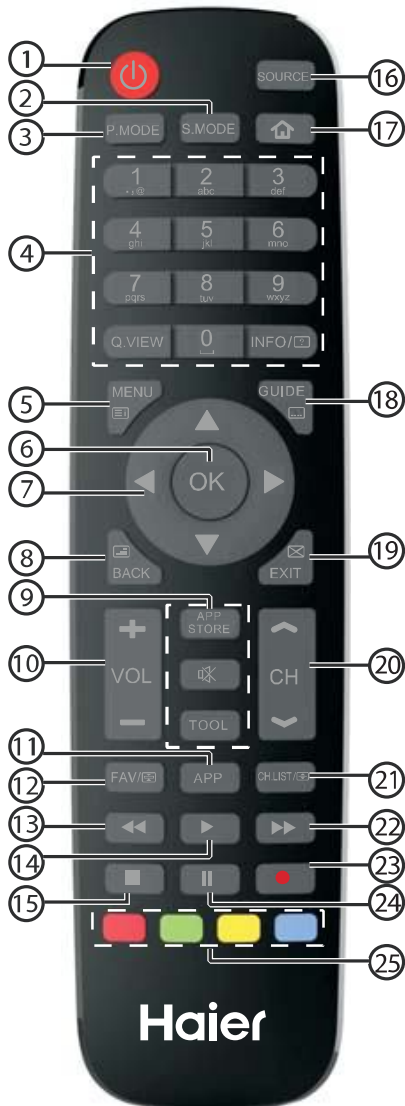

9	APP STORE	Press to open the application store.
	🔇 (Mute)	Press to turn the sound on or off.
	TOOL	Press to open the shortcut menu of tool.
10	VOL +/-	Press to adjust the volume level.
11	APP	Press to open Menu App Page.
12	FAV/📌	Press to open a favorite channel list. In teletext mode, press to hold a page.
13	⏮ (reverse)	Press to reverse playback in multimedia & Timeshift mode.
14	▶ (Play)	Press to play in multimedia mode & Timeshift mode.
15	■ (stop)	Press to stop multimedia playback, REC&Timeshift mode.
16	SOURCE	Press to open the input source list.
17	🏠	Press to open the Home Page.
18	GUIDE/📺	Press to display electronic programme guide in TV mode. Press to enter the teletext subpage.
19	EXIT/✉	Press to close the on-screen menu. In teletext mode, press to hide the text.
20	CH ↕	Press to change the channel.
21	CH.LIST/📺	Press to open the channel list. In teletext mode, press to switch the image to top, bottom or full.
22	▶▶ (forward)	Press to fast forward in multimedia & Timeshift mode.
23	● (REC)	Press to record the TV program you are watching in DTV mode.
24	⏸ (Pause)	Press to pause in multimedia mode & Timeshift mode.
25	Coloured buttons	Programme Edit: Delete, Rename, Move, Skip. EPG: Record, Info, Schedule, Reminder.

#	Button	Descriptions
1	⏻ (Power)	Press to turn the TV on or off.
2	S.MODE	Press to select the sound mode.
3	P.MODE	Press to select the picture mode.
4	0-9	Press to enter a channel number or password.
	Q.VIEW	Press to switch to the last viewed channel.
	INFO/📺	Press to display the channel information. In teletext mode, press to reveal the hidden information.
5	MENU/📺	Press to open the on-screen menu. In teletext mode, press to open the INDEX page.
6	OK	Press to confirm a selection.
7	▲▼◀▶	Press to navigate the on-screen menu.
8	BACK/📺	Press to return to the previous screen. In teletext mode, press to enter mix mode.

 Insert Batteries into the Remote Control

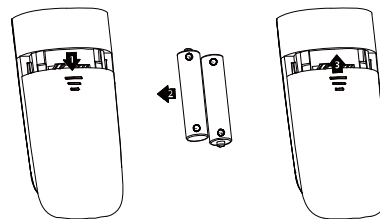

1. Remove the battery cover.
2. Inserting the 2 AAA 1.5V batteries making sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.
3. Mount the battery cover. Replace with new batteries when the TV set begins to show the following symptoms: Operation is unsteady or erratic. Sometimes the TV set does not function with Remote Control Unit.

Remark:

- 1) Alkaline Battery Recommended.
- 2) Remove batteries when they are exhausted or if the remote control is not to be used for long time.

FTI

 
Connect an RF cable from the TV's input called "RF-In" and to your TV Aerial socket.
Press OK button to select the Start the setup.



Press [▼] / [▲] button to select the language. Press OK button to sure, and press [▶] button to select country.




Press [▼] / [▲] button to select the time. Press OK button to sure, and press [▶] button to select country.

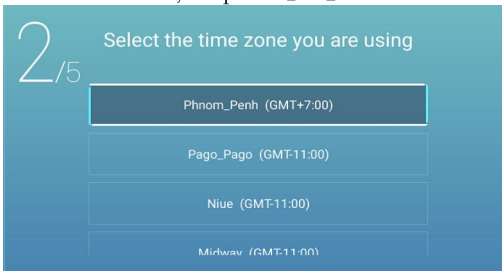

Press OK button to connect the WIFI.
Press [▶] button to select the input source.



 
Scan the QC code to cast the TV screen to your mobile phone.
Press [▶] button to select the input source.

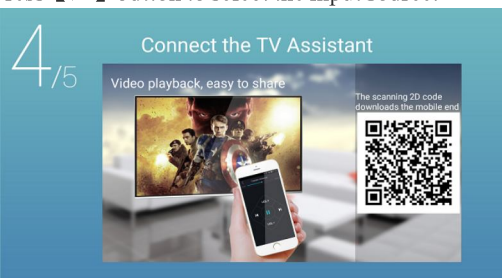

Press [▼] / [▲] button to select the input source.



 INPUT SOURCE

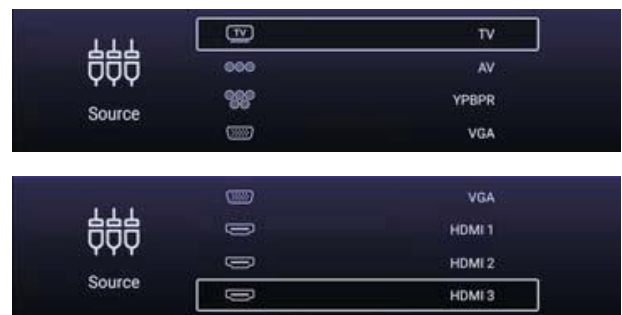

Press INPUT button to enter Input Source menu.
Press [▼] / [▲] button to select.
Press OK to select source.

MAIN MENU

HOME

Press [▼] / [▲] button to select HOME menu.
Press [▼] / [▲] button to select.
Press [◀] / [▶] button to to select recommend video to play.



APPS/FAVORITE APPS

Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to to select APPS ,and install app.



Press **【▼】 / 【▲】 / 【◀】 / 【▶】** to select App list.



Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to to select Settings.

 


Press **【◀】 / 【▶】** button to to set Network Setting/Time Setins/Common/Product Information.



Network Setting


Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to to select Network Setting.

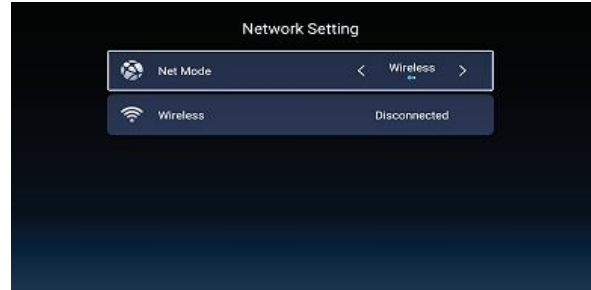

Press **【◀】 / 【▶】** button to to select Net Mode: Wireless/Wire Network.

Wireless

 Press OK button to enter the Wireless to connect the wifi.

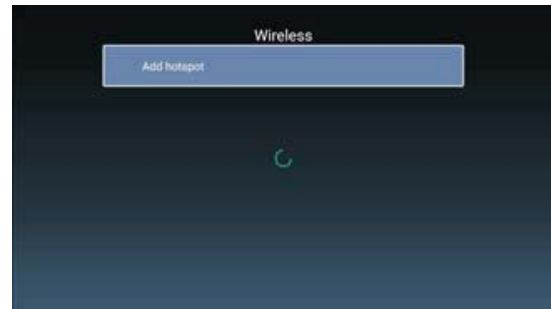

Time Setting

Press **【◀】 / 【▶】** button to to select Time Setting.



 
Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to to select set the time function.



- Auto Attach** Set the time automatically/manually.
- Time Edit** Edit the time manually.
- Date Format** Select the date format:Day/Month/Year or Year/Month/ Day
- Time Zone** Selectt your time zone.
- 24Hours** Select ON/OFF.

Common

Press **【◀】 / 【▶】** button to to select Common.

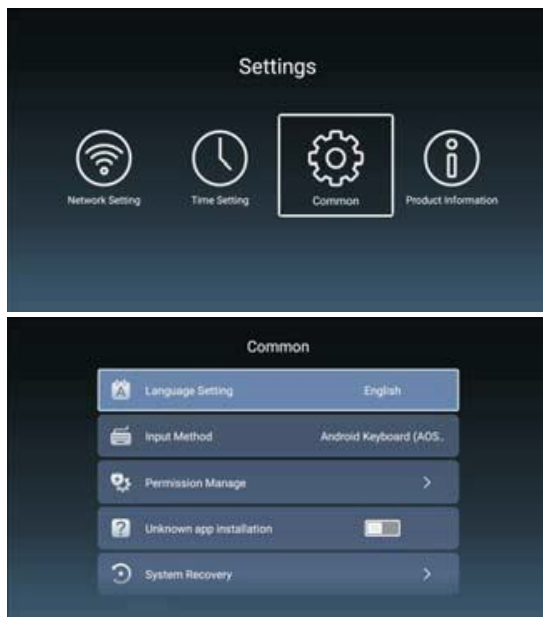

- Language** Select the language.
- Input Method** View the information of input method.
- Permission Manage** View the permission manage.
- Unknown app installation** Allow install illegal app.
- System Recovery** Recover the TV system.

Product Information

Press **【◀】 / 【▶】** button to to select Product Information.



Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to to view the information about TV.

 
 


 
PICTURE

Press **【◀】 / 【▶】** button to select picture . Press **OK** to enter setting.



1. Press **【▼】 / 【▲】** to select: Picture Mode/Contrast/Brightness/Color/Sharpness/Backlight/Noise Reduction/Color Temp/More Setting.
2. Press **【◀】 / 【▶】** to adjust or select.

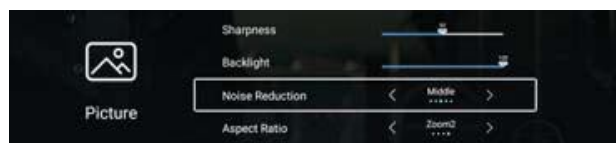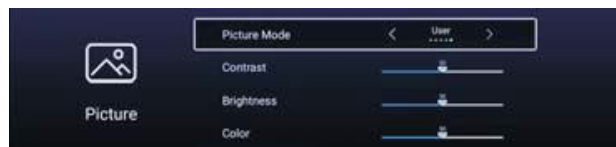

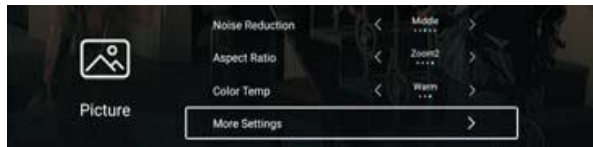

Picture Mode

Press **【▼】 / 【▲】** button to select Picture Mode, then press **【◀】 / 【▶】** button to select. (Optional: Standard, Movie, Vivid, Energy Saving, User).

- Standard** The default mode, to make users experience high-quality images under normal light.
- Mild** This mode is more comfortable for eyes.
- Vivid** Image colors more beautiful, more vivid picture.
- Energy Saving** Reduce screen brightness, improved contrast for energy saving.
- User** User-defined picture settings.

Contrast/Brightness/Colour/Sharpness/Hue/Backlight

Press **【▼】 / 【▲】** to select, and press **【◀】 / 【▶】** to adjust.

- Contrast** Adjust image contrast.
- Brightness** Adjust image brightness.
- Color** Adjust image color density.
- Sharpness** Adjust the image edge sharpness.
- Backlight** Adjust the screen backlight brightness.

Noise Reduction

Setting the option to eliminate image noise intensity. Press **【▼】 / 【▲】** to select Noise Reduction, and press **【◀】 / 【▶】** to select. (Optional: Off, Low, Meddle, High, Auto).

Aspect Ratio

Setting the picture size. Press **【▼】 / 【▲】** to select Aspect Ratio, and press **【◀】 / 【▶】** to select. (Optional: 16:9, 4:3, Zoom1, Zoom2).

 
Color Temp

Adjust the overall color of the image. Press **【▼】 / 【▲】** to select Colour Temperature, press **【◀】 / 【▶】** to select. (Optional: Cool, Normal, Warm).

- Cool** Produces a gentle blue-hued image.
- Normal** Produces a vivid image.
- Warm** Produces a red-hued image.

More Setting

Press **【▼】 / 【▲】** to select More Setting

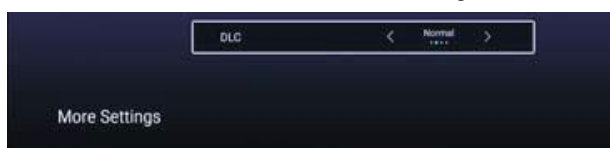

DLC

Press **【▼】 / 【▲】** to select DLC, press **【◀】 / 【▶】** to select Dark/Normal/Bright/Off.

 
Sound

Press **MENU** button to display the main menu. Press **【◀】 / 【▶】** button to select **SOUND** in the main menu,



Press **【▼】 / 【▲】** to select: Sound Mode/Bass/Treble/Balance/AVC/More settings.

Press **OK / 【◀】 / 【▶】** to select or adjust.

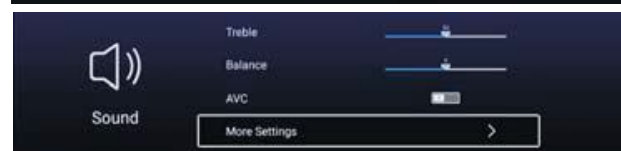

Sound Mode

Press **【▼】 / 【▲】** button to select Sound Mode, then press **【◀】 / 【▶】** button to select. (Optional: Standard, Music, Theater, News, User).

 
- Standard** Produces a balanced sound in all environments.
- Music** Preserves the original sound. Good for musical programs.
- Theater** Enhances treble and bass for a rich sound experience.
- News** Enhanced voice.
- User** Select to customize picture settings.
- Bass** Adjust the bass.
- Treble** Adjust the treble.
- Balance** Adjust the left and right channel output balance. Press **【▼】 / 【▲】** button to select Balance, then press **【◀】 / 【▶】** button to adjust.

AVC

Press **【▼】 / 【▲】** button to select AVC, then press **【◀】 / 【▶】** button to choose ON/OFF.

After opening the AVC, Once the volume is set, regardless of any difference TV Version printed on each channel, it can make the speaker volume remained stable.

More Settings

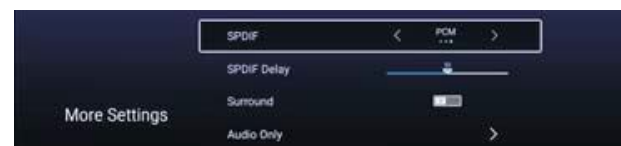

SPDIF

Press **▼** / **▲** button to select SPDIF, then press **◀** / **▶** button to choose OFF/RAW/PCM.

SPDIF Delay

Press **▼** / **▲** button to select SPDIF Delay, then press **◀** / **▶** button to adjust.

Surround

 
Achieve better surround sound effect.

Press **▼** / **▲** button to select Surround, then press **◀** / **▶** button to choose ON/OFF.

Audio Only

After the opening screen is not displayed only plays sound

Press **▼** / **▲** button to select Audio Only, then press **◀** / **▶** button to choose ON/OFF.

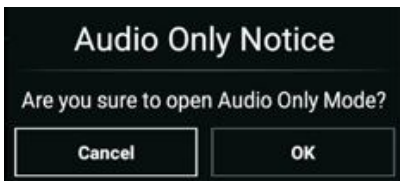

Channel

Press MENU button to display the main menu. Press **◀** / **▶** button to select CHANNEL in the main menu.

Press **▼** / **▲** button to select. Press **OK** / **◀** / **▶** to enter.

 
 
 


Country

Select the country.


Antenna Type-Air

Select the Air/Cable to tune.

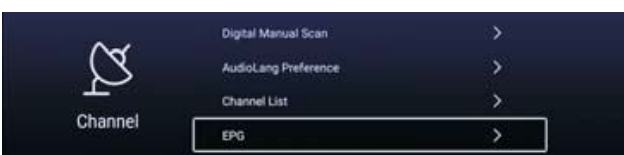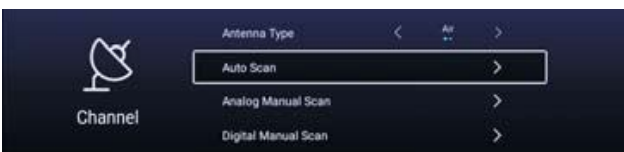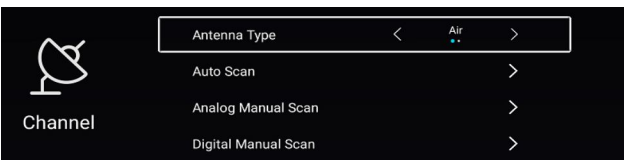


Auto Scan

 Press **▼** / **▲** button to select Auto Scan, press **OK** to start searching the program automatically.

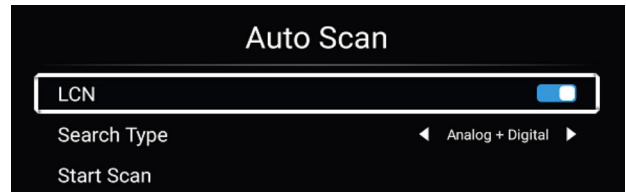

Analog Manual Scan

 Press **▼** / **▲** button to select Analog Manual Scan, press **OK** to start Scan.

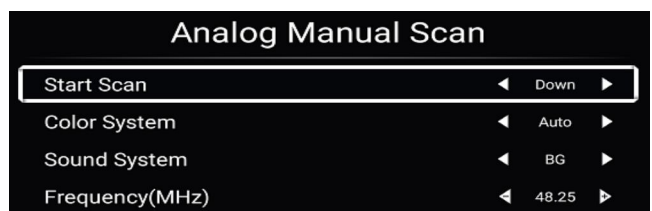


Digital Manual Scan

Press **▼** / **▲** button to select Digital Manual Scan, press **OK** to start Scan.




Channel List

 Press **▼** / **▲** button to select Channel List to list, press **MENU** button edit the channel (Skip /Delete /Fav).

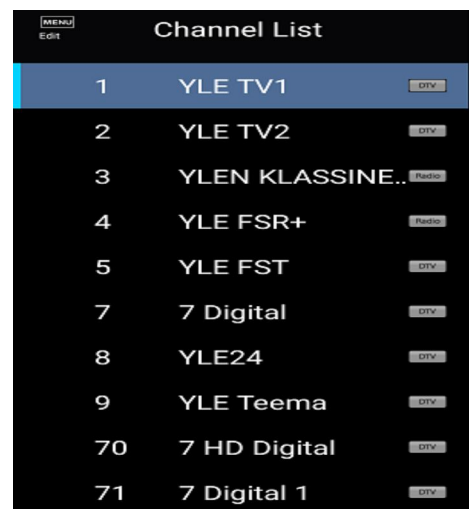

EPG

 
Press **▼** / **▲** button to select EPG.

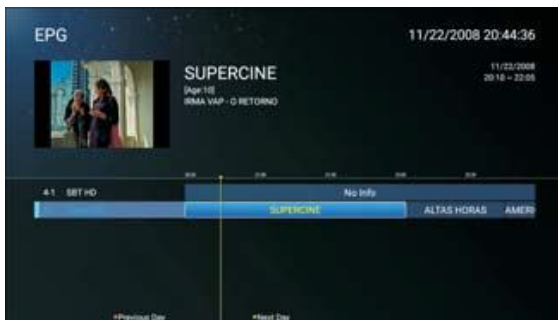

- Press Red button to view the previous day EPG information.
- Press Yellow button to view the next day EPG information.

Antenna Type-Cable

 Select the Air/Cable to tune.

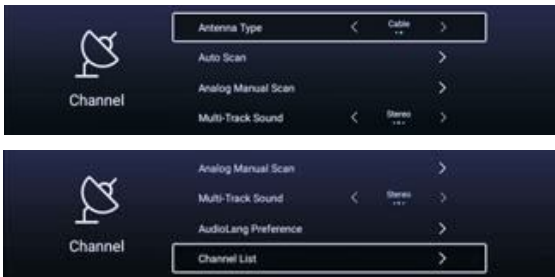

Auto Scan

Press **▼** / **▲** button to select Auto Scan, press OK to start searching the program automatically.

Analog Manual Scan

Press **▼** / **▲** button to select Analog Manual Scan, press OK to start Scan.

Digital Manual Scan

Press **▼** / **▲** button to select Digital Manual Scan, press OK to start Scan.

Channel List

 
Press **▼** / **▲** button to select Channel List to list the program, and press MENU button edit the channel (Skip/Delete/Fav).

EPG

Press **▼** / **▲** button to select EPG.

System Lock

Press MENU button to display the main menu. Press **◀** / **▶** button to select System Lock.

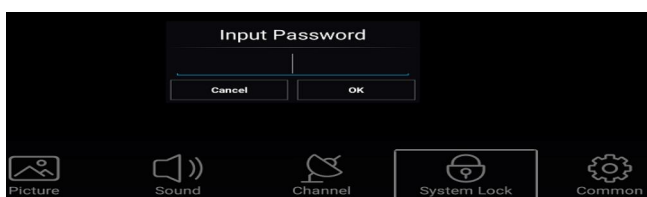

Press **▼** / **▲** button to select Change Password/System Lock. Press OK/ **◀** / **▶** to enter.



Change Password

Press **▼** / **▲** button to select Change Password.



Parental Control

Press **▼** / **▲** button to select Parental Control to select the age of the children. (This function is available, when you set the System Lock on.)(Available choice:OFF/ 10/ 12/ 14/ 16/ 18)

 


Common

Press MENU button to display the main menu. Press **◀** / **▶** button to select common in the main menu.




Press **▼** / **▲** button to select: OSD Timer/Sleep Timer/Blue Screen/Menu Reset ect. Press OK/ **◀** / **▶** to enter.

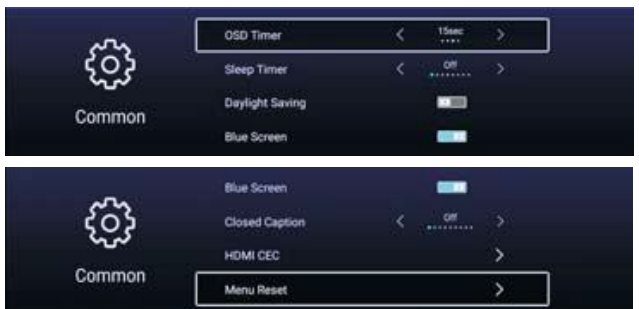

PVR File System

 PVR function only works in DTV. In Setting MENU, please select PVR File System, select PVR USB Selector and select Your Disk, you can press blue button into PVR .

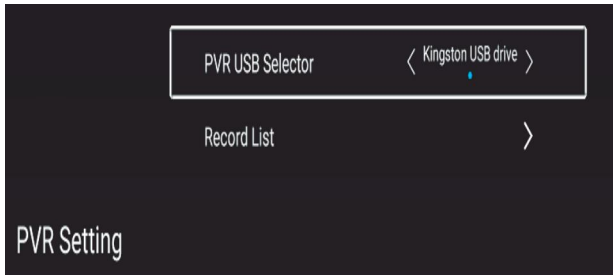

HDMI CEC

Press **▼** / **▲** button to select HDMI CEC.



HDMI CEC Switch

Press **▼** / **▲** button to select ON/OFF.

TV Auto Power On

Press **▼** / **▲** button to select ON/OFF.

Device Auto Power Off

Press **▼** / **▲** button to select ON/OFF.

HDMI ARC

Press **▼** / **▲** button to select ON/OFF.

Media

Press **▼** / **▲** / **◀** / **▶** button to select Media in HOME page.



Video

Press **◀** / **▶** to select video.



Press to play previous movie.



Press to play fast backward.



Press to stop/play the movie.



Press to play fast forward.



Press to play next movie.



Press to view the information of the movie. (Resolution/Size/Duration/Bitrate)



Press to set the Audio Track/Select Subtitle/Region Language/Play Mode/Aspect Ratio.









Press to select the movie to play.

Music

Press ◀ / ▶ to select music.









-  Press to play fast backward.
-  Press to stop/play the music.
-  Press to play fast forward.
-  Press to view the information of the music. (Mine Type/Size/Bitrate)
-  Press to set the Play Mode(Repeat All/Repeat One/Random/None).
-  Press to select the music to play.

Photo

Press ◀ / ▶ to select photo.



-  Press to rotate anticlockwise the picture.
-  Press to stop/play the picture.
-  Press to rotate clockwise the picture.
-  Press to view the information of the picture. (Size/Resolution)
-  Press to set the Play Mode(Aspect Ratio/ Playback duration).
-  Press to select the photo to play.

Install the APP

Press the HOME button and enter APPList , select the Eshare Server.



Scan the QR code to install the EshareServer to your device .



Phone

Open the the Eshare ,and Connect.(Make sure your device is connected to the same network with TV.)

Optional function: Remote Control/TV Mirror/Mirroring.

Android

Iphone



Remote Control

Keys

The mobile phone works as the traditional remoter, included Home, Menu, Back, Vol+/-...etc.

Touch

The mobile phone works as the touchpad. You can make your TV page slide as you slide finger on the phone.

And click the phone screen to enter the menu you select.



Mouse

The mobile phone work as the mouse. You can silde your finger on the phone screen to the menu on one TV page, and click the phone screen to enter the menu you select.

(NOTE:The TV page would not slide following your finger sliding.)

AirMouse

The small arrow icon following the move of your phone. Move your phone to the menu on one TV page, and click the the phone screen to enter.

NOTE:The Phonetic function is not available on this model.

Wireless Display



 
Press ◀ / ▶ to Wireless Display Press OK to select source.

Then you will see the My Device Name.


My Device Name:Android_3940

Waiting for Wireless Display connection...

After the Device Name ready, you can use your phone to connect.

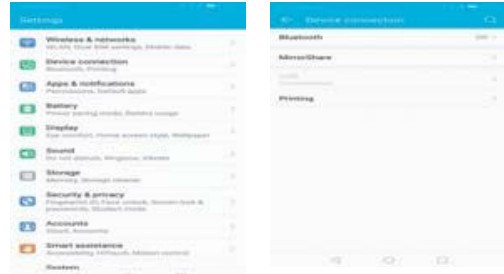

 After connect success, The phone screen will be cast on the TV.

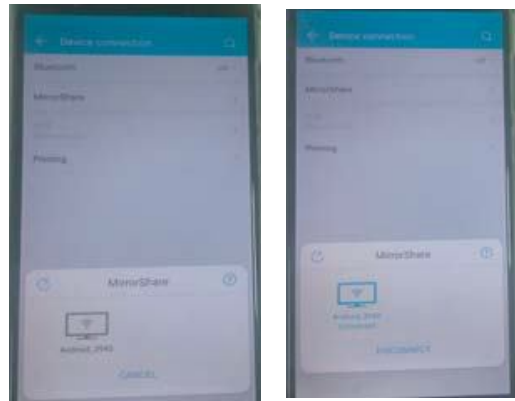

AirPlay

Select the Airplay App and Press the OK buttons to open the AirPlay Server.



 
AirPlay user guide for ios

1. Install EShare to iOS device

Open App Store on the iPhone or iPad, search “EShare”, and install EShare for iPhone/iPad.

2. Connect to Large Display

Upon completion of installation, launch "EShare" in your phone, and it will automatically search large display devices in the same network. In the device list, click on the name of the device you want to connect to. You can also click "Scan QR Code" and scan the QR code displayed on the large display to connect.

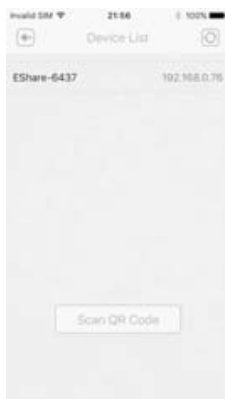

3. Local File Sharing

Click on any file (including video, picture, office document, PDF, e-book, and so on) in your phone or pad, it will be played or showed on your large display.



4. Mirroring

Click on the “Mirroring” button in EShare, the screen will be mirrored to your large display. (You can also use airplay to share screen)

 


5. TV mirroring

With "TV Mirror" feature, you can mirror the screen of the large display to android device and touch directly to control it, just like you are touching on your large display. Click the button on the right side to open the tool bar, as shown in the following diagram.


6. Remote Control

You can use your phone as a touch mouse, air mouse, keyboard, touch pad and remote controller of the large display.

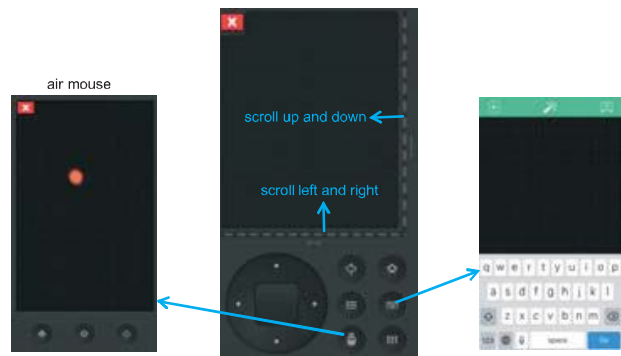

7. Share files to the large display from other Apps

 In other applications, you can share files via EShare to large display.

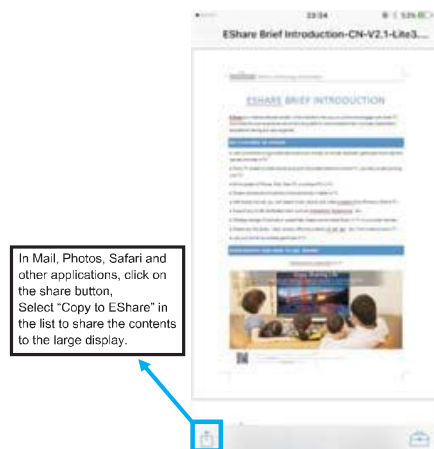

You can also share files to the large display via other client apps which support DLNA.

Mobile mirroring compatible as per the refer table & types of phone.

Smart Share	Android Mobile	I Phone	Picture & Sound support while mobile mirroring	While mirroring Only picture support on TV ,sound through mobile only
WifiDisplay	✓	X	✓	X
Eshare	✓	X	X	✓
Airplay	X	✓	✓	X

APP STORE

1.Start up

In the app lists to find out the below app store icon, click it to open Haier application store.



Each time the boot will automatically detect whether the device network is connected or not.

Each time the start will automatically detect whether the store have authorized or not.

 
If authorized, will directly lead to app store home page.

Each time startup will automatically detects whether the client version is updated or not;

If detected update, will pop up upgrade notice for users or directly into the app store home page.

2.Top

APP store Homepage will present following contents as shown in Figure 2.1.

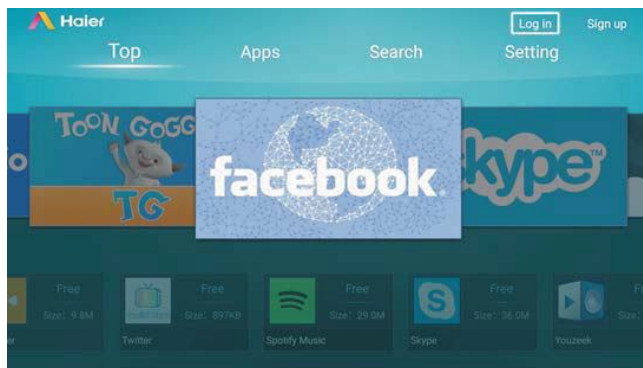

(2.1)

The Screen upper left corner is Haier logo;

 
The top right is login and registration, if need purchase, please login. Store navigation bar present columns as Top, Apps, Search and Setting, you can switch remote control to each columns and focus on cursor to present column information.

In the middle are present of five recommendation apps, you can move around the remote control to choose and select app to click into app detail page.

The screen bottom are 30 recommendation apps, through remote control to select choose aimed app to click and enter into detail page.

3.Apps

Put remote controller cursor on apps columns and click confirm to enter into lists to check categories as "Video, Life, Education, Tool, Game".

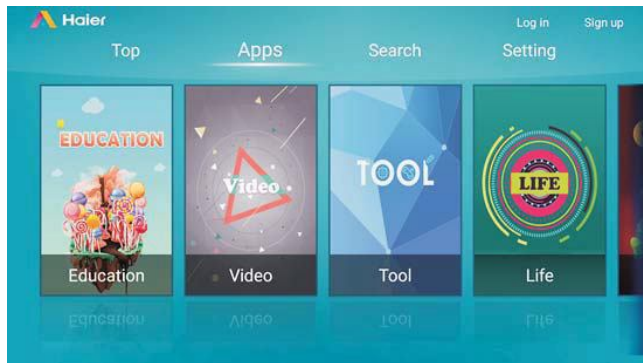

Check each category app list

Use remote control to put cursor in one item and click confirm to enter into lists of apps in one category, it will present app icon, application name, application size, free app, paid app as following screenshot:



4.Free app detail page

Use remote controller to select an app icon and press OK button to enter into details page, as shown in Figure 3.1:



(3.1)

The right page shows app screenshot , press the up and down arrow keys move to review;

The left area shows the application name, version, application size, download, application description, control and language:

 
Action button:

Download: When the application was not downloaded, the button will display as "Download", user can click the button to download app;

If "Pause" is selected, the current download progress is tentative.


Click "Continue" to continue download.

If you select "Delete", will cancel the current download process and delete downloaded file, if need continue should restart.

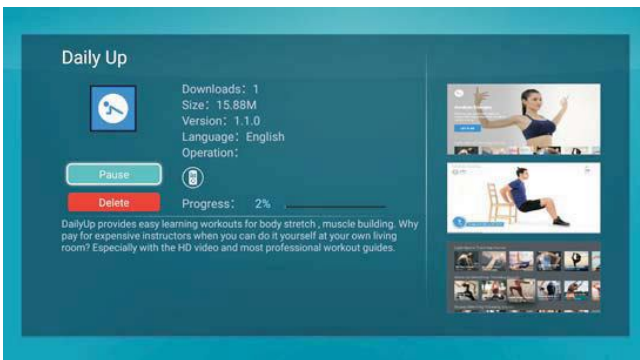

(3.2)

 
Install: When the download is complete, the operation button becomes "Installing", the system is being installed by default, as shown in Figure 3.3;

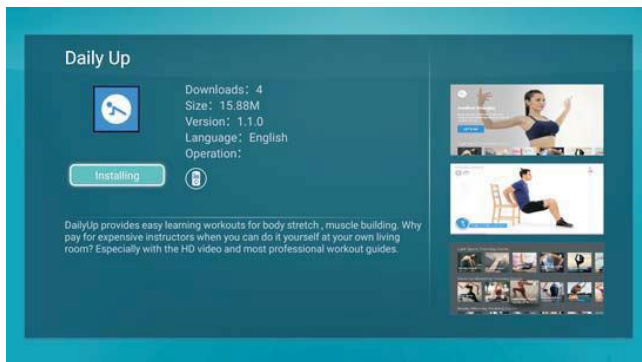

(3.3)


Open: After the installation completed, the button becomes "Open" and "Uninstall", and the user can click "Open" to start the application directly as shown in Figure 3.4.

 If the application has an update, the update button is also displayed, see the "Installation" procedure.

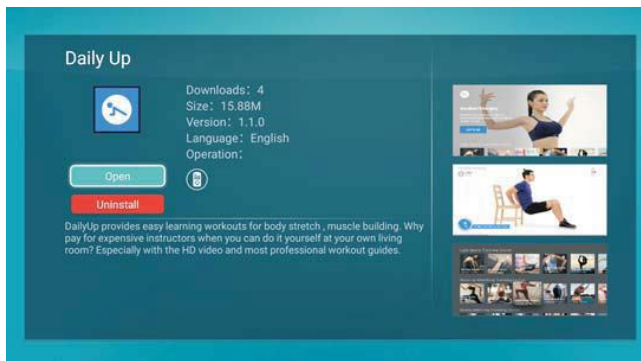

(3.4)

 
Uninstall:If you need to uninstall the application, you can click the "Uninstall"button and will popup "Do you want to Uninstall this app?", Click OK will load of app successfully as shown in Figure 3.5;

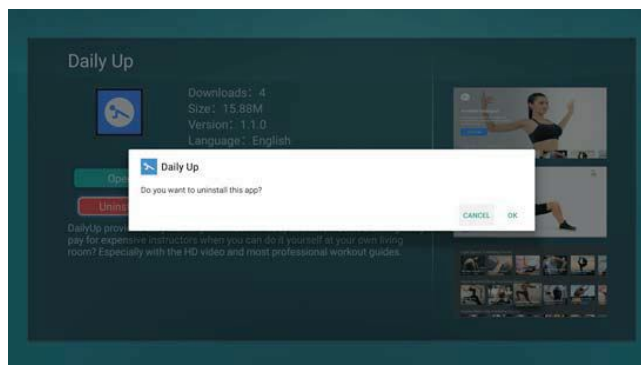

(3.5)

5.Buy application

 Use the remote control to select an application icon Press the OK key to enter the appropriate application details.

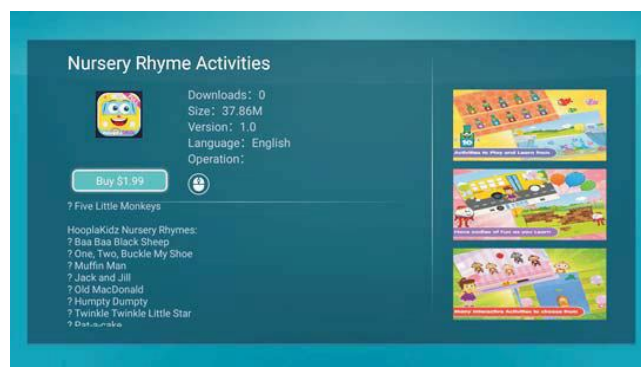


The right page shows the screenshot of the application, press the up and down arrow keys to move to review;The left area shows the application name, version, application size, download, application description, control, language;

Action button:**Buy: Click Buy**


If logged in, the page will pop up payment interface as shown below:

 If not login, when click buy will lead to login account and then to purchase.

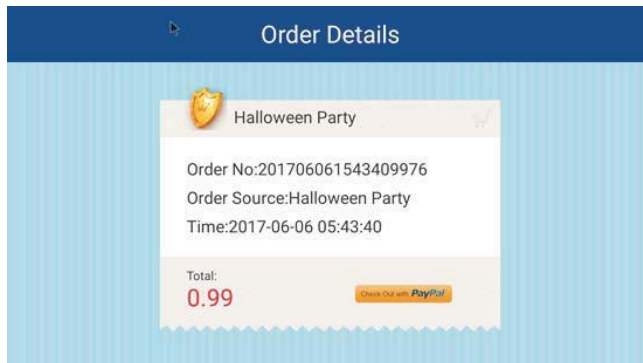


Use remote controller to click "Check Out with Paypal" will pop up Paypal payment plug-in as in the following screenshot:

 
There are two methods for paying, with payapal and bank card.

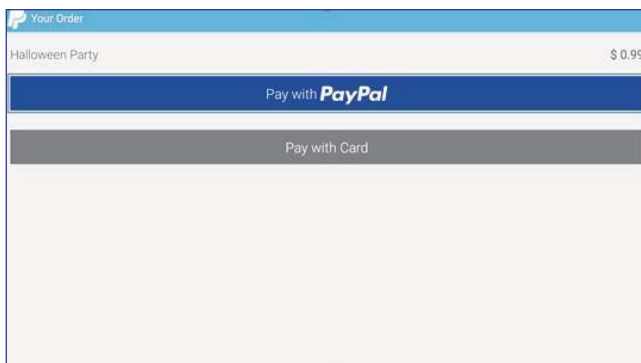


Use the remote controller to select paypal payment, when click OK will pop-up need to login paypal account interface as shown in below:

  Put in user account and password to login to finish payment, the application will starts to download, when download, please install and open app.

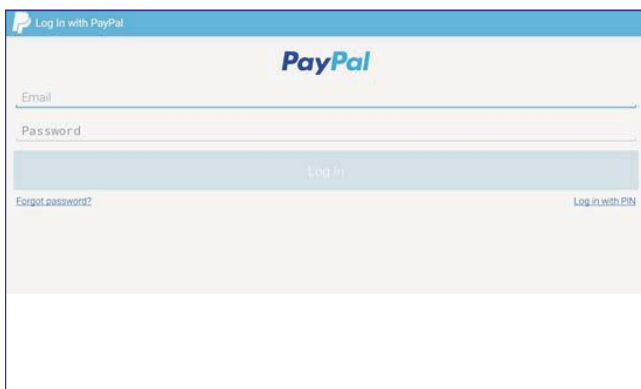

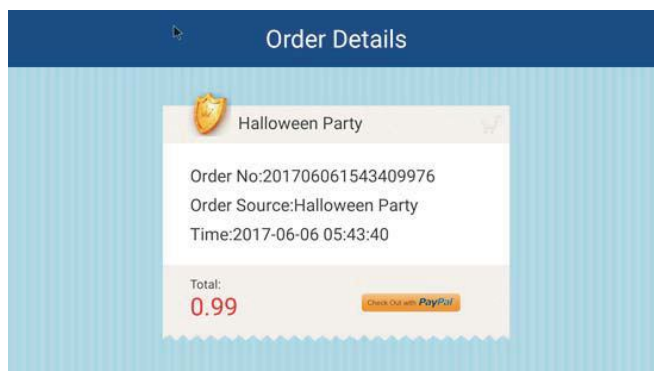

 Use the remote control to select pay with card, then click OK will pop up another interface, you need to enter card number, expires and cvv data information as shown below:
Enter info and then click done to next page to finish payment process, after that to process download, install and open app.

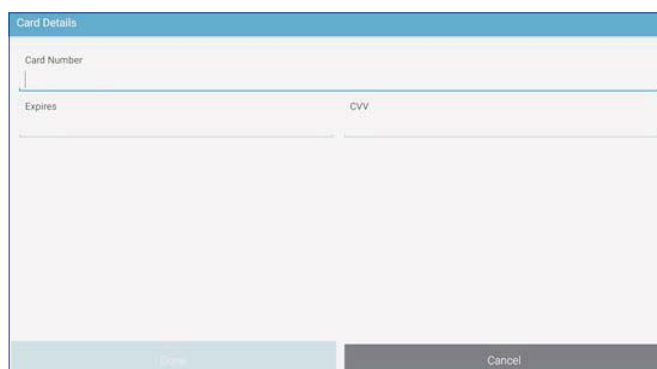


6.Search

Use the remote controller to move the cursor to Search interface, enter keyword in search bar, will result in list keyword-related apps and display recommend contents.




7.Setting

 Use the remote controller to focus on Setting button will show app store settings interface, you can check Account, Download Management, Update and Uninstall as screenshot:

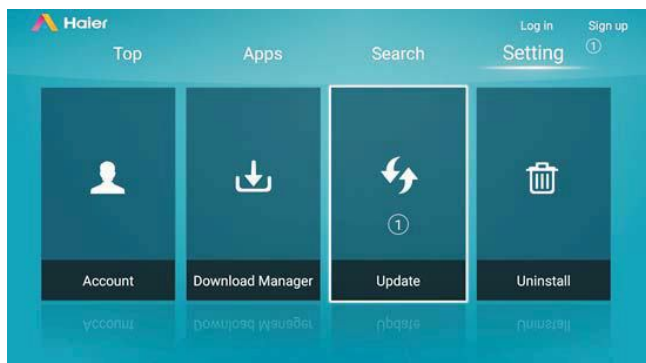


Account:Use the remote controller to select Account and click OK will lead to account interface, you can set Nickname, Date of birth and Country.

 Click "log out" will pop up "click on the current account?", please Click OK to exit.Click "Change password" with the remote control to change login password.

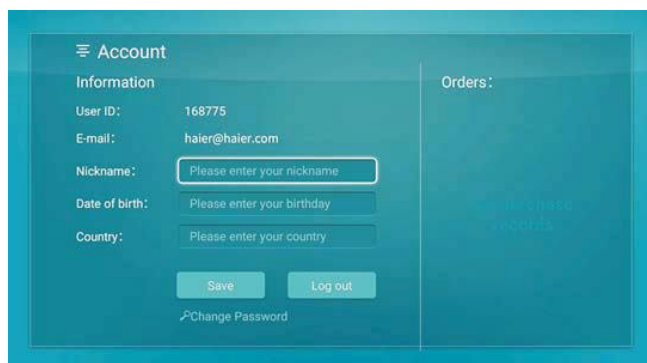

 Download Manager:Use the remote controller to select Download Manager and click OK, enter into the Download Manager page to check the app was downloaded or process downloading to finish installation;

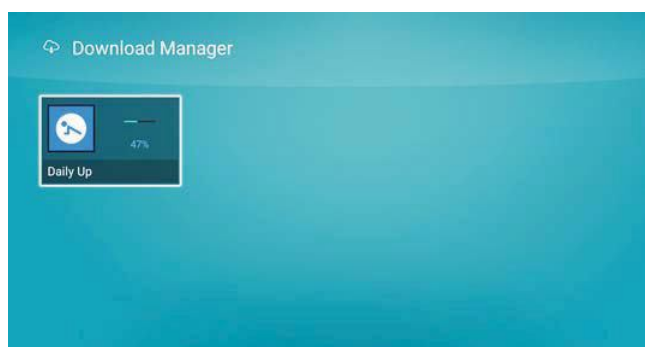

Update:

When navigation bar Setting shows number, it proves how many of local application should be updated.

If shows number 1, it means only 1 app need update.

Use remote controller to choose Update, click OK and enter into next interface to select the app need to be updated, click OK will pop up another interface, click Update, it will update and present progress bar in the main interface, Installation, will replace the local installation of the application.

Click on the remote control to update the application, will pop up another interface, if you do not want to update, click the remote control back button, you can directly return.



Uninstall:

In the uninstall screen will present all device apps, please using cursor on aimed apps and system will popup “Do you want to Uninstall this app?”, then choose “OK” button for app off-loading.



8.Sign Up, Login

Sign Up

Enter user mail address, password to register and click OK, will notice to active in mail.


Password requires 6-20 characters;



Log In


If you have registered account, you can directly enter into mail and password to login. Password requires 6-20 characters;

 If you had forgotten password, you need to click "Forget your password?" and put in mailbox to get info for reactive.

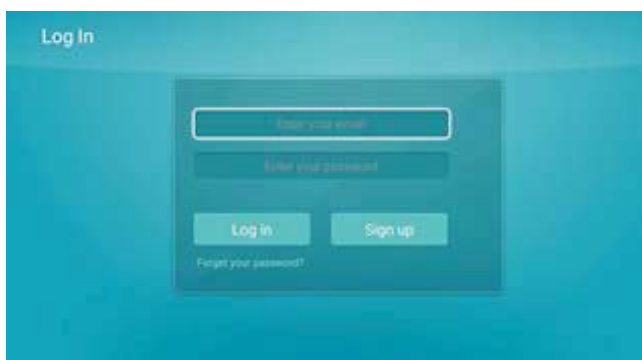

 9.Quit



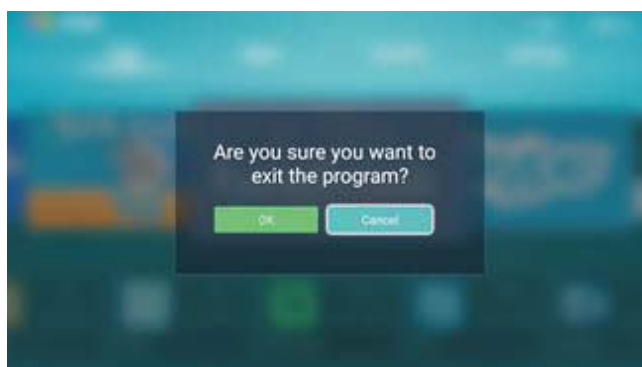








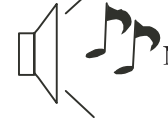 
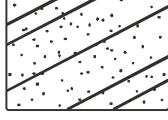 
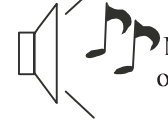 

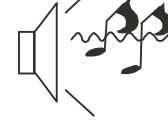 
Click return button will pop-up "Are you sure you want to exit the program?", please click ok button to exit.



Read Before Using Apps

(*Terms & Conditions apply)

- Due to the product characteristics featured on the Apps store, as well as limitations in available content, certain featured applications, and services may not be available on all devices or in all territories. Some Apps featured may also require additional peripheral device or membership fees. Services and content availability are subject to change without prior notice.
- Manufacture takes no legal responsibility whatsoever for any interruption of App services caused by the service provider for any reason.
- An unstable Internet connection may cause delays or interruptions. In addition, applications may terminate automatically depending on the network environment.
- Applications services and updates may become unavailable.
- Application content is subject to change by the services provider without prior notice.
- Specific services may differ with the version of the application installed on the TV.
- An application's functionality may change in future version of the application.
- Depending on the third party service provider's policies, certain applications may not support multitasking.
- The response to remote commands and the resulting on-screen display may be delayed while a webpage is loading.
- The copy and paste operations are not supported.
- The web browsing speed will differ with the network environment.
- Depending on the types of video/audio codecs supported, it might not be possible to play certain video and audio files while playing content.
- Apps store have certain limitation, it consist many inbuilt apps for various needs of user but user doesn't have facility to add other apps from any other media.

Trouble phenomenon		Inspection
Picture	Audio	
 Snow	 Noise	antenna position, direction or connection
 Ghost	 Normal audio	antenna position, direction or connection
 Interfere	 Noise	electronic equipment, car/ motorcycle, fluorescent light
 Normal Picture	 Mute	Volume (inspect whether the mute function on the remote control are started, or audio system are correct or not)
 No picture	 Mute	Power cord is not inserted Power switch is not opened Contrast and brightness/volume setup Press standby key on the remote control for inspecting
 No color	 Normal audio	color control
 Scramble	 Normal audio or weak	retune channel
 No color	 Noise	Audio system

Special Explanation: The accessories such as remote control is not belongs to the guarantee.

Haier