

## FRONT

**SPECIFICATIONS**

- Earbud weight: 3.5 grams each earbud
- Speaker driver size: 9mm
- Supported profiles: HFP, A2DP, AVRCP, HSP
- Bluetooth version: V5.3
- Earbud charging time: Up to 1 hour
- Working voltage: 3.2V-4.2V
- Standby time: Up to 240 hours
- Playtime: Up to 6 hours
- Bluetooth range: 10 m
- Waterproof rating: IPX4
- Working temperature: 0-45°C

**CHARGING CASE SPECIFICATION**

- Charging case weight: 29 grams
- Charging port: Type-C
- Number of earbud charges from case: Up to 3 times
- Case charging time: Up to 1.5 hour
- Total playtime with charging case: Up to 24 hours

**PACKAGE CONTAINS**

- Noise Bare Buds x 1
- Charging Case x 1
- USB Type-C charging Cable x 1
- Small Ear Tips x 1
- Medium Ear Tips x 1
- Large Ear Tips x 1

**POWER ON**

The earbuds will automatically turn when they are taken out of the charging case.

**POWER OFF**

The earbuds will automatically turn off once placed inside the charging case with the lid closed.

**PAIRING**

- Open the charging case and take out the earbuds.
- Turn on the Bluetooth of your device.
- Select Add Device and from the list of devices, select Noise Bare Buds.
- Your Noise Bare Buds are now paired with your device and ready to use.

Note: Your Noise Bare Buds will automatically connect to the last paired device as soon as you take them out of the charging case.

The earbuds will power off in case if no connection or activity for 5 minutes.

**RESET**

- Make sure your earbuds are fully charged.
- On your paired devices, delete/remove Noise Bare Buds from the list of paired devices in the Bluetooth menu.
- Take out the earbuds from the charging case.
- Tap the right/left earbud for 5 times.
- Place both the earbuds inside the charging case and repeat the pairing process.

**CHOOSING YOUR EAR TIP SIZE**

- Earphones are fitted with medium-sized tips. However, if you find they don't fit perfectly, please remove and try the small and large ear tips.

Follow the images and chart to learn how to wear the earbuds in the right manner.

**CONTROLS**

- Play/Pause**  
Tap either earbud twice
- Previous Song**  
Long press the left earbud for 2 seconds
- Next Song**  
Long press the right earbud for 2 seconds
- Volume Up**  
During music: Tap the right earbud once  
During calls: Long press the right earbud
- Volume Down**  
During music: Tap the left earbud once  
During calls: Long press the left earbud

## BACK

**CONTROLS**

- Answer/End a Call**  
Tap either earbud twice to answer  
Tap twice on either earbud to end
- Reject Call**  
Long press either earbud for 2 seconds
- Voice Assistant**  
Tap left earbud thrice
- Gaming Mode**  
Tap right earbud thrice

**CHARGING**

**EARBUDS**

Place both earbuds inside the case to charge them.

- Solid White LED Charging
- No LED Fully Charged

**CASE**

Charge the case via the supplied Type-C charging cable preferably from any PC or laptop as compared to a USB charger.

**INDICATION**

- Blinking red LED Charging
- Solid red LED Fully Charged

**WARRANTY**

The warranty covers your Noise product, including accessories against manufacturing defects (if any) for 1 year from the date of purchase.

**Things that are not covered in the warranty**

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund related queries, please refer to the terms and conditions mentioned in our online return policy section on [www.gonoise.com](http://www.gonoise.com).

**WARRANTY REGISTRATION**

[www.gonoise.com/pages/warranty-registration](http://www.gonoise.com/pages/warranty-registration)

**SUPPORT AND SERVICE**

**1 YEAR LIMITED WARRANTY**

SCAN ME

**CUSTOMER QUERY**

For any assistance, please reach out to us at [support.gonoise.in](mailto:support.gonoise.in)

**SAFETY FOR YOU AND YOUR Noise Bare Buds**

Follow these tips so you can get the best out of your Noise Bare Buds.

- Do not expose ear buds to liquids, moisture or humidity. It has electronics and a battery in it.
- Don't try to disassemble the ear buds. There are no user serviceable parts inside it.
- Don't use abrasive cleaning solvents to clean it. Wipe it down with a slightly damp cloth if and when necessary.
- Try not to drop the ear buds and keep it away from sharp objects such as keys in your pockets.
- Remove and clean the earbud tips regularly, to ensure that you always enjoy the best sound possible.
- Charge the ear buds from 5V USB ports such as phone chargers and laptops or PCs.
- Do not expose it to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.
- Never listen to music at high volumes or you may permanently damage your hearing.
- Don't throw the ear buds in a fire to dispose it. The internal battery may explode.
- Pay attention to your surroundings and never wear ANY headphones while riding, driving or walking in traffic.

Please refer to this manual before using the product