## Additional information

### LED Display table

LED displays and descriptions are as belows.

 
	LED Display	Description
	HELLO	HELLO
	938	BYE
	USP	USB
	Sd	SD
AUX	AN910	AUX
6	PortAble AUdiO	PORTABLE
*	95	BT
	89.50 FM	RADIO (Displays current radio frequency)
	-689	READ
	PRUSE SZURP	PAUSE
	ONE	ONE
	ALL	ALL
	-8N9	RANDOM
	SELALL	DEL ALL
	SELEFER BLL	DELETED ALL
	NO US6	NO USB
	NO Sa	NO SD
	NO 50NS	NO SONG
	NOESUPPORE	NOT SUPPORT

#### Specifications

Power Requirements	Refer to the main label on the unit.		
Power Consumption	Refer to the main label on the unit.		
Dimensions (W x H x D)	Approx. 196.0 mm x 239.0 mm x 205.0 mm		
Bus Power Supply (USB)	5 V === 500 mA		
Amplifier (Total RMS output power)	40 W RMS		

Design and specifications are subject to change without notice.

### Replacement of battery







Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <a href="http://www.lg.com">http://www.lg.com</a> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODELS LK72B

LK72BE












## Front Panel

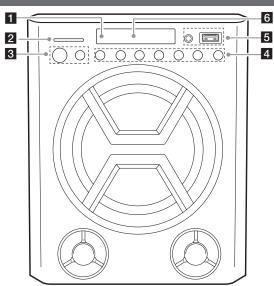

- 1 Remote sensor
- 2 SD card slot

You can play sound files by connecting the SD card.

3 ( (Standby)

Turns the power on or off.

F (Function)

Selects the function and input source.

4 VOL (Volume) -/+

Adjusts speaker volume.

KM/DM (Skip/Search)

- Skips backward or forwards.
- Searches for a section within a file.
- Selects the radio stations.

**MI** (Play/Pause)

Starts or pauses playback.

BASS -/+

Adjusts bass level.

**5** USB port


You can play sound files by connecting the USB device.

PORT. (Portable) IN


Connect a portable device.

6 Display window

## **Rear Panel**

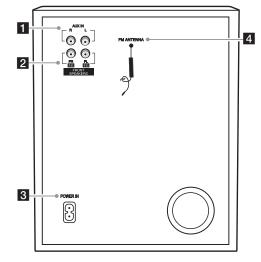

# **Speaker Connection**

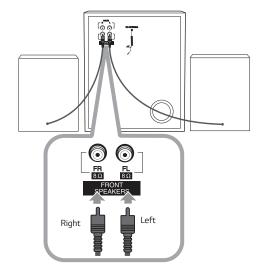

1 AUX IN (L/R)

Connect an auxiliary device.

- 2 FRONT SPEAKERS (FL/FR) connector
- 3 POWER IN
- 4 FM ANTENNA