 


Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 430.0 mm x 1,050.0 mm x 400.0 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	2,000 W RMS

Design and specifications are subject to change without notice.

 
Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

Replacement of battery

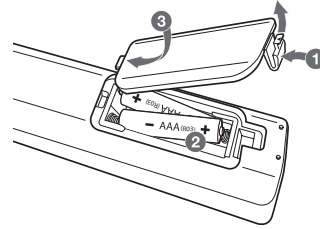

SIMPLE MANUAL

Mini Hi-Fi Audio

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL


OL100

Controller App



Download the **LG XBOOM** App to your device.
(Android only)

 LG Sound Sync



For more information, download the online owner's manual. <http://www.lg.com>



MFL70941308

 
1902_Rev01

www.lg.com

Copyright © 2019 LG Electronics Inc. All Rights Reserved.



Top panel

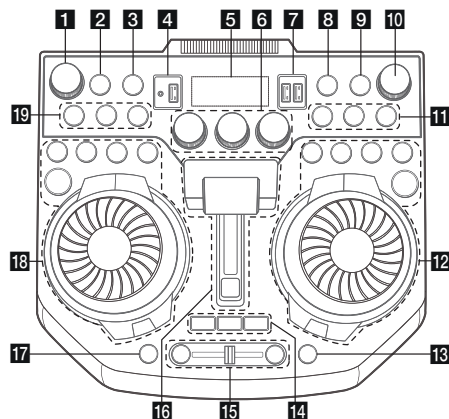


- 1 H/P (Headphone) VOLUME -/+**
Adjusts headphone volume.
- 2** (Standby)
Turns the power on or off.
- 3 F (Function)**
Selects the function and input source.
- 4 HEADPHONE IN** jack
USB 1 Port
You can play sound files by connecting the USB device.
- 5** Display window
- 6 TEMPO A -/+**
Adjusts TEMPO in USB 1 function.
MASTER VOLUME -/+
Adjusts speaker volume.
TEMPO B -/+
Adjusts TEMPO in USB 2 function.
- 7** USB 2 Port
You can play sound files by connecting the USB device.
RECORD PORT
You can record files from various sources.
- 8 USB REC / DEMO**
- Records to USB.
- Stops recording.
- In power off status, if you press **USB REC / DEMO**, show demo mode.
- 9 MIC (Microphone) ECHO**
Selects ECHO mode.
- 10 MIC (Microphone) VOLUME -/+**
Adjusts microphone volume.

- 11 VOCAL EFFECTS**
Selects various vocal effects mode.
VOICE CANCELLER
You can reduce the vocal tones during music playback from various input sources.
KEY CHANGER
Changes the key to suit your vocal range with rotating **MIC VOLUME**.
- 12** Side 2 / Basic controls (USB 2 only)
 (Stop)
Stops playback or cancels DELETE function.
⏮/⏭ (Skip/Search)
- Skips backward or forward.
- Searches for a section within a track/file.
⏸ (Play/Pause)
Starts or pauses playback.
- CUE**
Sets cue point on DJ STAR mode.
SEARCH
Moves to folder or file in selection mode.
OK
Selects a folder when searching a file.
REAL SCRATCHER / SEARCH & MULTI
- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control playback point on DJ STAR mode.
- Searches a folder or a file.
- Selects the lighting effects.
SPECIAL EQ / BASS BLAST (or BASS BLAST+)
- Chooses special equalizer
- Press and hold to select BASS BLAST (or BASS BLAST+) effect directly.
- DJ LOOP**
Selects DJ LOOP mode.
(DJ LOOP mode can use during USB playback.)
LIGHTING
Selects the lighting mode.
- 13** (Open/Close)
Opens and closes the disc tray.
- 14 CLUB, DRUM, USER (DJ PAD)**
Selects CLUB, DRUM or USER sound effect to mix.
(If you want to use USER, you have to register a source with "LG XBOOM" app.)
1, 2, 3 (DJ PAD)
Press a desired sound pad.
- 15 AUTO SYNC**
When using MIX/DJ STAR, you can synchronize the tempo of audio files being played in USB 1 and USB 2 by pressing **AUTO SYNC**.


- MIX**
Mixes audio sound.
Cross fader
Move the cross fader to adjust the sound volume of mixed sound when using MIXER/DJ STAR ON.
- 16 PARTY ACCELERATOR** lever
Slide the lever to create a party atmosphere.
PARTY ACCELERATOR MODE
Selects PARTY ACCELERATOR MODE.
- 17 MERIDIAN EQ**
You can directly select premium MERIDIAN equalizer.
- 18** Side 1 / Basic controls (CD / USB 1 / BLUETOOTH / RADIO only)
 (Stop)
Stops playback or cancels DELETE function.
⏮/⏭ (Skip/Search)
- Skips backward or forward.
- Searches for a section within a track/file.
- Selects the radio stations.
⏸ (Play/Pause)
- Starts or pauses playback.
- Selects stereo/mono.
CUE
Sets cue point on DJ STAR mode.
SEARCH
Moves to folder or file in selection mode.

- OK**
Selects a folder when searching a file.
REAL SCRATCHER / SEARCH & LEVEL CONTROL
- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control playback point on DJ STAR mode.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Searches a folder or a file.
- Adjusts DJ EFFECT level.
- Selects vocal effects.
- DJ EFFECT**
Selects a desired DJ EFFECT.
- DJ LOOP**
Selects DJ LOOP mode.
(DJ LOOP mode can use during CD/USB playback.)
USER EQ
Selects the equalizer created by your own.
- 19 H/P (Headphone) MODE**
Press to select a headphone monitor mode.
TWIN
Connects two speakers for TWIN mode in WIRELESS PARTY LINK.
DJ STAR
Turns on or off the DJ STAR mode.

 Front panel / Rear panel

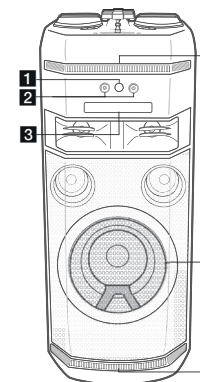

 - 1** (Remote sensor)
- 2** MIC(Microphone) 1/2 jack
- 3** Disc tray
- 4** Lighting

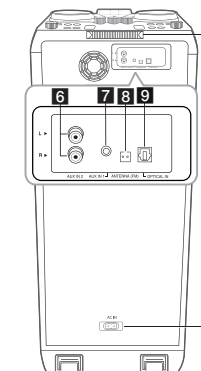

- 5** Lighting
- 6** AUX IN 2 (L/R) : Connect an auxiliary device.
- 7** AUX IN 1 : Connect a portable device.
- 8** ANTENNA (FM)
- 9** OPTICAL IN : Connect an optical device.
- 10** AC IN socket