
PHILIPS



User manual



System positioning :

General information

Safety instructions

Please read carefully the safety mark on the back side and that no objects filled with liquids, such as vases, sl



Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using • Do not place any source of danger on the Subwoofer, high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the
- loudspeaker cones. Please switch off the system from the wall socket,
- when not in use. Do not open the cover or back panel to avoid
- electrical shock or any other accidents. No userserviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer.
- The MAINS plug is used as the disconnect device, the
 Use a soft cloth slightly moistened to clean the cabinet.
- disconnect device shall remain readily operable.

Accessories

Item	2RCA-2RCA cable	Remote control	User manual	
Quantity	1	1	1	

Bluetooth Operating Instruction

- 1. Press SOURCE key from subwoofer's front panel or remote control to Bluetooth mode;
- 2. When selected the Bluetooth mode, in display, "bt" will start blinking and hear an audio tone which indicate in Bluetooth pairing mode.

- 3. For pairing with mobile phone or other Bluetooth devices, search the device named "Philips SPA5128B" and pair it. Once paired, "bt" stops blinking and an audio tone will come up.
- 4. Press and hold " MI " for 3 seconds from remote control in order to force disconnect the Bluetooth connection.

PHILIPS	General information	Connections	Top panel operation	Remote controls	
<text></text>	<section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header>	<complex-block><complex-block><complex-block><complex-block><complex-block><complex-block><complex-block><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/></complex-block></complex-block></complex-block></complex-block></complex-block></complex-block></complex-block>	<image/> <complex-block><complex-block></complex-block></complex-block>	<complex-block> ● Turn on/stand-by the speaker. ● Turn on/stand-by the speaker. ● Turn on/stand-by the speaker. ● Curner keys, with the help of these keys you select song or track in USB with the help of these keys you select song or track in USB with the help of these keys you select song or track in USB with the help of these keys you select song or track in USB with the help of these keys you select song or track in USB with the help of these keys you select song or track in USB with the help of these keys you select song or track in USB with the output from 11 to 51 and in case of DVD model, its by BT, you can switch the output from 21 to 51 and in case of DVD model, its by BT, you can switch the output from 21 to 51 and in case of DVD model, its by BT, you can switch the output from 21 to 51 and in case of DVD model. ● O Chront volume adjustment. ● O Chront volume adjustment. ● Play the pervious song by pressing * * at USB */BT model. ● Play the pervious song by pressing * * at USB */BT model. ● Play the next song by pressing * * at USB */BT model. ● U Play the next song by pressing * * at USB */BT model. ● U Play the next song by pressing * * at USB */BT model. ● U Play the next song by pressing * * at USB */BT model. ● U Play the next song by pressing * * at USB */BT model. ● U Play the next song by unset adjustment. ● U Play the next song by unset adjustment. ● U Play the next song by unset adjustment. ● U Play the next song by unset adjustment. ● U Play the next song by unset adjustment. ● U Play the next song by unset adjustment. ● U Play the next song by unset adjustment. ● U Play the next song by unset adjustment. ● U Play the next song by unset adjustment. ● U Play the next song by unset adjustment.</complex-block>	Register you product and get support at www.philips.com/welcome Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips NJ. and are used under ticer product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warranter in relation to this product.
Playing the speakers and subwoofer	Bluetooth Operating Instruction	Troubleshooting	Warranty	Product specifications*	
<section-header><section-header><section-header><section-header><text><text><text><text><text></text></text></text></text></text></section-header></section-header></section-header></section-header>	 A. Press SOURCE key from subwoofer's front panel or remote control to Bluetooth mode: A. When selected the Bluetooth mode, in display, "bt" will start blinking and hear an audio tone which indicate in bluetooth pairing mode. B. For pairing with mobile phone or other Bluetooth devices, search the device named "Philips SPA5128B" and pair it. Once paired, "bt" stops blinking and an audio tone will come up. P. Press and hold " bl" for 3 seconds from remote control in order to force disconnect the Bluetooth connection. Note: While using Bluetooth, if external call comes, then speaker system goes in mute mode in order to protect privacy of mobile phone user. Operation resumes once the call is disconnected. 	<text><text></text></text>	<form>Ib Philips S.I. Multimedia Speaker System is warranted against any defect due to defective materials or forkmanship for 12 months from the date of purchase, should a defect develop during the warranty. PK Chances upper line of MMD Hong Kong Holding Limited. undertake to repair the apparatus FREE of CHACE at any of its Authorized Service Center in India. Dements of the Authorized Service Center in India. 10 eoi of purchase is not accompaneled with this warranty cate. 10 eoi of purchase is not accompaneled with this warranty cate. 10 eoi aguaratus is not completed immediately after purchase. 10 eoi aguaratus is not completed immediately after purchase. 10 eoi aguaratus is not according to this user manual. 10 eoi aguaratus is not according to this user manual. 10 eoita are done by unauthorized Service. 10 eoita and the to improper or reckless use. 10 eoita ou couses beyond control like lightning, abnormal voltage, acts of God or while in farsit to the purchaser's residence. 10 chosen band and dress: Product SL No. 10 bate of Purchase: Product SL No. 10 bate of values and address: PIN: 10 bater bange 10 bater 1</form>		

总尺寸: 660x173mm 工艺: 风琴折 成品尺寸: 110x86.5mm



User manual

成品背面



