

Key Operation:

Short press "M" to change the mode.
Long press "M" to change effect of light/turn on/off light (Just for light version)
Long press "⏻" to power on/off.
Short press "⏻" to answer/hang off.
Short press "⏻" twice to reject the call.
Short press "☎" twice, you can dial the last dialled number.
Long press "▶" to disconnect Bluetooth, and then short press again "▶" to connect Bluetooth.
Short press "⏸" Pause/Play.
Short press "⏮" for PREV and long press "⏮" decrease volume.
Short press "⏭" for NEXT and long press "⏭" increase volume.

Bluetooth Connect

Press "▶" for about 3 seconds (please make sure there is enough power).
Wait for the voice prompt to pair with your Bluetooth device.
Connect your device to the speaker.
If the speaker is in USB/TF/AUX or any other mode during power on, please short press "⏻" to switch into Bluetooth mode.
Long press "▶" will disconnect Bluetooth and press "▶" again 2 seconds will reconnect.

Smart phone Connect

1. Turn on phone's Bluetooth switch, you can see the Bluetooth symbol on the top of the phone screen, then the phone is in searching mode.
2. Turn on the Bluetooth setup and scan to search device.
3. You can click to connect the speaker when you find "pTron Fusion".
4. Please input "0000" if your phone need (no need to input code if the Bluetooth version beyond 2.1. Input "0000" if the version below 2.1).
5. You can hear "pTron Fusion is connected" when successfully paired.

Computer Connect

If there is no Bluetooth function in your computer, you should use a Bluetooth adapter to and then install driver. Turn on the Bluetooth if your computer has the option.

1. Find the lower right corner Bluetooth symbol, right-hand button to choose "add device".
2. Search Bluetooth device and then you can find "pTron Fusion".
3. Click "pTron Fusion" and add speaker to computer and the computer will install driver, then you can see connect successfully.
4. Reset your speaker and then you can hear "pTron Fusion is connected".

Bluetooth Phone

Answer call: Connect the phone with speaker, short press "⏻" when you have a call.
(The voice will be better closely to the microphone).
Hang up the call: Short press "⏻" when you finish the call.
Call back: Short press "⏻" twice you can call the last phone number you called out.
Refuse to answer: Press twice "⏻" to reject the call.

Mode Switch

Connect Bluetooth/plug TF card or USB flash disk/plug Audio cable.
Short press "M" and then you can change the mode.

Bluetooth Mode

The speaker can play audio for those devices with Bluetooth function such as computer, iPad, smartphones.

TF card/USB Disk Mode

Plug TF card or USB disk, switch mode, the speaker can play. If you plug TF card first and then plug USB disk, the speaker will play content in USB disk, it will play content in TF card when

finish in USB. The reverse is also true. (It just support MP3 compressed format and WAV loss less audio).

Aux Input Mode

Plug audio cable into AUX port, plug-in 3.5mm universal interface. Then the speaker can play audio file for computer, iPad, phone (The speaker can't be used to switch previous/next music, you can change the volume, short press "▶" pause/play).

Battery Charging

You can charge in power off/on. You can charge with USB cable connected with computer or use USB Adaptor.

Blue Indicator Light

The blue indicator light flashes quickly when speaker in Bluetooth connection. Light will flash slowly when play music.

Charge Indicator Light

The red light will be on when you charge, the red light will be off when finish.

Flashing Mode

When Power on and music is not playing, light will be on BLN mode. The light will be in flashing mode while playing music. Long press "M" can change mode: Flashing rhythmic/play/BLN/turn off/on light.

Low Power Reminder

When you hear "low power, please charge", the speaker will be out of power, you should charge. Then you can hear "power off".

Reset Function

When the speaker crashed, you can use thin pin to put in the Audio holes to reset the speaker, and then turn on the speaker.

Packing Specifications

Speaker: 1 pc, audio cable 1pc
Charging cable: 1pc, Instruction book 1pc

Safety and Maintenance

1. Please don't use speaker in hot environment to avoid damaging main board or battery explosion.
2. Please don't put speaker into water or other corrosive chemical to avoid main board or battery explosion.
3. Please don't use sharp objects to touch audible unit to avoid causing some irreparable damages.
4. Please charge in time when power is low.
5. Please charge the speaker every 20 days if not in use for a long time.
6. Please put speaker in dry environment if not in use.
7. Please use original cables to connect.
8. Please stop using speaker if you find some unusual situations such as hot, smoking, peculiar smell.
9. Please don't disassemble the speaker if you are not professional.
10. Please don't use charger that is above DC5V.

Disclaimer

The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

Product Specifications

Connectivity: Advanced Wireless
Bluetooth Transmission Range: 10M
Speaker Size/Driver Size: 52mm
No. of Speakers: 2
Speaker Frequency Range: 20Hz-20KHz
Speaker Impedance: 4Ω
Speaker Sensitivity: 90±3dB
Speaker Output Power: 5W x 2
Communication: Bluetooth 2.4G
Mic Sensitivity: -40±4dB
Mic Impedance: 2.2K
Battery Capacity: 2000mAh
Charging Power: DC 5V
Charging Time: About 5 hours
Music Playtime: About 10 hours depending upon music volume level
Talk-time: About 12 hours
Standby Time: About 100 hours
Other Features: LED display lights, plug & play options
Speaker Weight: 460g

Trouble Shooting

Fault	Solutions
Light off when turn on speaker	Please check if there is enough power or not, check if you long press "⏻" To turn on the speaker
Charging light is off	Check if the cable is connected correctly or damaged. Check the adapter
No Voice in AUX input Mode	Check if paired correctly and confirm if the speaker is playing or not. (Check for mute mode in main device). Check if the volume is in Min.
No voice in Bluetooth mode	Check if the cable is connected correctly and the speaker is in AUX input mode
No voice while playing content in TF or USB disk	Check if the TF card/USB Disk is plugged in right direction and right place, check if the format of the files is correct Volume is in Min., check if the speaker is in right mode or not



pTron

Fusion
10W Wireless Speaker

Instruction Manual

