

Thank you for purchasing Stone 180. You are now just a step away from the realm of Nirvana. Please follow this user manual carefully in case of any doubts and difficulties that arise. Please note that play time varies depending on the selected volume level. You can stay plugged into the sound with Bluetooth wireless technology & aux wire compatibility. This portable speaker has been designed for smooth interface that requires

the minimal of efforts.



You may long press the power button to switch the speaker ON/OFF.

- Functions:
- Answer Incoming Calls : Short press the MFB (*Multifunction Button)

- End Calls : Short press the MFB once to end calls
- Reject Incoming Calls: Long press the MFB for 2 seconds
- Redial : Double press the MFB to redial the last contacted number
- Switch Modes: Short press the power button to select modes (Bluetooth/AUX)
- Volume Increase: Short press the "+" button in steps for increasing the volume
- Volume Decrease: Short press the "-" button in steps for decreasing the volume
- Play/Pause: Short press the MFB to play or pause the tracks
- Next Track: Long press the "+" button for skipping to the next track
- Previous Track: Long press the "-" button for returning to the previous track

speaker, and then short pressing the Power button

• In the AUX mode, you can control the audio playback via the media device/ phone

- TWS: You can connect two Stone 180s and virtually forge them into one speaker for a
- greater impact. For TWS connection:

the speaker gets fully charged

- Turn on both the speakers • Press and hold MFB on one of the two speakers for about 2 seconds until you hear a
- After releasing MFB, it may take a few more seconds for the speakers to connect Activate the phone's Bluetooth function and search for "Stone 180" to establish

pairing Charging:

- Stone 180 beeps once every 5 minutes when the battery is low. After three such
- indications, the speaker automatically turns off
- the provided charging cable to charge the speaker ED indicator turns into steady red while charging; the same goes off as soon as

Please avoid using the speaker while it is in charge as it may decrease the battery's

performance

Supported Profiles

pecincations:		
SpeakerType	Portable Wireless Speaker	
Bluetooth Version	V5.0	
Net Weight	About 145g	
Working Range	10m	
SpeakerSize	1.75"	
Water Resistance	IPX7	

Bluetooth V5.0+BR+EDR+BLE

80dB 70Hz - 20kHz Frequency Input Voltage 5V/2A Output Power Play Time Up to 10 hours Talk Time Up to 20 hours Charging Time 1.5 - 2 hours 3.7V / 800mAh Battery

Yes

Package Contents

• 1x Bluetooth Speaker

• 1x Charging Cable

• 1x Audio Cable

• 1x User Manual

1x Catalogue

AUX Compatibility

• 1x Warranty Card

Warning:

- Please charge the speaker according to the charging norms mentioned on
- packaging to protect the battery
- Do not disassemble the product
- · Do not submerge the product inside water
- Please keep this product safe from coming in contact with any liquid
- Don't use/store this product in extreme temperatures
- Please keep the product away from anything that generates heat, such as
- radiators, stoves, etc. In order to have hearing protection and an extended speaker life, avoid listening.

smantle/repair the product on your own.

Charging norms & Precautionary Guidelines: -	
	: SV 2A : Standard Cable (35 strands

Any other accessory can be paired up with the product a: ng as the specifications are as per above norm

• Activate the phone's Bluetooth function and search for "Stone 180". As soon as the

Bluetooth Connectivity:

• Turn the speaker on. Its LED indicator blinks blue until the pairing is done

speaker gets selected and paired by you, the connection gets indicated by a sound prompt.

Note:

- The speaker can automatically reconnect to the last paired device
- If you are having connection troubles, then remove Stone 180 from the list of paired devices on your phone, keep the phone closer to the speaker and try pairing again

AUX Mode:

- You can switch to AUX mode by using the AUX cable to connect the phone and the

