



ZEBRONICS
ALWAYS AHEAD

5.1 Speaker
ZEBTRUMP



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-TRUMP** 5.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.

Features

5.1 Channel speaker
Wireless BT/USB/SD/FM/AUX/AC-3/Optical
LED display
16.51cm subwoofer
Multicolor LED Lights
Remote control

Specifications

Output power (RMS)

Subwoofer	: 35W
Satellite	: 9W x 5
Total	: 80W

Driver size

Subwoofer	: 16.51 cm x 1
Satellite	: 7.62 cm x 5

Impedance

Subwoofer	: 6Ω
Satellite	: 4Ω


Frequency response : 50Hz - 18kHz

S/N Ratio	: $\geq 72\text{dB}$
Separation	: $\geq 38\text{dB}$
File format support (USB/mSD)	: MP3 / WAV / WMA
Line input	: 2ch RCA, AC-3, OPTICAL
Max. supported memory size	: 32GB (USB/SD)
FM frequency range	: 87.5 MHz-108 MHz
BT name	: ZEB-TRUMP
BT version	: 5.0
Product dimension (W x D x H)	
Subwoofer	: 235 x 350 x 360 mm
Satellite Front	: 95 x 93 x 328 mm
Satellite Rear	: 95 x 93 x 328 mm
Satellite Centre (with base)	: 300 x 93 x 125 mm
Net. weight	
Subwoofer	: 5.94 kg
Satellite	: 406g x 5 (with base)
Total	: 7.97 kg


Package Content

Subwoofer	: 1 U
Satellite	: 5 U
Remote	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U
FM Cable	: 1 U
Base	: 5 U
Optical cable	: 1 U


Control Panel Description

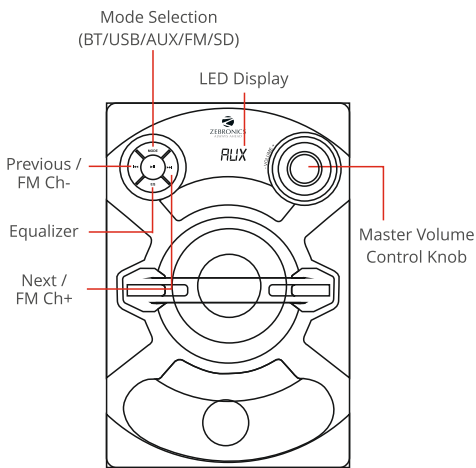

Back Panel Description

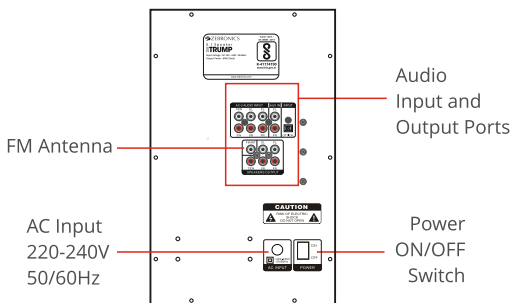

Remote Control

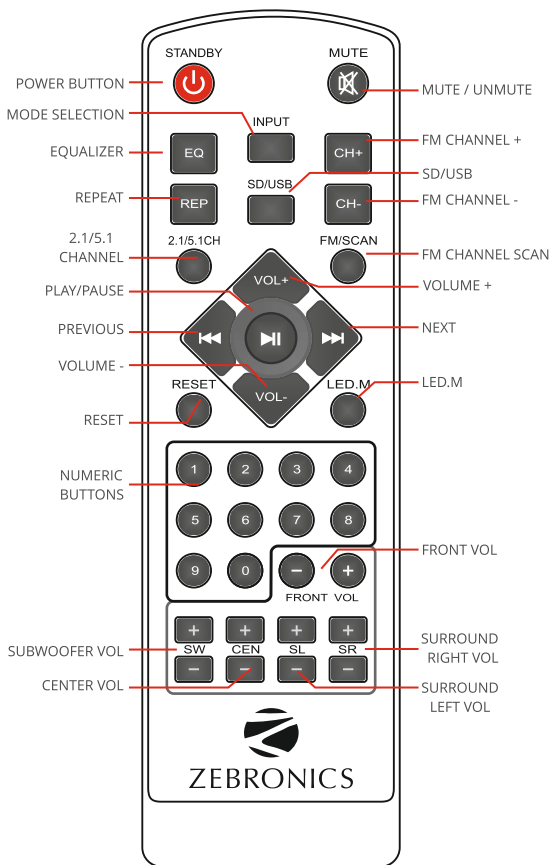

Power : Standby ON/OFF

Numeric Pad (0-9) : To select direct tracks from USB/SD and to select two digits and above, by consecutively pressing

Vol+ : To increase the volume

Prev : To select the previous songs in BT/USB/SD or channels in FM mode

Vol- : To decrease the volume

REP : To Switch between REP ALLtracks or REP 1 track

Mode : Mode Selection(BT/AUX/USB/SD/FM)

EQ : Equalizer

Play/Pause : To Play / Pause for current song

Next : To select the next songs in BT/USB/SD or channels in FM mode

Bass + : To increase the bass

Bass - : To decrease the bass

Treble + : To increase the treble

Treble - : To decrease the treble

Mute : To Mute / Unmute for currently playing song

LED M : LED turn light five modes

Front Vol : Front volume increase and decrease

SW : Subwoofer volume increase and decrease

CEN : Center volume increase and decrease

SL : Surround left channel volume increase and decrease

SR : Surround right channel volume increase and decrease

General Instructions

BT Mode:

Switch the speaker to BT mode, Scan for nearby BT devices in your device. Tap on **“ZEB-TRUMP”** to connect.

USB/SD Mode:

Insert the USB/SD flash drive to the speaker. The speaker will detect the USB/SD and the audio files from flash drive will be played automatically. (This mode isn't selectable on the speaker or remote control unless a USB/SD flash drive is connected).

Ensure that your USB/SD flash drive contains MP3/WAV/WMA files (other file types not supported).

FM Radio:

Switch the speaker to FM mode. In FM mode, press & hold the **“Play / Pause”** button in the remote to scan for the available FM channels. Once the scanning is done, the scanned channels will begin to play. The next button or previous button in the remote can be used to change the FM channels.

AUX-IN:

The speaker can be connected to an audio device using an RCA to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source.

The songs from the audio source can be heard through the speaker.

ISO 9001:2015 Certified Company
www.zebronics.com

