



ZEBRONICS  
ALWAYS AHEAD

Wireless Headphone  
**ZEB PARADISE**



User Manual

[www.zebronics.com](http://www.zebronics.com)

## **Dear Customer,**

Thank you for purchasing **ZEB-PARADISE** BT headphone. Please read this user manual carefully before operation & save this user manual for further reference.

### **Note:**

- Avoid the use of this product at the high temperature and high humidity environment.
- Avoid self-disassemble of product or it will result in the failure of warranty.
- Please charge the product with power adapter output rated voltages DC 5V.

### **Caution:**

Listening at high volumes can cause hearing impairment. Please limit your usage time at high volumes.

### **Features**

Wireless BT

Supports Micro SD, AUX function

Built-in FM Radio

Dual Pairing

Soft & comfortable earcups

Adjustable headband

Media/Volume control

Built-in rechargeable Battery

Call function, Voice assistant support

## Specification


BT version	: 4.2
Wireless range	: 10 meters (Without obstacles)
Driver size	: 40mm
Speaker impedance	: 32Ω
Frequency response	: 20Hz - 20kHz
Sensitivity	: 113±3dB
Charging time	: 2H
Playback time	: 15H*
Standby time	: 600H
Talk time	: 15H*
Microphone impedance	: 1.2kΩ
Microphone sensitivity	: -38dB±1dB
Net. weight	: 158g

## Package Contents:

Headphone : 1 Unit  
Charging Cable : 1 Unit  
AUX Cable : 1 Unit

*\* at 50% Volume*

## Product Representation

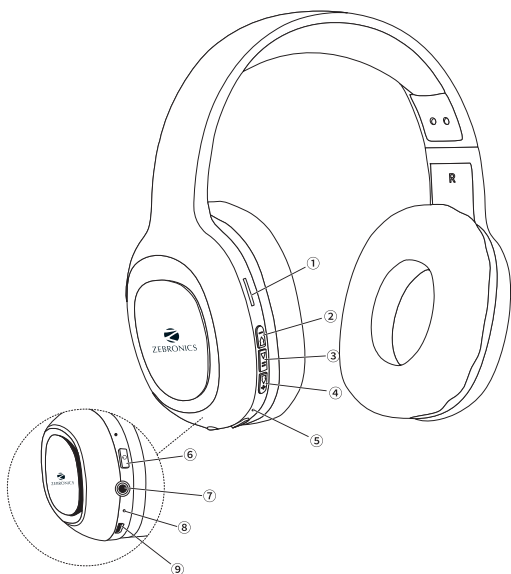

### Button & Port description:

1. MicroSD card slot
2. Previous track / volume decrease
3. Play/Pause& Mode button
4. Next track/volume increase
5. LED indicator
6. Multi functionality button (MFB) / Power button
7. 3.5mm AUX port
8. Microphone
9. Micro USB charging port

## **General Instruction:**

Press and hold the Multi functionality button (MFB) button for 3 seconds to turn ON/OFF the headphone. The headphone enters Bluetooth mode as soon as it is powered ON, by default (refer LED indication).

### **1. Mode Switching:**

Toggle between Bluetooth, Micro SD, AUX and FM radio mode by long pressing the Mode button.

### **2. Bluetooth Pairing Instruction:**

Enter into Bluetooth mode and search for nearby Bluetooth devices in your mobile. Tap on the Bluetooth name "**ZEB-PARADISE**" to connect.

### **3. Call Function:**

- Single press the Multi functionality button (MFB) to answer/hang up a call.
- Long press the Multi functionality button (MFB) for 2 seconds to reject an incoming call.
- Double press the Multi functionality button (MFB) to redial the last number dialed.

### **4. AUX Mode:**

Connect one end of the 3.5mm AUX cable to the headphone. Connect the other end to an audio source (Ex. Mobile, Computer). The songs played by the audio source can be heard

through the headphone.

### **5. Micro SD Card Mode:**

Insert a microSD card in the slot to listen music.

### **6. FM Auto Scanning:**

Single press the play / pause button to initiate auto scanning of FM channels, while in FM mode.

### **7. FM Radio Control:**

Use the control buttons in the below mentioned manner to control FM channel.

**Single press Prev. button:** Previous Channel

**Single press Next button:** Next Channel

### **8. Media control:**

Use the control buttons in the below mentioned manner to control media.

**Single press Prev. button:** Previous Track

**Single press Next button:** Next Track

**Single press Play/Pause button:** Play/Pause

### **9. Volume control:**

Use the control buttons in the below mentioned manner to control volume.

**Long press Next button:** Volume Increase (+)

**Long press Prey. button:** Volume Decrease (-)

## **10. Voice assistant support:**

When the Headphone is connected to a smart phone, long press the power button for 2 seconds to wake up the phone's voice assistant

### **LED Indication:**

**Charging Indication:** Red LED glows

**Full Charge Indication:** Red LED goes OFF

**Bluetooth Discover Mode:** Blue LED flashes

**Bluetooth Device Connected:** Blue LED blinks once in 5 seconds

**ISO 9001:2015 Certified Company**

**[www.zebronics.com](http://www.zebronics.com)**

