

Bassbuds Pixel True Wireless Stereo Earbuds





Control Button Description:



Touch Sensitve Area (TSA)

Smart Power On & Pairing:

- Open the charging case Or Touch TSA on both the earbuds for 3 seconds.
- Wait for 2-3 seconds until L & R earbuds pair to each other.
- Turn on the Bluetooth on your phone & search "pTron TWS" to connect with the device.

Movie & Gaming Mode: Touch TSA for 4 times quickly on either earbud

to turn ON the Movie & Gaming mode. Note: Default mode is Movie & Gaming mode off.

Smart Power Off:

Touch TSA on both the earbuds for 3 seconds Or Keep both the earbuds into the charging case.

Note: TSA stands for Touch Sensitive Area

Connectivity Bluetooth - Automatic:

Just turn on the Bluetooth earbuds. They will automatically connect to the last connected device (Instant wake & pair technology).

Calling or Music through Mono & Dual Buds:

Mono Bud Use - Just place the right or left earbud back into the charging case Dual Buds Use - Use left & right earbuds together.

Voice Assistant Activation:

Touch TSA on either earbud for 2 seconds.

Call & Music Functions: Answer/Hangup a Phone Call - Touch TSA on either

earbud once.

quickly.

Reject a Phone Call - Touch TSA on either earbud for 2 seconds.

Music Play/Pause - Touch TSA on either earbud once.

Next Song - Touch TSA on either earbud twice.

Previous Song - Touch TSA on either earbud thrice

Note: TSA stands for Touch Sensitive Area.

Charging the Earbuds:

properly. The earbuds will power off automatically when placed into the case.

1. Place both the earbuds into the charging case

- Earbuds LED will start glowing white, which means it is on charging. After full charge earbuds LED light will stop blinking.
- 3. Charging case LED light will be blue during charging the earbuds. It will turn off when earbuds are fully charged.

Connect the C-Type cable to the case and the USB end to a 5V power source.

Charging the Case:

- 2. The Red light indicator in the front of the charging case will start blinking.
- 3. When the case is fully charged, Red light will be steady. Remove the charging case from the power supply.

Troubleshooting:

Scenario 1: One Earbud is Not Working

- 1. Place both the earbuds in the charging case.
- 2. Take out both the earbuds together from the charging case.
- 3. Wait until L & R earbud pair to each other. After successful matching, only 1 earbud will flash Blue & Red
- 4. Turn ON the Bluetooth on your phone, search for "pTron TWS" & connect.

Troubleshooting Scenario 2: Earbuds Not Connecting/Scanning

Place both the earbuds in the charging case. Take out both the earbuds together from the

- charging case.

 3. Restart your Bluetooth device or phone.
- 4. Now, search for "pTron TWS" on your Bluetooth device & connect.

Troubleshooting

Phone Call

Charge earbuds 100% before use.
 Restart the earbuds and reconnect with your

Scenario 3: Earbuds Disconnecting During a

2. Restart the earbuds and reconnect with your device.

Disclaimer:

The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purposes only. Other

shown are for representation purposes only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners