 



User Manual

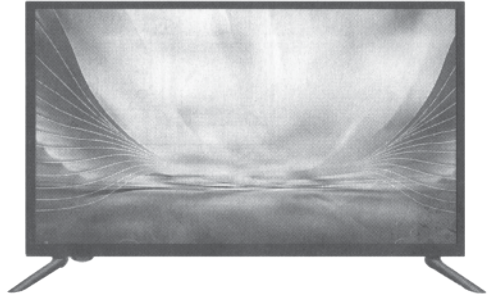


Congratulations on your purchase and welcome to the Family!

You are now a proud owner of a TV. Please follow the operating, usage and cleaning instructions in this manual and we're sure your TV will provide you with efficient service for many years.

 
1 STAND ASSEMBLY INSTRUCTIONS

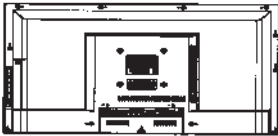

- Disconnect all the cable connections before installation
- Please place the TV set on a soft cloth or cushion with face down.

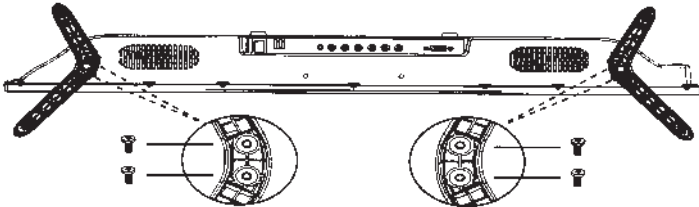

- Please place the TV in a horizontal position and fix the base stand with screws
- Use only the matching screws provided to install the TV unit stand, to avoid damaging the unit
- You may reverse the steps for removing the base stand

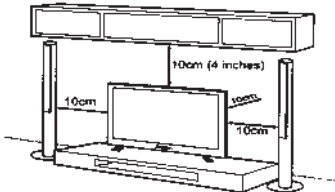


- Place your TV on a firm place which can bear its weight.
To avoid any danger do not expose the TV to any water or heat source. Do not block TV ventilation.

2 MULTIMEDIA CONNECTIONS

Please switch off the power while connecting the TV to an external device. The TV can play media from multiple sources by connecting different terminals with multimedia devices such as DVD players, PCs etc. and selecting the required input source.

Rear View

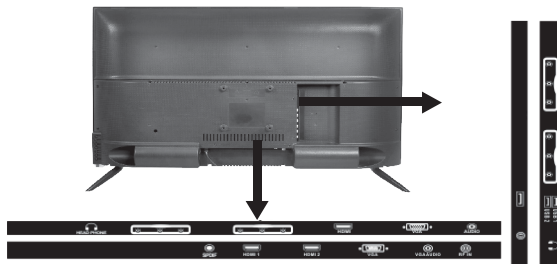

| Description | | |
|-------------|----------------------|---|
| 1 | EARPHONE (HEADPHONE) | Connect to your earphones. By connecting the earphones, you can listen to the sound from the TV on headphones. *If you connect the earphones, the TV speakers will be muted. |
| 2 | AV 1 IN | Connect a external device to the composite VIDEO and AUDIO (L/R) in jacks on most video equipment. |
| 3 | AV 2 IN | Connect a external device to the composite VIDEO and AUDIO (L/R) in jacks on most video equipment. |
| 4 | HDMI Input Terminal | Connect this port to the HDMI output of A/V device. |
| 5 | VGA signal Input | Connect a 15-pin D-sub RGB cable to the RGB output of your computer and the other end to the RGB input on the rear of the LED TV. |
| 6 | PC Audio Input | Connect the RGB Audio Out on your computer to the RGB Audio on the rear of the LED TV. |
| 7 | RF (ANTENNA) | Connect this jack to your Cable or VHF/UHF antenna. |
| 8 | USB | Connect to your USB devices, such as USB flash drive. |
| 9 | AV OUT | Connect a external device to the composite MINI AV OUT in jacks on most video equipment. |

5 Connect External Devices

Connect the Power Cord

How to connect with power cord

Plug the power cord into the power outlet. Ensuring that the cord is tightly connected at both ends
It is strongly recommended for best broadcast reception, to use digital cable, satellite, or a high quality roof top antenna.



Connect to Antenna or Cable

Typical wall antenna jack is used in apartment buildings, connect the antenna cable, as shown in below diagram (Please use the correct type or antenna cable).

We strongly recommend that you connect the antenna/cable input using a 75-ohm coaxial cable (not supplied) to ensure the best picture quality.
Cable or VHF/UHF




Connect Device via HDMI Interface

You can also enjoy high-definition programming by subscribing to a high-definition cable service or a high-definition satellite service. For the optimum picture quality, be sure to connect this device to your TV via the HDMI or component video (with audio) input on the back of your LED TV.

HDMI Connection
TV REAR PANEL

Digital set top box, gaming console, or Blu-ray w / HDMI interface

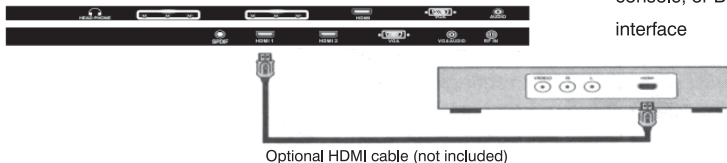

Optional HDMI cable (not included)

Connect Devices Via RF IN/ USB / AV Out Interface




TV REAR PANEL



Connect Device Via Video + Audio L/R Interface



TV REAR PANEL

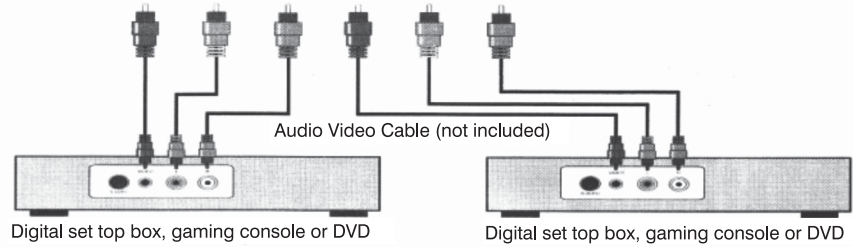


5 | Connect External Devices

Connect PC Via VGA/ HDMI Interface

Use the LED TV as the monitor of your computer.

The picture below shows the connection for PC. The LED TV can also be connected to PC with VGA or HDMI output.

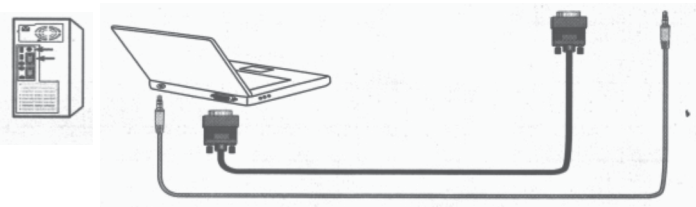


Supporting signals

| VGA | HDMI |
|----------------|------------|
| 640X480 / 60 | 480i |
| 800X600 / 60 | 576i |
| 1024X768 / 60 | 480P |
| 1280X1024 / 60 | 576P |
| 1366X768 / 60 | 720P / 50 |
| | 720P / 60 |
| | 1080i / 50 |
| | 1080i / 60 |
| | 1080P / 50 |
| | 1080P / 60 |

Remote Control

Summary of Remote Control function buttons

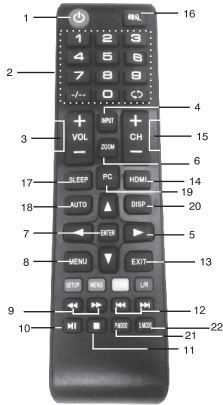

| | | |
|----|----------------------------|---|
| 1 | Stand by (power key) | Standby or switch on the tv, |
| 2 | Number key | Select the tv channel you want to view by using the numbers buttons. |
| 3 | Volume key +/- | Select to increase or decrease volume, |
| 4 | Input | Select to use all the input function. |
| 5 | Direction button | Select to move left/right & up/down, |
| 6 | Zoom | Select to zoom large or short picture |
| 7 | Enter | Select to enter in the content. |
| 8 | Menu | Select to menu settings. |
| 9 | Fast forward/Fast backward | Play back the video faster in forward to backward motion. |
| 10 | Play/Pause | Play or pause the video. |
| 11 | Stop | Select to Stop the video content. |
| 12 | Next/Previous | Play next and previous in USB mode. |
| 13 | Exit | Select to exit from running content. |
| 14 | HDMI | Select to use HDMI function directly. |
| 15 | Channel key +/- | Channel up and down. |
| 16 | Mute | Turns sound off/on. |
| 17 | Sleep mode | Select sleep timer except when you want to see the next program after |
| 18 | Auto | Select time. |
| 19 | PC | Select to use Computer function directly. |
| 20 | Display | Confirms your selection. |
| 21 | Picture Mode | Cycle though available various picture modes. |
| 22 | Sound Mode | Cycle though available various sound modes. |
| | | |
| | | |

- Check if the batteries are drained out (leakage, spring rusty)
- Check for IR interference from other devices like CCFL, Tube light, etc.
- Use of sub-standard batteries in TV remote may lead to leakage and permanent damage to remote. Remove batteries from remote if not using it for long time.

No Image display and no sound in produced

- Check if the product is turned on
- Check if the power cord is connected to a well outlet
- Check if there is a problem in the well outlet by connecting other products

TV turns off suddenly

- Check the power control settings. The power supply may be interrupted
- If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity
- Check for electrical supply interruption (Switch, Fuse, MCB, etc.)
- Check if too many electrical devices plugged into a multiple electrical outlet causing sparks (Recommended to use standard power socket).
- Check if auto sleep feature is activated by the time (clock) settings.
- Check if there is no signal from external device (STD.DVD/Blu-ray player)

When connecting to the PC (HDMI/RGB), "No signal" or "Invalid format" is displayed

- Turn the TV off/on using the remote control
- Reconnect the HDMI/RGB cable
- Restart the PC with the TV on.

TV cleaning

- While cleaning the TV screen. unplug the power and wipe if with a soft cloth. Applying excessive force may cause scratches or discoloration.
- Do not spray water or cleaner directly on to the TV screen.
- Make sure to spray just enough of water or cleaner on to a dry cloth to wipe the screen.
- Make sure to wipe off excess water or cleaner by the cloth.

TV audio

| | | |
|---|--|--|
| 1 | No sound is produced while images are displaying | <ul style="list-style-type: none"> • Press volume +/- button • Check if the sound is muted by pressing mute • Scroll to other channels. There may be a problem with the broadcast • Check if the audio cables are connected properly |
| 2 | One of the speakers produce noises or does not produce sound | <ul style="list-style-type: none"> • A Change in ambient humidity or temperature may result in an unusual noise when the product turns on/off • There is no problem with your product. |
| 3 | Low sound | <ul style="list-style-type: none"> • Check the TV and source volume level (STB, DVD player. etc.) • Check auto volume function on/off. |

TV video

| | | |
|---|---|--|
| 1 | An image displays in black and white or the color quality is poor | <ul style="list-style-type: none"> • Adjust the color setting in the picture menu • Keep a sufficient distance between this product and other electronic products. • Scroll to other channels. There may be a problem with the broadcast. |
| 2 | Horizontal or vertical bars appears or images blur | <ul style="list-style-type: none"> • Check if there are local interferences such as an electrical appliance or power tool. |
| 3 | Lines or streaks appear on images | <ul style="list-style-type: none"> • Check the antenna or aim the antenna to the proper direction. |
| 4 | After images (Ghosts) appear when the product turns off | <ul style="list-style-type: none"> • Pixels may have been damaged from a fixed image displayed for a long time (image burn) • Use a screen saver to prevent the pixel damage on the screen. |
| 5 | The power is on but the screen appears extremely dark | <ul style="list-style-type: none"> • Adjust the brightness and contrast in the picture menu |
| 6 | "No signal" appears on the screen | <ul style="list-style-type: none"> • Check if the signal cable is connected between the TV and products properly. • Check the selected input source by pressing input. |
| 7 | Thin lines appear in the background of the screen | <ul style="list-style-type: none"> • Check the video cable connections. |
| 8 | The reception on some channels is poor | <ul style="list-style-type: none"> • Scroll to other channels. There may be a problem with the broadcast. • The station signal may be weak, Aim the antenna to the proper direction • Check if there is local interference such as an electrical appliance or power tool. |

* Functionality of the keys, may vary as per the Product.

* Note: Picture may not match exactly with the Original.