



boat

Avante Bar Quake

Thank you for choosing the built Avante Bar Quake as the audio source for your home. Discover a new level of immersion, cinematic audio experience at home with the built Avante Bar Quake. With a powerful 200W RMS low output, this sound bar brings every aspect of your entertainment world to a new, deeper or more to life. The 5.1 channel sound system provides a balanced sound for your movies, music and even other games and you can experience cinematic sound that renews around you. Plug it into the sound with an array of wired connections, USB and Bluetooth 4.2 wireless technologies. Bring your home to life with the built Avante Bar Quake. We request that this instruction guide be carefully read for proper usage of the device and should be referred to whenever needed.

COMPONENTS LIST

- 1x Soundbar
- 1x Remote Control
- 1x User Manual
- 1x Power Adapter
- 1x HDMI Cable
- 1x Optical Cable
- 1x AV Cable
- 1x USB Cable
- 1x AV Receiver
- 1x Wall Mounting Accessories
- 1x Product Literature
- 1x AAA Battery

USER MANUAL

SAFETY & WARNINGS

Caution

To reduce the risk of electric shock, do not dismantle the product and do not expose the equipment to wet conditions. The unit has no user-serviceable parts.



The lightning flash symbol or exclamation triangle is intended to alert you to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person in contact.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit as in this manual.

Notes

This appliance is not intended for use by persons (including children) with reduced physical abilities or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

1. Do not use the appliance outdoors or in high humidity areas.
2. Do not use the appliance near water, such as bathtubs or high moisture areas.
3. Do not use the device outdoors, such as in any outdoor situation you are not using it with if not using it only for a short while.
4. This appliance is not intended to be connected to means of an external circuit or separate-remote-control system.
5. If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Before repairing this system, check the voltage of the system to use. It is identical to the voltage of your local power supply.
7. The unit should not be reconnected, opening the protection opening with-fuses such as replacement, fuse coils, fuses etc. Make sure that there are not less than 20 mm of space above and at least a 1 cm of space on each side of the unit.
8. The appliance must not be exposed to dripping or spraying. Do not place objects such as water, bottles, liquid etc. on top of the unit.
9. Do not touch the unit and use any other conductive object, including, wetting materials, or sharp objects, that may touch the unit or its internal surface.
10. Do not place the unit on a surface of irregular heat.

11. Do not place this unit in a damp area as the moisture will affect the life of electric appliances.
12. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly-damp cloth.
13. When opening the power plug from the wall outlet, always plug directly on the plug holder slot on the unit.
14. Do not touch the power distribution system carrying a maximum load of 16 A or fused on more than this unit which it also is also, you must operate on the LED TV set after you use the TV in refurbishment. If you use the TV set, keep the unit away from the TV set.
15. Do not place the unit in a damp area, the disconnected device should be kept nearby always.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions. Keep these instructions. Follow all instructions. Read all warnings.
2. Do not use this appliance near water.
3. Clean only with a dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other appliances generating heat that could raise the temperature of the product.
6. Do not open the safety enclosure of a product or grandfather clock. It is dangerous to use the device with the cover open.
7. Protect the power cord from being crushed or pinched. This special attention to the positioning of cords, place secure sockets wherever the point where they exit the product.
8. Do not use attachments/accessories specified by the manufacturer.
9. Do not use the appliance during lightning storms or other such in use.
10. If all warnings to qualified service personnel / servicing is required when the appliance has been repaired, it is safe for example, when the power supply cord or plug is damaged, it must be disconnected or repaired, have been after the appliance is repaired, the unit should be repaired to safe or repaired, do not operate normally, or has been damaged.
11. The step to use to disconnect the device, the disconnected device should remain nearby operating. In order to disconnect the separation from the AC power completely, the AC plug must be removed from the AC outlet.

SOUNDBAR CONTROL PANEL & PORTS

1. Button: Short press to return to previous track, long press to decrease volume
2. Input Button: Short press to sleep, to choose among Bluetooth, Optical, HDMI/ARC, USB and AUX mode.
3. Button: Short press to play / next track, long press to increase the volume.
4. Play/Pause Button: In Bluetooth mode, short press to play/pause streaming. Press when disconnected (microphone).
5. In USB mode, short press to play/pause.
6. AUX: Mode short press to change mode.
7. Volume: Short press for steady 0.5dB, 10dB UP.



SOUNDBAR (REAR)

1. AUX IN
2. OPTICAL
3. HDMI/ARC
4. USB/TYPE-C



REMOTE CONTROL



1. Power Button: Steadily press for Power ON/OFF
2. Play/Pause (Play/P)
3. Next (Next) or Disconnect: Bluetooth, long press the button to disconnect or disconnect Bluetooth
4. INPUT Button: alternate input modes, BT, OPT, HDMI/ARC, USB and AUX
5. Volume+ / Increase the volume
6. Volume- / Decrease the volume
7. Play/Pause Button: In Bluetooth mode, short press to play/pause, long press to play/pause and long press to fast forward
8. Previous Button: In Bluetooth mode, short press to previous track, long press to play/pause and long press to fast backward
9. Stop: / Play/Pause Button: In Bluetooth and USB mode, short press to playback in both modes, short press to refresh/refresh, long press the button to reset the soundbar and refresh Bluetooth memory

10. MUTE: For MUTE (Silence)
11. MUTE: For MUTE (EQ effect)
12. MUTE: For MUTE (EQ effect)
13. EQ: For EQ (EQ Effect)
14. MUTE: Increase Effect
15. MUTE: Decrease Effect
16. MUTE: Increase Bass
17. MUTE: Decrease Bass

REMOTE BATTERY INSTALLATION

1. Open the battery panel.
2. Insert 2 batteries without polarity-reversed.
3. Close the battery panel.
4. Note the battery contact within the slot of the soundbar unit.

Note:

Remove the batteries when the unit is not being used for a long period of time.



WALL MOUNTING

1. Measure 26.41 inches (669mm) and a parallel hole (26 inch each) in the wall.
2. If using a shelf, it should be 1/2 inch in the wall (please required only for side stand).
3. Mark the position in the center hole on the wall and plug the screwdriver in the right (left) side to lock in.



POSITIONING THE SOUNDBAR

Positioning the Soundbar

1. Place the soundbar horizontally on a solid surface such as a TV stand or shelves and align it centrally with the TV screen.
2. For best sound output and great air-flow around the soundbar, please place the soundbar and subwoofer as shown on the right.



USING THE SOUNDBAR

Plug in the power cable of the soundbar to an external power socket. The unit goes into Stand-by mode.

Short press the Power Button on the remote or soundbar control panel to turn on the product.

AUX: Use the provided 3.5mm AUX cable to connect external audio devices to the soundbar. Press the Input button on the remote control to select AUX mode.

HDMI/ARC: Use an HDMI cable to connect the soundbar to your HDMI/ARC enabled device. Press the Input button on the remote control to select HDMI/ARC mode.

OPTICAL: Use an Optical cable to connect the soundbar to your Digital device. Press the Input button on the remote control to select OPT mode.

USB: Insert your USB drive into the USB slot on the soundbar. The soundbar can automatically read USB music. You can also press the Input button on the remote control to select USB mode.

Bluetooth: Press the Input button on the remote control to select Bluetooth mode. Turn on the Bluetooth function on your mobile device, search for "Avante Bar Quake" and select the device to establish pairing.

AC POWER

1. Make sure the power supply is correct and never handle the power cord or its plug with wet hands when plugging into or unplugging from an outlet.
2. Do not touch the power supply or power cord when connecting the power cord to the power outlet or avoid damage to the cord.
3. If a damaged power cord or plug needs an electric shock or the power cord shows a power cord after it has become damaged.

TECHNICAL SPECIFICATIONS

Model	BOAT AAVANTE BT Bar Quake
Technology	Digital (DMP/ARC), Bluetooth v5.0, AUX, USB
Drivers	2.05" x 1.58" + 5.05" x 1.5"
Output Power	200W (RMS)
Frequency Response	40Hz-20kHz
Signal-to-Noise Ratio	> 100dB
Impedance	40Ω-8Ω/2
RF Transmission Range	100 to 1000'
Bluetooth	V5.0
Dimensions	Soundbar: 1480x50x67mm Subwoofer: 1780x50x110mm

