

AIRDOPES 341ANC



boat

AIRDOPES 341ANC

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 341ANC. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times whenever you face any sort of difficulty.

Package Contains:

- 1N Airdopes 341ANC
- 1N Charging Case
- 2N Extra Earmuffs
- 1N Warranty Card
- 1N Type C Cable
- 1N Catalogue
- 1N User Manual
- 1N FAQ Card

USER MANUAL

CHARGING THE EARBUDS

Step: Please insert the earbuds back inside the charging case in correct orientation.

Note:

• Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging.

BASIC FUNCTIONS

• **Ambient Mode, ANC and Normal Modes:** Long touch the right CTC for 3 seconds to switch among Ambient mode, ANC mode and Normal mode for music. By default, the Ambient mode stays active which is for transparency towards the audible surroundings. The cycle goes from ->Ambient->ANC->Normal->

• **Active Noise Cancellation:** Long touch the right CTC again for 3 seconds to activate ANC mode. You can cancel out the external noise and let yourself fully immerse in your playlists. Long touch the right CTC again for 3 seconds to switch to Normal mode (ANC and Ambient OFF).

• **Voice Assistant:** Long touch the CTC on left earbud for 3 seconds to activate the voice assistant.

• **Answer:** Single tap the CTC on either earbud to answer incoming calls.

• **Hang Up / Reject Calls:** Double tap the CTC on either earbud to end / reject calls

• **Play/Pause Music:** Single tap the CTC on either earbud to play or pause a track

• **Next Track:** When playing music, double tap the right CTC to skip to the next song

• **Previous Track:** When playing music, double tap the left CTC to return to the previous song

• **BEAST™ Mode:** Triple tap the left CTC to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Triple tap the left CTC again to turn it off.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming and entertainment experience.

• **ENx™ Tech:** Our ENx™ tech algorithm cancels out the background noise so that you can hear crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.

Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work space; literally anywhere!


Note:

- Volume can only be controlled via the media device

POWER ON (FIRST TIME USER)

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Our IWP™ (Insta Wake N' Pair) Technology enables the earbuds to power on automatically, get connected and enter into the connection mode

OR
Long touch the CTC on both earbuds for 3 seconds to manually power on the earbuds.

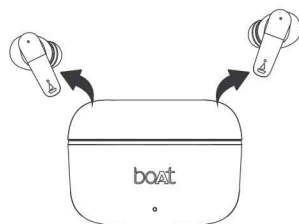

Step 2: Both the earbuds automatically pair with each other. The earbuds enter into the Connection Mode.

CONNECTION MODE

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan.


Step 4: Search for 'Airdopes 341ANC' and pair accordingly.

Congratulations! Your earbuds are now successfully connected via Bluetooth

Note:

• **Pairing Mode:** It lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above-mentioned procedure

• **Airdopes 341ANC remembers previously connected devices;** once switched on and within optimum range, the ear-buds automatically reconnect to the previously connected devices

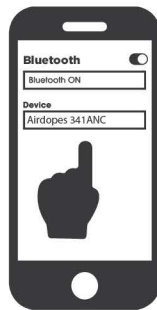

Note:

• To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage
• You cannot skip tracks or return to the previous tracks in Mono mode

VOICE ASSISTANT

Step 1: Long touch the CTC on left earbud for 3 seconds to activate the voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease



Tips: You may try out the following commands,

- What is the weather?
- Play a song
- Set a reminder



Note: If the voice assistant doesn't get triggered then the functionality has to be first enabled via your media device.

SMART POWER OFF

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid

Step 3: The earbuds will automatically switch off (and enter charging mode)



MANUAL POWER OFF

Step 1: Long touch both CTCs for 5 seconds to manually power off the earbuds

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid



FACTORY RESET

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 341ANC

***NOTE:** Before performing reset, clear "Airdopes 341ANC" from pairing device history by forgetting device.

Step 1: Place the earbuds inside the case.

Step 2: While the earbuds are inside the case, long press the Reset Button for 10 seconds until led blinks 5 times on charging case as well as the earbuds (keep the lid open).

Step 3: Close the lid and then re-open it again after a few seconds.

Step 4: Perform a fresh connection attempt and enjoy!


Congratulations! Your Airdopes 341ANC has been Reset.

TROUBLESHOOTING

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset
If the Touch Controls don't seem to respond	After long usage, residual stains and perspiration can affect the touch control area, please use a clean cloth to wipe softly

QUICK GUIDE - FUNCTIONALITIES

- 3 Seconds** ● Long touch left CTC for 3 sec to activate voice assistant
- 3 Seconds** ● Long touch both CTCs for 3 sec to manually power on
- 5 Seconds** ● Long touch both CTCs for 5 sec to manually power off
- 10 Seconds** ● Long press the Reset Button on case for 10 sec to perform factory reset

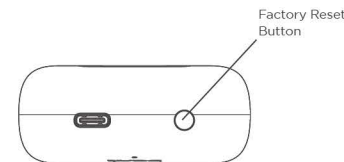

CHARGING THE CASE

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc. When the case gets fully charged, solid green LED turns on to indicate a 100% battery level.

Case	Normal State (Not in charging state)	Charging State Indication
Low battery	RED blinks (3 times) on opening the case lid)	First shows the normal state and then goes into RED breathing (Slow Pulse)
30% - 70% battery	WHITE blinks (3 times) on opening the lid)	First shows the normal state and then WHITE breathing (Slow Pulse)
More than 70% battery	GREEN blinks (3 times) on opening the lid)	First shows the normal state and then Green breathing (Slow Pulse)

Case LED Indication about inserting earbud into the case - This is to indicate TWS is charging from the case (when lid gets closed):

- **CYAN** for 5 seconds to indicate LEFT earbud is charging from the Case
- **PURPLE** for 5 seconds to indicate RIGHT earbud is charging from the Case
- If both are properly charged, **BLUE** for 5 seconds

WARNING

- Please follow the instructions to operate
- Please don't use the ear-buds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life.

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the phone / media device.

