



**Rockerz  
551ANC**


boAt

## ROCKERZ 551ANC


Thank you for choosing boAt Rockerz 551ANC. This manual is meant to guide you through functionalities of the Active Noise Cancelling headphones. Please think of this manual as your guiding map. Knowledge of Bluetooth and device connection is essential for steering of this boAt. Therefore, we strongly advise that this manual is thoroughly read before beginning the product usage, and referred to in times of difficulty.

### PACKAGE CONTENTS

- 1 Over-Ear ANC Headphone
- 2 Type-C Cable
- 3 User Manual
- 4 Warranty card

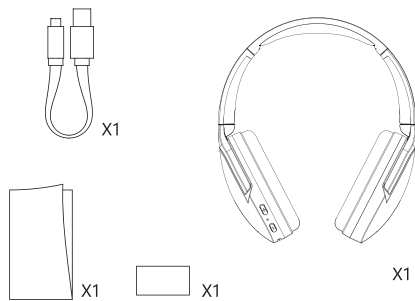

### OVERVIEW

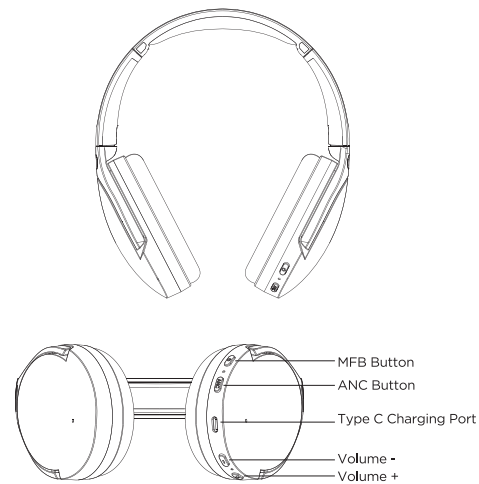

### FUNCTIONS

**Power On:** Press and hold the MFB (Multifunction Button) for 4 seconds to switch the headphone on  
**Power Off:** Press and hold the MFB (Multifunction Button) for 4 seconds to power off the headphone

### BLUETOOTH PAIRING

**Step 1:** Press and hold the MFB for 4 seconds to turn on the headphone and put them into pairing mode, indicated by blue and red LED flashes  
**Step 2:** Open your device's Bluetooth menu and search for 'Rockerz 551ANC' to pair

*Congratulations! The ANC headphone has been paired with your media device.*



### BASIC FUNCTIONALITIES

**Play/Pause:** Short press MFB to play/pause a track  
**Next Track:** Press and hold the Volume Up button for 1 second to skip to the next track  
**Previous Track:** Press and hold the Volume Down button for 1 second to return to the previous track or start the track from beginning  
**Answer call:** Short press the MFB during an incoming call  
**End call:** Short press the MFB during an ongoing call  
**Reject Call:** Double press the MFB to reject any incoming call  
**Redial:** Double press the MFB to activate your device's default Redial  
**Voice assistant:** Triple press the MFB to activate your device's default Voice Assistant  
**Volume Increase:** Short press the Volume Up button in steps  
**Volume Decrease:** Short press the Volume Down button in steps  
**Clear Paired Devices (Reset):** Press and hold the MFB and Volume Down button simultaneously for 4 seconds. The reset gets indicated by red and blue LED flashes  
**Ambient Mode:** Short press the ANC button to activate Ambient Mode from Normal mode  
**ANC:** Short press the ANC button again to activate ANC mode; short press to deactivate the same and switch to Normal mode  
**The Cycle of Operation:** Ambient -> ANC ON -> Normal Mode (ANC OFF)

**EQs:** In order to switch between Signature Sound Mode and Balanced Mode, long press the ANC button for 2 seconds. Signature Sound mode is profoundly rich in bass while the Balanced Mode is the same as its name suggests, which is a balanced sound to offer more vocal clarity.

**ENx™ Tech:** Our ENx™ tech algorithm cancels out the background noise so that you can hear crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.

*Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!*

### CHARGING

Insert one end of the USB Type-C cable into the Type-C interface of the headphone and connect the other end to any USB charger or charging device. While charging the LED stays solid red. Once the headphones get fully charged, the LED turns into solid blue.

*Note: While charging, the headphone cannot be powered on or used. Also, when the battery is low, it gets indicated by red LED flashes.*

### SPECIFICATIONS

Driver Size	40mm*2
Headphone Type	Hybrid ANC
Bluetooth	V5.0
THD	3%
Noise Cancellation	Up to 35dB
Playtime	Up to 100Hours (non ANC mode, 60% volume)
Playtime ANC on	Up to 70 Hours (ANC mode; 60% volume)
Charging Time	1.5 hours
Wireless Range	10m
Charge Interface	USB Type C
SNR	3dB
Frequency	20Hz-20KHz
Weight	206g

### SAFETY CAUTIONS

• Please don't dismantle the product in any way, as this can lead to a fire or electrical breakdown and completely damage the product. As this is extremely unsafe, we ask that any maintenance or servicing of the headphones is done only through a qualified service provider/manufacturer.

• Please do not remove the battery by yourself, this is a task meant to be managed by a service provider/manufacturer. Replacing the current battery with an ill-fitting set can result in a fire or electric hazard, therefore it is strongly advised against.

• Please clean the headphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the headphones are kept away from extremely hot or cold substances.

• Any damage to the headphones that is NOT a manufacturing issue will make the products warranty null and void. Please take the greatest care of your headphones to ensure that no such occurrences take place.

• Do not use headphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required. This is because it is dangerous to drive while wearing headphones as it decreases your ability to hear sounds like another car's horn or an emergency vehicle's sirens.

• You must choose a qualified charger (Output=5V) from a regular manufacturer to charge the headphone. You must charge the headphones if it has not been used for more than 12 months.

**Charging Norms & Guidelines:** -  
 Charger/Adapter at 5V 2A and Standard Cable (35 strands @0.10mm diameter/strand)

boAt **ROCKERZ  
551ANC**



**SOUND  
THAT  
MATTERS**