

FRONT

SPECIFICATIONS

- Earbud weight: 4 grams each earbud
- Speaker driver size: 11mm
- Supported profiles: A2DP, HFP, HSP, AVRCP
- Bluetooth version: 5.3
- Earbud charging time: Up to 60 minutes
- Working voltage: 3.3V to 4.2V
- Standby time: 150 hours
- Playtime: Up to 6 hours at 70% volume
- Bluetooth range: 10 m
- Waterproof rating: IPX5
- Working temperature: -20+60°C

CHARGING CASE SPECIFICATION

- Charging case weight: 34 grams
- Charging port: Type-C
- Number of earbud charges from case: Up to 5 times
- Case charging time: Up to 2 hours
- Total playtime with charging case: Up to 36 hours

PACKAGE CONTAINS

Noise Buds VS102 Plus x 1

Charging Case x 1

USB Type-C charging Cable x 1

S X1 M X1 L X1

POWER ON

The earbuds will automatically turn on when the charging case is opened.

POWER OFF

The earbuds will automatically turn off once placed inside the charging case with the lid closed.

PAIRING

- Open the charging case.
- Turn on the Bluetooth of your device.
- Select Add Device and from the list of devices, select Noise Buds VS102 Plus.
- Your Noise Buds VS102 Plus are now paired with your device and ready to use.
- Note: Your Noise Buds VS102 Plus will automatically connect to the last paired device as soon as you take them out of the charging case.

RESET

- Make sure your earbuds are fully charged.
- On your paired devices, delete/remove Noise Buds VS102 Plus from the list of paired devices in the Bluetooth menu.
- Take out the earbuds from the charging case.
- Tap the right/left earbud for 6 times.
- Place both the earbuds inside the charging case and repeat the pairing process.

CHOOSING YOUR EAR TIP SIZE

Earphones are fitted with medium-sized tips. However, if you find they don't fit perfectly, please remove and try the small and large ear tips. Follow the images and chart to learn how to wear the earbuds in the right manner.

CONTROLS

- Play/Pause**
Tap either earbud twice
- Previous Song**
Long press the left earbud for 2 seconds
- Next Song**
Long press the right earbud for 2 seconds
- Volume Up**
During calls: Long Press the right earbud
During music: Tap the right earbud once
- Volume Down**
During calls: Long Press the left earbud
During music: Tap the left earbud once

BACK

CONTROLS

- Answer/End a Call**
Tap either earbud twice to answer
Tap twice on either earbud to end
- Reject Call**
Touch and hold either earbud for 2 seconds
- Voice Assistant**
Tap either earbud thrice

CHARGING

EARBUDS

Place both earbuds inside the case to charge them.

- Red LED stay Charging
- Red LED off Fully Charged

CASE

Charge the case via the supplied Type-C charging cable preferably from any PC or laptop as compared to a USB charger.

INDICATION

- Red LED Blinking Charging
- Red LED stay Fully Charged

WARRANTY

The warranty covers your Noise product, including accessories against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com.

WARRANTY REGISTRATION

www.gonoise.com/pages/warranty-registration

SUPPORT AND SERVICE

1 YEAR LIMITED WARRANTY

SCAN ME

CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.in

SAFETY FOR YOU AND YOUR Noise Buds VS102 Plus

Follow these tips so you can get the best out of your Noise Buds VS102 Plus

- Do not expose ear buds to liquids, moisture or humidity. It has electronics and a battery in it.
- Don't try to disassemble the ear buds. There are no user serviceable parts inside it.
- Don't use abrasive cleaning solvents to clean it. Wipe it down with a slightly damp cloth if and when necessary.
- Try not to drop the ear buds and keep it away from sharp objects such as keys in your pockets.
- Remove and clean the earbud tips regularly, to ensure that you always enjoy the best sound possible.
- Charge the ear buds from 5V USB ports such as phone chargers and laptops or PCs.
- Do not expose it to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.
- Never listen to music at high volumes or you may permanently damage your hearing.
- Don't throw the ear buds in a fire to dispose it. The internal battery may explode.
- Pay attention to your surroundings and never wear ANY headphones while riding, driving or walking in traffic.

Buds VS102 Plus

Please refer to this manual before using the product