

高：13CM


宽：8CM

1 Safety notice

- 1.1 Please read Manual carefully before you use the projector.
- 1.2 To ensure stable power supply, please use national standard power cable and power cord with grounding.
- 1.3 Please use the right power cord for the projector, improper power cord may cause damage to the projector.
- 1.4 Please do not disassemble the machine yourself, otherwise the company will not undertake warranty service.
- 1.5 Do not look directly at the projector lens while the machine is working, it might cause damage to your eyes.
- 1.6 To prevent clogging the projector vents, do not cover them with cloth, carpet or other materials.
- 1.7 This projector does not have waterproof function, please keep it away from rain, moisture and other items containing liquid such as vase, cup, etc.
- 1.8 To prevent electric shock, please keep the projector away from rain, water or moisture.
- 1.9 Cut off the power supply if do not use this project for a long time.
- 1.10 Use the original foam or other unit-shock material to protect projector if you need transport this projector.
- 1.11 If you find the projector have problems, please contact with the supplier, do not repair by yourself.
- 1.12 To extend the projector life span and protect your eyesight, we suggest you may have a break after 3-4 hours using.


Maintain Indication:
1-year warranty from factory, for more warranty information, please contact with supplier.

2 Interface introduction

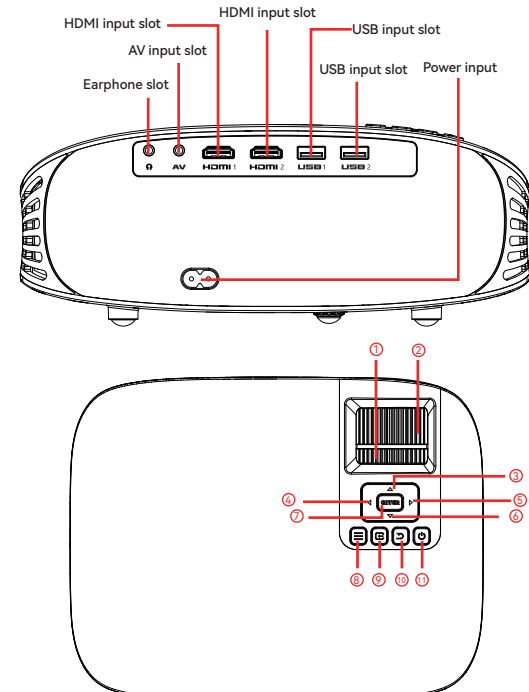


- ① Keystone
- ② Manual focus
- ③ Up
- ④ Left
- ⑤ Right
- ⑥ Down
- ⑦ OK
- ⑧ Menu
- ⑨ Signal Source
- ⑩ Return
- ⑪ Power button

3 Remote control introduction

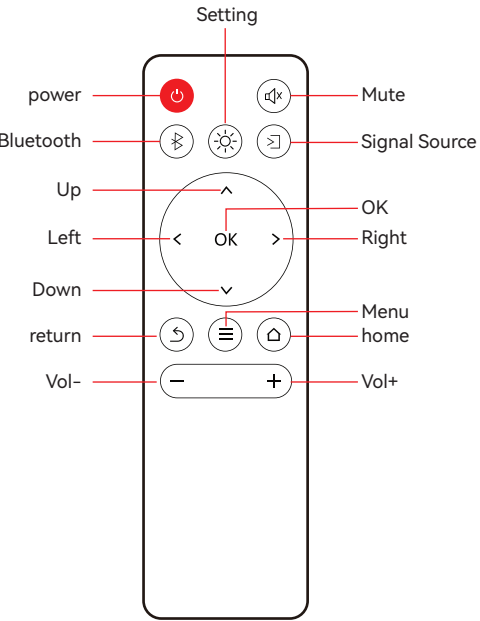


*NOTE:
1. To avoid power shortage please do not mix up with the old and new battery.
2. To avoid battery leakage corrosion please take the battery out if do not use remote control for a long time.
3. When using the remote control please align the remote control signal transmitter to the projector's infrared signal reception window.

4 Projector connection instruction

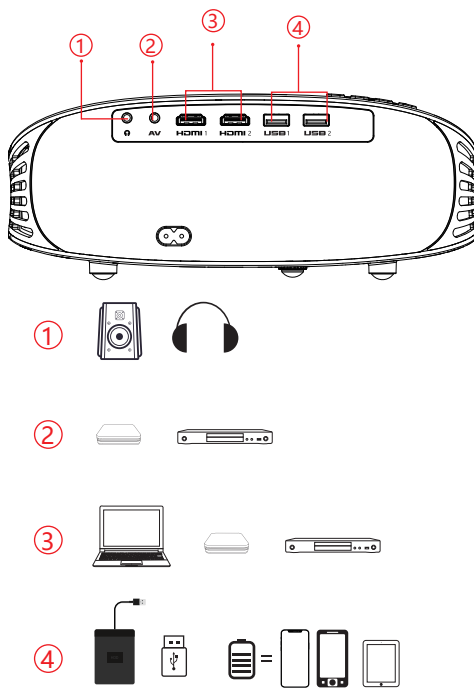

5 Media Connection

4.1 USB Connection
Connect the USB with the content to the projector USB port, select Media, you can select movie, music, photo, text on the list.

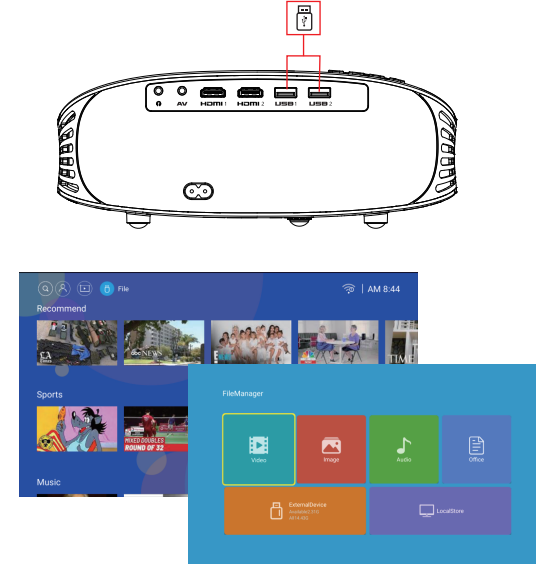

封底

6 Interface connection

 
When inputting the external devices into the projector through the HDMI, AV interfaces, select the channels source needed in this page, after the channel selected, the projector can be connected with the external video source and the content of the video source will be projected.



HDMI
The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.


7 Search page

In this page, you can search and get what you are interested freely.

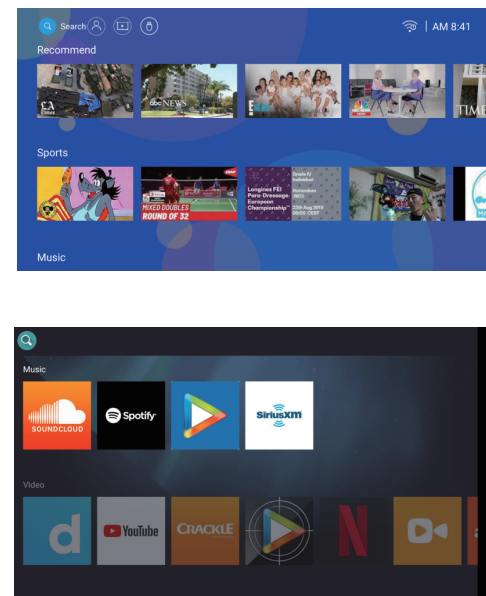

8 Projection setup

Click the button Projection to go into setting page. Select four-point (vertical, horizontal) keystone correction to adjust the projection image angel. Select projection mode (Front-desktop, Front-ceiling, Rear-desktop, Rear-ceiling). Select digital zoom to set projection image zooming (60%-100%).

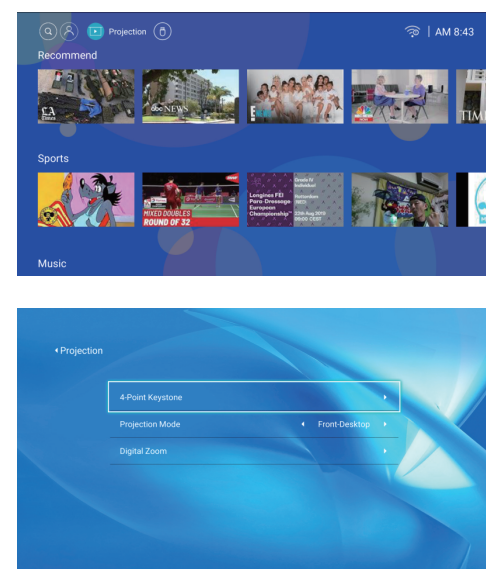

9 Menu setup

Open the homepage, select setting, you can select Wifi setting, Bluetooth setting, Projection image setting, Language setting, Date setting, Application setting, System update and other settings.



10 Warranty Card



封面