



SUREBLEND

SB125XBD

Instruction Manual



Dear Customer,

Congratulations!

Thank you for purchasing your new USHA Hand Blender.

We recommend that you spend some time reading this instruction manual in order to fully understand all the operational features it offers.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Best Wishes



CONTENTS

Know Your Hand Blender

Description of Parts 4

Safety Instructions

Important Safeguards 5

Operate Usha Hand Blender

Using your Hand Blender 6

Attachments and its uses 6

Care and Cleaning 7

Miscellaneous

Trouble Shooting 8


Technical Specifications 8

Warranty Card 9

KNOW YOUR HAND BLENDER

DESCRIPTION OF PARTS

1. Top Cover
2. Speed Selector Switch
3. Blender Shaft
4. Power Cord
5. Hang Loop
6. Blade Assembly

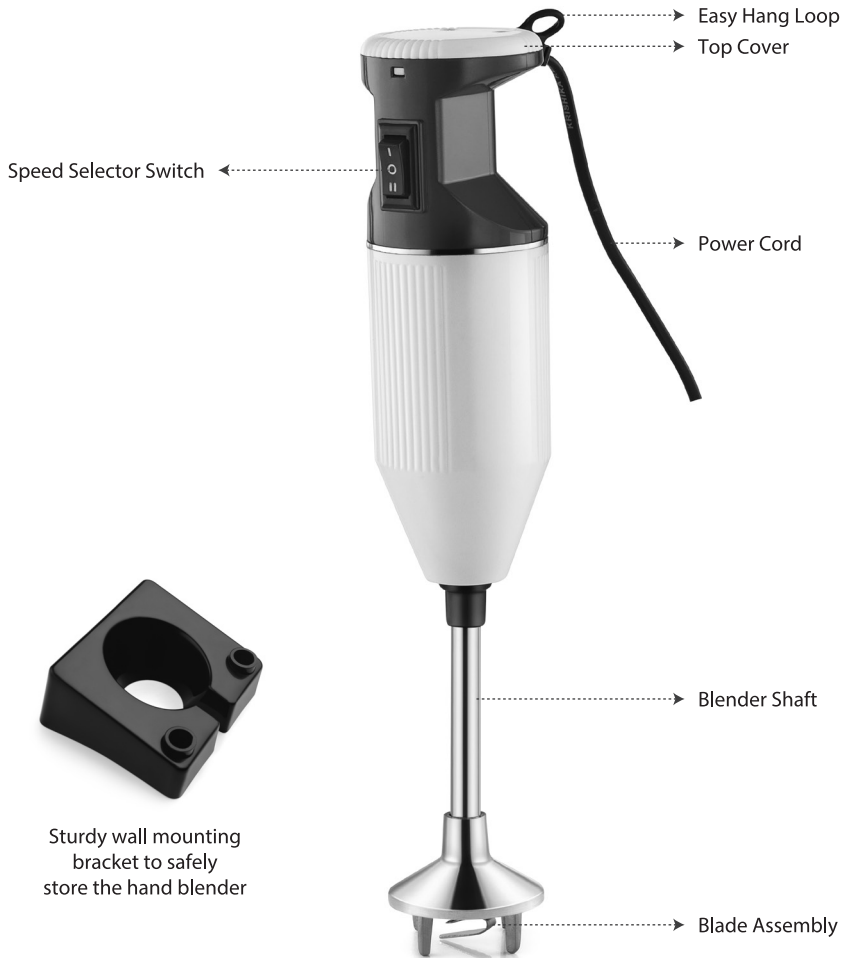

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions carefully before you use the appliance.
2. Before use, check that the voltage of wall outlet corresponds to the one shown on the appliance rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is damaged in any manner. If the supply cord is damaged it must be replaced by the manufacturer or an authorized service agent or a qualified technician in order to avoid a hazard.
4. Unplug from wall outlet when not in use, before putting on or taking out moving component and before cleaning.
5. Do not let cord hang over edge of table or hot surface.
6. Do not immerse upper part of blender which contains motor in water or other liquid or let the cord or plug get wet, you could get an electric shock.
7. Do not operate the blender with wet hands
8. Ensure fingers are kept well away from moving parts. Keep hands out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
9. The use of accessory not recommended by the manufacturer may cause injuries to persons.
10. Do not operate the appliance for other than its intended household use.
11. Do not use the appliance outdoor.
12. Take care if hot liquid is poured onto the blender as it can be ejected out of the appliance/container due to a sudden steaming.
13. Do not blend or mix hot oil, fat.
14. Do not touch the blades while the machine is plugged in.
15. Do not add ingredients to the beaker while the hand blender is operating.
16. Do not continuously operate the blender too long. The motor may overheat. If the surface of the hand blender has become very hot, it may need time to cool down.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18. Close supervision is needed if the appliance is used by or near children.
19. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
20. Never let the appliance run unattended.
21. If the blades get stuck, unplug the appliance before you remove the ingredients that block the blades.

OPERATE USHA HAND BLENDER

USING YOUR HAND BLENDER

IMPORTANT CHECKS :

Ensure that the blender is unplugged from the power outlet before assembling or removing the attachments.

- Clean the blender shaft.
- Check if the power cord is not damaged.
- Make sure your electricity supply is the same as the one shown on the rating plate.

Connecting the attachments:

- Position the blades so that the shaft pin and notch on the blade are aligned and push the blade gently on the shaft till it is fixed in position and you hear the click sound.
- Plug the blender into the wall outlet.
- Hold the blender in your hand so that you can operate the switch with forefinger. Pressing the top part activates low speed and pressing the lower part activates high speed.
- Place the stem into the food to be blended and switch it ON.
- Always unplug the blender from the mains socket before changing and cleaning the blade.



BLADE ATTACHMENTS AND ITS USES



The Blending blade :

The specially designed blade ensures efficient blending. It can also be used for chopping, liquidizing and mixing.

Cut the ingredients into small pieces and place them in a container. Place the stem on top of the ingredients and work it around the container till you get the desired consistency. Please make sure that the container has a flat base.



The Whisking blade :

Use the specially designed blade to whisk, whip, beat and aerate. Use low speed while whisking solids and high speed for whisking liquids.



The Chopping blade :

The specially designed S blade is useful for all types of chopping.

**WARNING:**

Never blend hot oil, fat or meat.

Note: The continuous operating time without the load must be less than 15 seconds when using blender. Max operation duration under high speed per time cannot exceed 1minute. Minimum 10 minutes rest time shall be maintained between two continuous cycles.

- If your blender gets blocked, first stop and unplug before clearing.
- After use, unplug and dismantle
- Always switch off and unplug before cleaning. Please refer to the instruction in the CARE AND CLEANING.

CARE AND CLEANING

- Always switch off the blender and unplug from mains socket before cleaning.
- Take the attached blade off.
- Don't touch the sharp blades.

**CAUTION**

Take care when cleaning the blades as they are extremely sharp. Always wash them under running water

Note: Do not clean any part of the blender in the dishwasher

CLEANING THE HAND BLENDER AND POWER CORD

- Wipe with a damp cloth, then dry.
- Never immerse in water or other liquid or use abrasives

STORAGE

- Store in a cool, dry place with proper ventilation..

MISCELLANEOUS

TROUBLESHOOTING

If your hand blender malfunctions or fails to operate, check if the appliance is plugged in properly. Try unplugging the hand blender and then plug it back. Other than the recommended cleaning, no further user maintenance should be necessary. If for any reason your hand blender should require repairs, do not try to fix it yourself. Please contact your nearest company service centre or call our toll free no. 1800 1033 111

| PRODUCT SPECIFICATIONS AND TECHNICAL DETAILS | |
|--|--|
| Model No. | SB125XBD |
| Wattage | 125 W |
| Voltage & Frequency/Input Voltage | 230 W, 50 Hz |
| Accessories | Blending blade, Chopping blade, Whisking blade |

Note: In view of USHA policy of continuous development, specifications may change without notice.

WARRANTY CARD

This appliance is warranted for 2 year on product against all manufacturing defects from the date of sale. In the event of any complaint, please contact Usha Care at:
Toll Free No. 1800 1033 111.

The warranty is valid only when:

1. The appliance has been installed, used and maintained in accordance with the instruction manual.
2. The warranty card and cash memo duly signed by the authorized dealer are presented with the complaint.
3. The appliance has not been opened or tampered with, by any unauthorized person.

This warranty does not apply for:

1. Damages due to chipping, peeling, plating and denting.
2. Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord.
3. Normal wear and tear of parts.
4. Damage resulting from accidents, mishandling or negligence on part of the customer.

Liability for consequential loss or damage is neither accepted nor implied.

S.No: _____

DATE: _____

CASH MEMO: _____

DEALER'S NAME AND ADDRESS: _____

OWNER'S NAME & ADDRESS: _____

To explore our range of
product and recipe log
on to www.usha.com
www.ushacook.com

USHA[®]
COOK

USHA Care[™]

— Toll free —
1 800-1033-111
usha_care@usha.com

USHA INTERNATIONAL LTD.

Plot No. 15, Institutional Area, Sector 32, Gurugram - 122 001 (Haryana) Tel : +91-124-4583100,

Fax : +91-124-4583200, E-mail : corporate@usha.com

Regd. Office : Surya Kiran Building, 19 Kasturba Gandhi Marg, New Delhi(India) Tel : +91 11 23318114 Fax : +91 11 23318118

ISO 9001 :2015 Certified Company

USHA

© Registered Trademark and Copyright of USHA INTERNATIONAL LTD.



© Registered Trademark of USHA INTERNATIONAL LTD.