



HOUSE of PURITY



Marketed by:  
KENT RO SYSTEMS LTD.  
A-6, Sector-87, Noida-201 305, U.P., India.

Manufactured by:  
**KANZ ELECTRICAL INDUSTRIES**  
16, HIMUDA Ind Area, Phase-IV, Bhatoli Kalan, Baddi  
Himachal Pradesh, India.

For customer complaints,  
contact our customer care officer at:  
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India.  
Call: 92-789-12345  
E-mail: [service@kent.co.in](mailto:service@kent.co.in) or visit us at [www.kent.co.in](http://www.kent.co.in)

Made in India



HOUSE of PURITY

# KENT ELECTRIC CHOPPER-B

THE QUICKEST AND EASIEST WAY TO CHOP

## Instruction Manual



SINGLE JAR  
DOUBLE BLADE

250W

High quality sharp  
stainless steel double  
chopping blade



Plastic  
whisking  
attachment  
included



400 ml  
transparent  
chopping bowl



Anti-skid ring  
at the bowl  
bottom



Easy to chop  
vegetables and whisk  
cream in seconds



Easy to clean  
attachments



Long power cord for  
convenience



Single press  
button operation



Portable and easy  
to use



# Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to KENT!

At the outset, allow us to thank you for your trust in KENT Smart Chef Appliances. At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with the performance of KENT Electric Chopper-B and that it will serve you and your family's need without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarize yourself with the operation and maintenance.

With its robust build and high quality, you can look forward to years of trouble-free service.

In case you require any further information, please contact your nearest KENT dealer or branch.

Bon Appétit!

**KENT RO Systems Ltd.**

## TABLE OF CONTENTS

1. Introduction .....	1
2. Features of KENT Electric Chopper-B .....	1
3. Know Your Product .....	2
4. Using KENT Electric Chopper-B .....	2
5. How to Use .....	3
6. How to Operate .....	4
7. Cleaning and Maintenance .....	5
8. Technical Specifications .....	6

## INTRODUCTION

We, at KENT have always believed that a clean and healthy life is the right of every individual. This conviction is what made us embark on the journey to develop innovative solutions for purifying the water we drink, vegetables and fruits we eat, the homes we live in and the air we breathe.

Our use of innovative technology, supported by a competent service network, has enabled us to create a brand, which has become synonymous to well-being. Continuing with the tradition, we now present the all new KENT Electric Chopper-B, a modern day appliance for the quickest and easiest way to chop vegetables.

A chopper that will make your everyday chopping needs super easy and quick. Kent Electric Chopper-B comes as a rescue from tedious and boring kitchen chopping. Be it coarse, medium or fine, the chopper does it all, with just the press of a single button. It comes with a 400 ml chopping bowl made of food grade plastic that provides visibility to chopping levels. What's more, it also comes with anti-skid ring at the bottom of the bowl for maximum stability and quick & convenient operation.

## FEATURES OF KENT ELECTRIC CHOPPER-B

1. Transparent chopping bowl with a 400 ml capacity
2. Chopper with a power of 250 W
3. High quality sharp stainless steel double chopping blade
4. Plastic whisking attachment included
5. Anti-skid ring at the bowl bottom
6. Easy to chop vegetables and whisk cream in seconds
7. Easy to clean attachments
8. Long power cord for convenience
9. Single press button operation
10. Portable and easy to use

## KNOW YOUR PRODUCT



## USING KENT ELECTRIC CHOPPER-B

- Remove any stickers that might prevent from operating the unit.
- Check the unit for damages. Do not use in case of any damage.
- Before switching on the appliance, make sure that your home's main voltage corresponds to the unit's operating voltage.
- Clean the parts of KENT Electric Chopper-B before using the appliance for the first time (see 'Cleaning & Maintenance' section).
- Make sure all parts are completely dry before you start using the appliance.

## HOW TO USE

### BEFORE USING

Read all instructions carefully and keep them for future reference. When assembling, follow the description in 'Chopping/Whisking Process' carefully.

- In order to avoid damage, ensure that the power supply is in compliance with the rated voltage.
- Before using your Electric Chopper-B, remove all packaging and promotional materials, taking extra care while handling the blade since it is very sharp.
- Carefully remove the plastic cover from the blade.
- Blades are very sharp; always hold them by the upper plastic rod.
- Before using the appliance for the first time, clean it thoroughly as per the instructions given in the 'cleaning and maintenance'.
- Wash the bowl, lid and other attachments in warm, soapy water.
- This multi-purpose chopper is intended exclusively for the processing of small quantities of boneless or seedless foodstuffs or for the whipping of cream.

### CHOPPING PROCESS

1. Place the chopping blade on the blade mounting.
2. Prepare the items to be chopped by roughly cutting them into small chunks so that they fit in the bowl.
3. Place the food to be processed in the bowl.
4. Close the bowl with the lid & place the motor unit on the lid collar. Now plug the cord to the socket and switch it ON.
5. Press the operating switch downwards. The motor starts with normal operating speed.

### WHISKING PROCESS

1. Place the whisking blade on the blade mounting .
2. Pour the liquid to be processed in the bowl. Fill 150 ml at a time.
3. Close the bowl with the lid & place the motor unit on the lid collar .
4. Now plug the cord to the socket and switch it ON.
5. Press the operating switch downwards. The motor starts with normal operating speed.

### HOW TO OPERATE

- Use only Single phase 230 V AC, 50 Hz. power supply.
- Do not operate continuously for more than 30 seconds.
- Do not operate the appliance if the cord, plug or any other part is damaged or malfunctioning. To avoid the risk of electric shock, never try to repair the appliance yourself.
- Handle the appliance and attachments with care; remember the blade is very sharp and should be kept out of reach of children.
- Always make sure the appliance is completely assembled before operating.
- Always operate the appliance with the processing lid in position.
- Always wait until the blade has completely stopped rotating before removing the chopper bowl from the body.
- To disconnect, hold the plug and pull from wall outlet. Never pull on the cord
- Do not try to cover, extend or stretch the mains cable.
- To reduce the risk of electrical hazards, it is recommended not to use an extension cord.

## CLEANING & MAINTENANCE

- **Motor base:** Wipe the motor base with a clean damp cloth after each use.
- **Other parts:** Hand wash the bowl, processing lid, chopping/mixing blade and whisk in hot soapy water using a mild detergent. Rinse and dry thoroughly with a soft cloth. Do not use steel wool, scouring pads or abrasive cleaners, as these will scratch the surfaces.

It is not recommended to wash any parts of this appliance in a dishwasher as exposure to harsh detergents and hot water temperatures will damage and shorten the life of the plastic parts.

**NOTE:** The chopping/mixing blade is very sharp so handle with care at all times.

Use extreme care when washing. To avoid accidental cuts, do not leave blade in sudsy water.

- **Food stains and odours:** Foods such as carrot may leave stains on plastic parts whilst other foods such as garlic will leave a strong odour. To remove either, soak the parts for 5 minutes in 1 litre water with 1/4 cup lemon juice.
- **Storage:** Before storing, thoroughly dry all parts. Store the appliance assembled, with the chopping/mixing blade in place in the bowl, on the kitchen bench or in an easy to access cupboard. Store the blade out of reach of children. Store the appliance upright. Do not store anything on top of the appliance.

**NOTE:** The chopper cutting blade is very sharp, use extreme care when storing.

## TECHNICAL SPECIFICATIONS

<b>Product</b>	<b>KENT ELECTRIC CHOPPER-B</b>
<b>Product Code</b>	116117
<b>Capacity</b>	400 ml
<b>Net Weight</b>	0.95 kg
<b>Total Power Consumption</b>	250 W
<b>Input Power Supply</b>	Single Phase 230 V AC, 50 Hz.