


# ChopMix

Vegetable + Fruit Chopper



## Product Structure

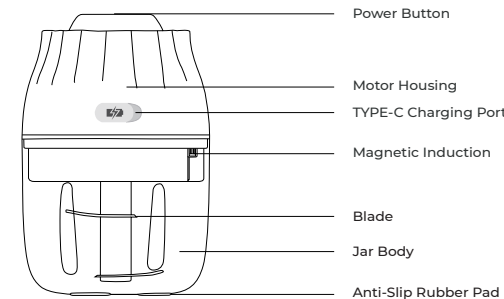

## Indicator Light


Status	Instructions
Charging	Red light stays on
Full Charge	Blue light turns on
While Using	Blue light stays on for 30s
Low Battery	Red light on for 10s

## Instructions For Use

- When using it for the first time, please fully charge the chopper. Once fully charged, the indicator light will turn blue. Please clean the Jar along with the blades before first use.



USB charging

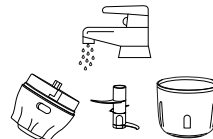

Cleaning parts

 
- Place the blade on the knife shaft of the jar, then fill it with the washed food (Do not exceed the 250 ml mark)
- After installing the Motor housing, the blue LED light will flash 5 times.
- Press the power button to start. once started press and hold for 30 seconds. The chopper will stop functioning automatically after 30 seconds.
- If the food is not refined enough, you can start the chopper again by pressing the power button. Different ingredients will require different chopping time.



Install the blade



Put food



Install the motor



Press the button to start work

## Precautions

- This product is a portable food chopper, please charge the product fully before using it for the first time.
- Before adding food, please make sure that the blade is installed in place and runs freely.
- This product cannot be used to process foods that are extremely hard for eg: Coffee beans, Soybeans, Rice, Ice cubes, or Frozen foods.**
- When the product is working, it is strictly forbidden to touch detachable parts such as blades, motors, etc., so as not to hurt yourself or damage the product.
- This product needs to rest for 5~10 minutes after repeated high-intensity work before it can be used again.
- Please do not put all parts of this product in the dishwasher for cleaning.



**Note: This product should be stored in a place out of reach of children to prevent accidental injury.**

## Cleaning and Maintenance

- After using the product, please clean the Motor housing, Blade, and Jar as soon as possible.
- The Blade and Jar can be washed directly and the Motor housing can be wiped off using a damp cloth.
- When cleaning the product, you can put an appropriate amount of detergent in the clean water, use a clean towel to clean it, and use warm water for better results
- It is strictly forbidden to carry out high temperature disinfection of all parts of this product.
- After cleaning the product, please wipe or dry the parts of the product, then reassemble and store it.
- If the product is not used for a long time, please charge and maintain the product once within 1-2 months.

## Features

- Unique appearance and water resistant design.
- Double electronic induction safety switch design, click the button to control the shredding.
- Food grade Tritan jar, food grade SS 304 stainless steel blade, easy to clean.
- Detachable parts, can be washed directly.

## Product Specifications

Model Number: iG-1064

Jar Body Material: Food Grade Tritan

Host Material: ABS

Blade material 304 Stainless Steel

Working Current: 6A

Working Voltage: 3.7V

Battery Capacity: 1500 mAh

Jar Capacity: 250 ml

Motor Speed: 1600 rpm

Charging Mode: TYPE-C Charging Port

## Failure Analysis

Failure phenomenon	Indicator light	Cause Analysis	Troubleshooting
After installing the host, press the power button and if it does not work	Red and Blue flash alternately for 3S	The host and the jar are not aligned properly	Install and align the host and jar
	Red light will stay on for 3S	Low battery	Charge the host
	Blue light is on	The motor is damaged or stuck	After screwing the motor shaft, if the product does not work, please send it to the service center for inspection
Host charging	Red and blue flash alternately for 3S	Check whether the charging cable is loose	Replace with a new charging cable
Blades stuck	Red and blue flash alternately for 3S	The blade is entangled or stuck	Take out the host, take out the ingredients, cut into small pieces or put less ingredients.

**Note: This product cannot be used to process foods that are extremely hard for eg: Coffee beans, Soybeans, Rice, Ice cubes, or Frozen foods.**



Imported & Marketed By:  
iGear Tech Pvt. Ltd.  
204, Sai Corporate Park,  
Laxmi Nagar, Off Link Road,  
Goregaon West, Mumbai - 400104.  
In case of consumer complaints:  
Toll free number - 1800 22 8495  
Email: sales@igear.asia  
(Between 10am to 5pm, Mon- Fri)