



- 1.1 Please read Manual carefully before you use the
- 1.2 To ensure stable power supply, please use national standard power cable and power cord with grounding.
- 1.3 Please use the right power cord for the projector, improper power cord may cause damage to the
- 1.4 Please do not disassemble the machine yourself, otherwise the company will not undertake warranty
- 1.5 Do not look directly at the projector lens while the machine is working, it might cause damage to your eyes. 1.6 To prevent clogging the projector vents, do not cover
- them with cloth, carpet or other materials. 1.7 This projector does not have waterproof function,
- please keep it away from rain, moisture and other items containing liquid such as vase, cup, etc.
- 1.8 To prevent electric shock, please keep the projector away from rain, water or moisture.
- 1.9 Cut off the power supply if do not use this projector for
- 1.10 Use the original foam or other unit-shock material to protect projector if you need transport this projector.
- 1.11 If you find the projector have problems, please contact with the supplier, do not repair by yourself.
- 1.12 To extend the projector life span and protect your eyesight, we suggest you may have a break after 3-4 hours using.

2 Interface Introduction

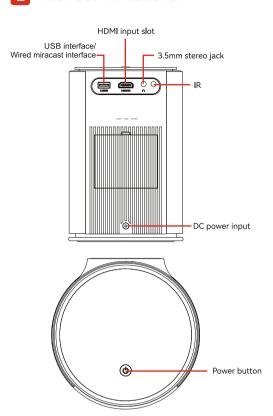

3 Remote Control Introduction

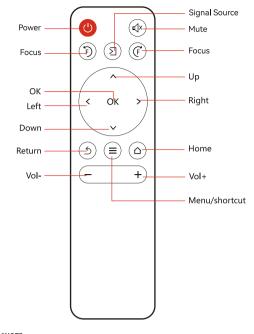


- 1. To avoid power shortage please do not mix up with the old and new battery. 2. To avoid battery leakage corrosion please take the battery out if do not use remote control for a long time. 3. When using the remote control please align the remote control signal
- transmitter to the projector's infrared signal reception window. 4. For better usage kindly use the remote from the backside of the projector.

4 Media Connectivity

4.1 USB Connection


Connect the USB flash drive with the content to the projector's USB port, select Media, you can select movie, music, photo, text on the list.

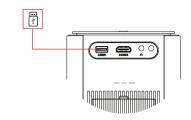



4.2 HDMI connection


HDMI interface can connect to computers and other devices with HDMI output interface. After connection, choose the HDMI channel.

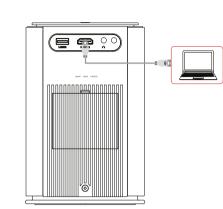

Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

4.3 3.5mm AUX

Connect 3.5mm earphone and speaker equipment.

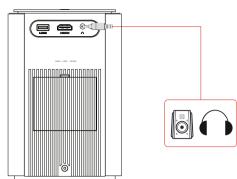

5 Projector Connection Introduction

HDMI

The terms HDMI and HDMI High-Definition Multimedia

PORTRONICS



PORTRONICS

www.portronics.com

For Support Email : help@portronics.com Contact No.: +91 9555245245, 011-42413131 (Working Hrs.: Monday - Saturday 10:00am - 6:00pm)



E-Waste Management E: info@3rrecycler.com For E-Waste & ROHS compliance refer to www.portronics.com/ewaste

6 Search Page

On this page, you can search for various content for viewing.


*NOTE: For best view/output use the projector in a dark room.





7 Setting up Menu

Open the homepage, select setting, you can change settings for Wifi, Bluetooth, Image projection, Language, Date, Application, System updates and others.

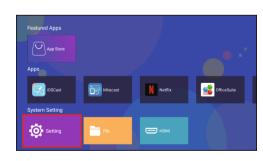




8 My Application

Application Page

On the homepage, you can choose applications for viewing content like sports, games, music and so on. Delete applications If you are not interested by a long press of the \equiv button



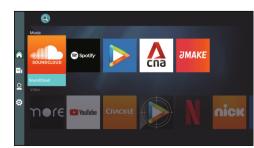

9 Electronic Focus to adjust Image Clarity

To activate electronic focus feature, place the projector horizontally and press both keys (5) (6) to adjust the image clarity.



10 Product Specifications

Brightness (Lumens)

Imaging technology	TFT LCD
Resolution	1280*720
Maximum compatible resolution	1920*1080
Light	LED
Focus mode	Electronic focus
Projection distance	1.2-5.7 M
Screen size	40-200 inches
Aspect ratio	16:9
Power input	19V/3.42A
Input	USB*1/HDM I *1
Output	Earphone
Speaker	4Ω3W*2
Unit size	Ø118*179mm
Net weight	0.79KG
Projector radio	1.36:1

