

X45

 
User Manual

BOULT


Know your X45



Indicator Light



Input Type - C
Charging Port

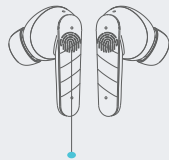 

Multifunctional
Touch

What's in the box ?

- True wireless earbuds case
- 2 earbuds
- USB Charging Cable
- User Manual
- Warranty card
- Extra pair of extra tips

Product specification

Product Name - TWS Bluetooth Headset

Model - Boulton Audio X45

Bluetooth Version V5.3

Speaker - 13mm

Bluetooth Range >10m/33ft (without any obstacles)

Earbuds Charging Time 0.5 Hours

Case Charging Time 1.5 Hours

Frequency Range 20Hz-20KHz

Technology HSP/HFP/A2DP/AVRCP

Input DC5V=1A

How to use your X45 ?

·Power On/Off

Power on: Press & hold on the left/right earbud's MFT for 2 seconds

Power off: Press & hold on the left/right earbud's MFT for 5 seconds

·Connect

To connect earbuds, open the charging case, search and connect with "Boulton Audio Airbass" in your mobile Bluetooth

settings. You will hear connected sound once earbuds are connected with your mobile. From the next time whenever you open the charging case, earbuds will automatically connect back with previously paired phone. If it doesn't connect automatically, go to mobile Bluetooth settings, search for the device name "Boulton Audio Airbass" and then pair your device.

·Play/Pause Music

Single tap on left/right earbud's MFT

Play previous song: Double tap on left earbud's MFT

Play the next song: Double tap on right earbud's MFT

·Calling

Receive: One tap on left/right earbud's MFT

End call: Double tap on left/right earbud's MFT

Reject calls: Double tap on left/right earbud's MFT

·Voice Assistance

Long press on left/right earbud's MFT for 3 seconds

·Low Battery Warning

When the battery of the earbuds runs low, there'll be a beep to remind you. The earbuds will automatically turn off when they run out of power.

High Fidelity Acoustics



·Charge Earbuds

 
Place your earbuds in the charging case and close the lid. The earbuds will automatically start charging.

·Reset

If your earbuds accidentally only get one earbud to work, or fail to pair, please reset the earphone.

1. Delete all "Boult Audio Airbass" Bluetooth records on the phone, and turn off Bluetooth
2. Put earbuds into charging case, and then take out to pairing modes, tap L & R MB 5 times simultaneously, hear "DU" prompt voice to clear all pairing.
3. Put earbuds into charging case.

Signal Transmission Distance

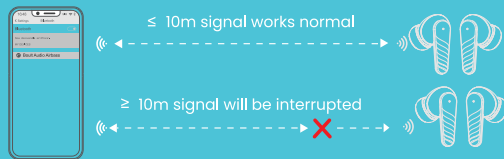

Do's & Dont's

Do not use corrosive detergents to clean the product.

Store the product in a dry environment & charge the earbuds' case at least once a month.

Please raise the volume to the appropriate level while using the product. High volume may cause a risk of hearing loss.

Do not dismantle or use the product near fire or in high-temperature environment. If expansion occurs, discontinue using the product.

Maintenance Instructions

Warranty is valid/invalid only basis of the below criteria:

The product should be purchased through legal and formal channels to be applicable for warranty.

Damaging the product intentionally/unintentionally, or due to natural disasters, etc. is not covered in the warranty.

