

 CROSSBEATS

EPIC

LITE


USER MANUAL





**TOUCH ENABLED EARBUDS
WITH ANC MODE**



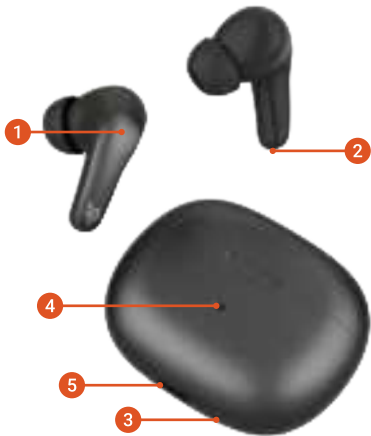

OVERVIEW

1. Touch area
2. Charging pin earbud
3. Reset button
4. LED lights on case
5. USB-C charging port

1



Take out the earbuds from the charging case

2



The earbuds will auto power ON

3



Search for EPIC-LITE in your phone's Bluetooth list

4



Click to connect

FIRST TIME PAIRING

MONO PAIRING & RESET

MONO PAIRING



For mono mode, take out either of the earbuds when already paired



The music will automatically play in that particular earbud

RESET



Place the earbuds inside the charging case and with the lid open press and hold the button on the charging case until the green light flashes for 4 times.

Note:  Tap  Touch and hold



L

R



NOTE: Available only on devices that have Voice Assistant enabled



CONTROLS

DIFFERENT SOUND MODES



NORMAL MODE

AMBIENT MODE

**ACTIVE NOISE
CANCELLING MODE**

NOTE: Press and hold on the either of the earbuds for 2 seconds to switch between the different modes.



Connect and use the TYPE-C cable provided in the box for charging

CHARGING

LED INDICATORS ON CASE





- Red light flashes for 4 times when earbuds are replaced in the charging case.
- Full battery – Green light flashes for four seconds
- Low battery – Red light flashes for four seconds
- Ultra-low battery – Red light flashes for five times

Press the reset button on the charging case once to check the battery level.

- < 20% - Red light remains on
- > 20% – Green light remains on



 +91 96112 93293

 +91 96112 93293

 support@crossbeats.com