Additional Information

Specifications

Replacement of battery



Design and specifications are subject to change without notice.

Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110
 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.





HIGH POWER SPEAKER SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <u>http://www.lg.com</u> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL RNC7



www.lg.com Copyright © 2023 LG Electronics Inc. All Rights Reserved.

7 🐙 🥕 🖉

Top panel



1 (Standby) Turns the power on or off.

2 USB REC / DEMO

- Records to USB.
- Stops recording.
- In power off status, if you press USB REC / DEMO, show demo mode.

3 USB 1 Port

- You can play sound files by connecting the USB device.
- 4 Display window
- 5 USB 2 Port
- You can play sound files by connecting the USB device.
- 6 F (Function) Selects the function and input source.

7 LIGHTING Selects the lighting mode.

8 ⊕TWIN

Connects two units for TWIN mode in WIRELESS PARTY LINK.

9 KM/KM (Skip/Search) - Skips backward or forward.

- Searches for a section within a file. - Selects the radio stations.
- **⋈** (Play/Pause)
- Starts or pauses playback.
- Selects stereo/mono.
- Bluetooth connection lock (BT LOCK): Select the Bluetooth function by pressing ${\bf F}$ repeatedly. And long press ${\bf \bowtie I}$ to limit Bluetooth connection to only BT and LG TV.

AUTO DJ

Selects the AUTO DJ mode.

- VOL (Volume) -/+ Adjusts speaker volume.
- MIC (Microphone) / GUITAR -/+
- Adjusts Microphone volume or Guitar volume.

10 🛞 (Auto Music Play)

Plays the audio currently playing by tagging the mobile (with "LG XBOOM" App) to this unit. (Android Only)

11 VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources. EQ

Chooses sound impressions.

12 CLUB, DRUM, USER (DJ PAD)

Selects CLUB, DRUM or USER sound effect to mix. (If you want to use USER, you have to register a source with "LG XBOOM" app. (Android Only)) 1, 2, 3 (DJ PAD)

Press a desired sound pad.

13 MIC (Microphone) ECHO Selects ECHO mode.

VOCAL EFFECTS

Selects various vocal effects mode.

KEY CHANGER (b/#) Changes the key to suit your vocal range.

14 Remote sensor

15 SPECIAL EO / BASS BLAST (or BASS BLAST+)

- Chooses special equalizer - Press and hold to select BASS (or BASS+) effect directly.

SEARCH

Moves to folder or file in selection mode.

ОК Selects a folder when searching a file.

USER EQ

Selects the equalizer created by your own.

Multi jog

- Searches a folder or a file. - Turns clockwise or counterclockwise to control the USER EQ level.

- Chooses special equalizer.

Controller App



Android iOS Download the LG XBOOM App to your device.

LG Sound Sync



For more information, download the online owner's manual. http://www.lg.com

Front panel / Rear panel





- 3 OPTICAL IN: Connect an optical device.
- 4 GUITAR IN: Connect a guitar.
- 5 MIC (Microphone) IN: Connect a microphone.
- 6 ANTENNA (FM)
- 7 AC IN socket

Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

1

1 Lighting 2 Remote sensor