

A **TATA** Product

croma

# USER MANUAL

## CROMA COFFEE MAKER

MODEL NO: CRSKAF001sCM06

Power Supply: 220-240 VAC, 50-60Hz

Rated Input Power: 600W



A **TATA** Product

Croma Customer Care

Infiniti Retail Limited, Unit No 701 and 702, 7<sup>th</sup> Floor, Kaledonia,  
Sahar Road, Andheri (East), Mumbai - 400 069, India.

Customer Care Number: 1860-266-27662

Email: [customersupport@croma.com](mailto:customersupport@croma.com)

Thank you for selecting Croma Coffee Maker

## WARRANTY CARD

**Name of the Product:**  
**CROMA COFFEE MAKER**  
**Model No.: CRSKAF001sCM06**

Warranty on your CROMA COFFEE MAKER

- This warranty applicable on this product for a period of Twenty-Four (24) months from the date of purchase.
- In case of commercial usage of this product, warranty period would be limited to 90 days only.
- This warranty will be terminated automatically after the period of 24 months from the date of purchase, even if the product was not in use during the warranty period for any reason.

**Infiniti Retail Limited, ("IRL")** guarantees the product purchased to be free from defects resulting from the use of faulty parts or poor workmanship during its manufacture, subject to terms of the limited warranty ("**Warranty**").

These warranty instructions are detailed on our website and can be accessible through the link:

<https://www.croma.com/lp-warrantyon-croma-exclusive>

**If you experience any difficulty in operating this product or require any service assistance, please contact:**

Croma Customer Care, Infiniti Retail Limited, Unit No 701 and 702, 7<sup>th</sup> Floor, Kaledonia, Sahar Road, Andheri (East), Mumbai - 400 069, India.

**Customer Care Number:** 1860-266-27662

**Email:** customersupport@croma.com



- Before operating this product, please read & follow the instructions in this manual.
- Actual product may differ from the picture shown.
- All information in this manual is based on the latest product information available at the time of printing of this manual. However due to improvements or other changes, there may be discrepancies between information in this manual and actual product.
- While all due precautions are taken in printing this manual, Infiniti Retail Limited assumes no responsibility for errors or omissions.
- Please keep this manual safe for future reference.

## Technical Specifications

Model No.	CRSKAF001sCM06
Rated Power	600 W
Voltage	220-240VAC, 50-60Hz
Coffee Making Capacity	750 ml
Maximum Cups of Coffee	6 Cups
Filter Material	Nylon
Drip Stop Function	Yes
Detachable Filter	Yes
Brewing Time	7 Minutes
Hot Plate Keep Warm Function	Yes
Water Level Indicator	Yes
Carafe Material	Borosilicate Glass
Heat Resistant Lid	Yes
Auto Cut-Off	Yes
Cord Length	0.7- 0.75 M

## E-Waste Management (Disposal Policy)



This crossed waste bin symbol indicates that at the end of the life span, the product must be disposed separately from other electronics or household waste. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

For proper treatment, recoveries, recycling, etc., this product needs to be taken to the designated collection points, where they will be accepted on a free of charge basis. Alternatively, user can also return the product to Croma Stores on the purchase of a new product.

Improper disposal of this product by the user involves the application of administrative penalties provided by law. Please contact Croma Customer Care at 1860-266-27662 for further details on your nearest designated collection point.

## Product Packaging

Product packaging has the purpose of protecting an appliance from damage that might occur during transportation. The materials used for packaging are recyclable and are selected on the basis of respect for the environment and ease of disposal, with the aim of material reintegration to the production cycles. This mechanism not only allows reduction of the volume of waste but also makes a more rational usage of non-renewable resources possible.

## Product Features



750 ml carafe brews up to 6 cups of coffee at once



LED power switch lights up when the Coffee maker is switched on



Elegant design with water level indicator



Detachable filter for ease of Cleaning and Maintenance



Drip stop to pour a cup of Coffee whenever you like



## Package Contents

This package contains the items mentioned below. In case any of these components are missing, contact Croma Customer Care at 1860-266-27662 immediately.


Main Unit : 1 N                      User Manual : 1 N                      Glass Carafe : 1 N

Filter : 1 N                      Funnel : 1 N

## Safety Instructions

While using this product, basic safety precautions should always be observed, including the following:

1. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
2. To protect against fire, electric shock and injury to persons do not immerse cord or plug in water or other liquid.
3. Close supervision is necessary when your appliance is operating. Do not let the appliance be on standby state for a long time.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Croma Customer Care for examination, repair or adjustment.
6. The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
7. Do not use outdoors.
8. Place the appliance on a flat table or surface.
9. Do not let cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use & place it in a dry environment.
12. Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
13. To disconnect, turn the switch to 'O', remove plug from wall outlet. Always hold the plug. Do not pull the cord.
14. Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam.
15. Do not leave an empty carafe on the keep warm plate otherwise the carafe is liable to crack.

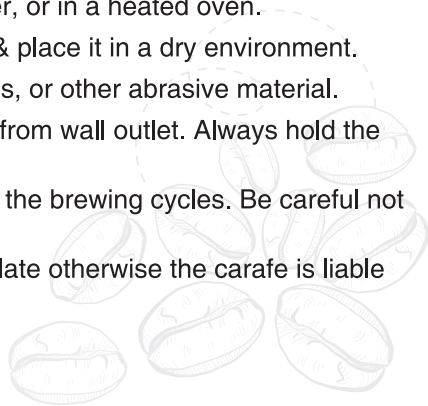

## Tips For Great-Tasting Coffee

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CLEANING AND MAINTENANCE" section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee' flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.



## Cleaning and Maintenance

**CAUTION:** Be sure to unplug your coffee maker before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is removed from wall outlet.


1. Clean all detachable parts after each use in warm sudsy water.
2. Wipe the exterior surface of unit with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.

**NOTE:** Do not attempt to clean the inside of water tank, as this will leave a residue of lint and may clog your coffee maker, simply rinse with cold water periodically.


## Removing Mineral Deposits

To keep your coffee maker operating efficiently, you should periodically clean away the mineral deposits left by the water according to the water quality in your area and the frequency of use.


1. Fill the water tank with water and de-scaler to the max level as indicated on the water level gauge. The ratio of water and de-scaler is 4:1, the detail refers to the instruction of de-scaler. Please use “household de-scaler”, you may also use the citric acid instead of the de-scaler (the one hundred parts of water and three parts of citric acid).
2. Place the glass carafe on the warming plate.
3. Make sure filter (without coffee powder) and funnel are assembled in place.
4. Turn on the appliance and allow it the solution to “brew” by following the operation above.
5. Once the brewing is complete, switch off the appliance.
6. Leave the solution stay for 15 minutes and repeat step 3-5.
7. Turn on the appliance and turn off until the water tank is completely empty.
8. Rinse the appliance with water at least 3 times.

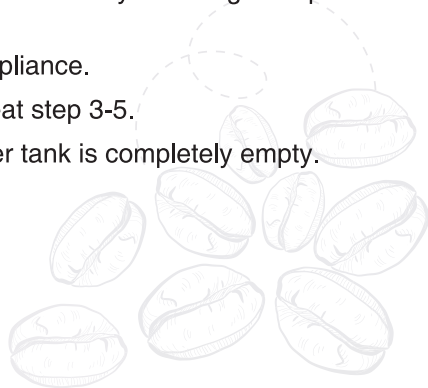

16. Never use the appliance if the carafe shows any signs of cracks or carafe having a loose or weakened handle. Only use the carafe supplied with this appliance. Use carefully as the carafe is very fragile.
17. Some parts of appliance are hot when operated, do not touch with hand. Use handles only.
18. Do not set a hot carafe on a hot or cold surface.
19. Do not let the coffee maker operate without water.
20. Do not use a cracked carafe or a carafe having a loose or weakened handle.
21. Make sure the carafe is placed on the warming plate correctly during the brewing.
22. To reduce the risk of fire or electrical shock, do not remove the bottom cover. No user serviceable parts inside. Repair should be done by Croma Authorised Service Personnel only.
23. The carafe is designed for use with this appliance. It must never be used on a range top.
24. This appliance should not be used by children aged 15 or below and by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
25. Children should be supervised to ensure that they do not play with the appliance.
26. This appliance is intended to be used in household and similar applications such as:
  - a. Staff kitchen areas in shops, offices and other working environments.
  - b. Farm houses.
  - c. By clients in hotels, motels and other residential type environments.
  - d. Bed and breakfast type environments.

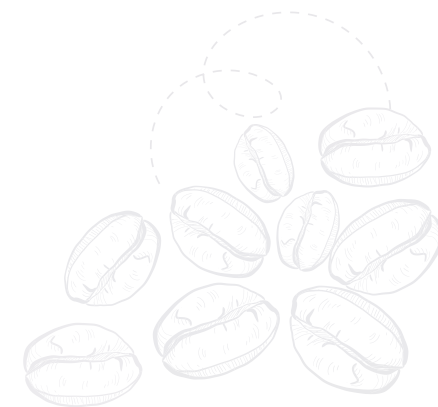

## Know your Coffee Maker

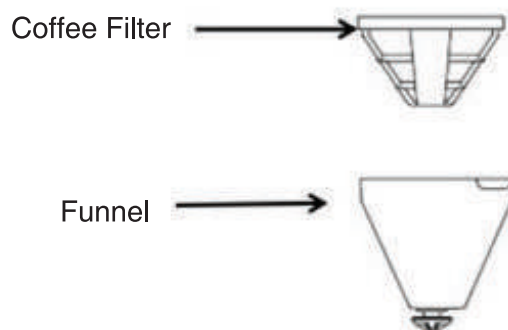

## Before Using your Coffee Maker

- Check that all accessories are complete and the unit is not damaged.
- Fill water into water tank to the MAX level on the water gauge and brew water without coffee powder, then discard the water.
- Clean and dry all detachable parts thoroughly.

## Operating your Coffee Maker

Before connecting to the power supply, make sure that the appliance is switched off.

1. Open the top cover and fill the water tank with drinking water. The water level should not exceed MAX level as indicated on the water level gauge.
2. Place the funnel into the funnel support of coffee maker, make sure it is fit correctly, otherwise the top cover may not close properly.
3. Place the filter into the funnel.
4. Add coffee powder into the filter. Usually a cup of coffee needs a spoon of coffee powder, but you may adjust according to personal taste. Close the top cover completely.
5. Place the glass carafe with lid closed on the warming plate.
6. Plug the unit into an outlet.
7. Press power switch to the "I" position, the indicator in it will be illuminated and the appliance will begin working. The brewing process can be interrupted by pressing the switch to the "O" position at any time and the indicator in it will go off, indicating your coffee maker is off. Once the switch is pressed again to the "I" position, the appliance will continue to brew.

**Note:** The appliance is designed with a pause-and-serve feature, if you wish, at any time during brewing cycle, you can temporarily remove carafe to pour and serve a cup of hot coffee. The brewing cycle will not be interrupted and no coffee will drip from the appliance, simply replace glass carafe onto warming plate to restart the brewing cycle, however, do not remove glass carafe for longer than 30 seconds & never return empty carafe onto warming plate when it is still warm. You can take out carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.

8. Remove the carafe to serve when finish brewing (about one minute later after the coffee stops dripping out.).

**Note:** The coffee you get will be lesser than the water you have added, as some water is absorbed by grounded coffee.

9. Once the brewing is finished and you do not want to serve immediately, let the appliance be ON and the coffee will be kept warm on the warming plate. For an optimum coffee taste, serve it just after brewing.
10. Always turn the coffee maker off and disconnect the power supply when not use.

**Note:** Pay attention while pouring the coffee, as the temperature of coffee brewed is high.