

A **TATA** Product

**croma**

## USER MANUAL

### CROMA HAND BLENDER

Model number: CRAK4176

Power Supply: 220-240VAC, 50/60Hz

Wattage: 200W



**Thank you for selecting Croma Hand Blender**

*\*\* Actual product may differ from image on manual*

A **TATA** Product

Croma Customer Care

Infiniti Retail Limited, Unit, No. 701 and 702, 7<sup>th</sup> Floor, Kaledonia,  
Sahar Road, Andheri (East), Mumbai-400 069, India.

Customer Care Number: 7207-666-000

SMS:CROMA to 56677

Email:customersupport@croma.com

## E-Waste Management (Disposal Policy)



This Symbol on a product and/or accompanying documents means that the used electrical and electronic products should not be mixed with general household waste. For proper treatment, recoveries, recycling, etc., this product needs to be taken to the designated collection points, where they will be accepted on a free of charge basis.

Alternatively, user may be able to return the product to Croma Stores on the purchase of a new product. Disposing off this product correctly will help save valuable resources and prevent any potential negative effect on human health and the environment, which could otherwise arise from inappropriate waste handling.

Please contact Croma Customer Care at 7207-666-000 for further details on your nearest designated collection point. Penalties may be applicable for incorrect disposal waste, in accordance with the Indian legislation.

## Product Packaging

Product packaging has the purpose of protecting an appliance from damage that might occur during transportation. The materials used for packaging are recyclable and are selected on the basis of respect for the environment and ease of disposal, with an aim of material reintegration to the production cycles. This mechanism not only allows reduction of the volume of waste but also makes a more rational usage of non-renewable resources possible.

## Product Features

- Powerful 200W for faster blending.
- Stainless Steel blades for perfect blending experience.
- Sleek ergonomic design.
- Detachable plastic shaft for convenient cleaning.
- Convenient push button for easy operation.

## Package Contents

This package contains the items mentioned below. In case any of these components are missing, contact Croma Customer Care at 7207-666-000, immediately.

- |                  |     |
|------------------|-----|
| 1. Main Unit -   | 1 N |
| 2. User Manual - | 1 N |

## WARRANTY CARD

**Name Of The Product: Croma Hand Blender**

**Model No: CRAK4176**

### Warranty Period

- This warranty applicable on this product for a period of Twelve (12) months from the date of purchase.
- In case of commercial usage of this product, warranty period would be limited to 90 days only.
- This warranty will be terminated automatically after the period of 12 months from the date of purchase, even if the product was not in use during the warranty period for any reason.

**Infiniti Retail Limited, ("IRL") guarantees** the product purchased to be free from defects resulting from the use of faulty parts or poor workmanship during its manufacture, subject to terms of the limited warranty ("**Warranty**").

These warranty instructions are detailed on our website and can be accessible through the link:

<https://www.croma.com/lp-warrantyon-croma-exclusive>

**If you experience any difficulty in operating this product or require any service assistance, please contact:**

Croma Customer Care, Infiniti Retail Limited, Unit No 701 and 702, 7<sup>th</sup> Floor, Kaledonia, Sahar Road, Andheri (East), Mumbai - 400 069, India.

**Customer Care Number:** 7207-666-000

**SMS:** CROMA to 56677

**E-mail:** customersupport@croma.com



cloth dipped in vegetable oil helps remove discoloring.

- Remove the blades before cleaning.
- Clean the blending parts (blades) in warm soapy water and dry thoroughly.
- Clean the main housing with a damp cloth and dry thoroughly.

## Cleaning Power Handle

- Wipe with a damp cloth, and then dry.
- Do not immerse in water or use abrasives.

## Cleaning Blender Shaft & Blade

- Wash the blade & shaft in warm, soapy water.
- Let it dry completely. Store it either horizontally or with the blade pointing upwards. Make sure the blade unit is completely dry before you store or re-attach the blender shaft.

## Troubleshooting

- Check if the plug is in its socket and the switch is in the 'ON' position.
- Check if the plug and socket is functioning properly.
- Appliance gets very hot due to continuous usage for long periods, leave the appliance to cool before reusing.

## Technical Specifications

Model No.	CRAK4176
Rated Power	200W
Rated Voltage	220-240VAC
Rated Frequency	50/60Hz
Rotation RPM	≤ 15000 RPM
Rated Continuous Working Time	1 Min
Rated Intermission Time	2 Min
Thermal Overload Protection	Yes
Speed Levels	Single Speed
Detachable Shaft	Yes

## Safety Instructions

While using this product, basic safety precautions should always be observed, including the following:

- Do not use the appliance if supply cord is damaged. Please contact Cromā Customer Care at 7207-666-000.
- Do not touch the blade while the machine is plugged in.
- Keep fingers, hair, clothing and utensils away from blade or sharp attachments.
- Unplug after use and before cleaning.
- Do not blend hot oil or fat.
- Be careful when you blend hot liquid.
- This appliance is intended for household use only.
- Never process hard ingredients such as ice cube with the appliance.
- Do not touch the cutting edges of the blade under any circumstance, especially when appliance is plugged in. The cutting edges are very sharp.
- Never immerse the motor unit in water or any other liquid, nor rinse it under tap. Only use a moist cloth to clean the motor unit.
- Keep the unit away from heat, fire, moisture & dirt.
- Only use this appliance for its intended use as mentioned in the manual.
- After cleaning, let the blender shaft dry completely.
- Don't let children or infirm people use the hand blender without supervision.
- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand blender shaft is thoroughly sterilized. Use a recommended sterilizing solution or sterilize in boiling water.
- If your hand blender is damaged, please contact Cromā Customer Service.
- Immersing the power handle or cord in water may be hazardous. Do not use unauthorized attachments or attachments that are not supplied with this model.
- To avoid splashing; immerse the blender completely in the ingredients.
- This appliance can be used by children aged from 15 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play

with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.


- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and they understand the hazards involved.

### **Important**

- For solid lumps, do not use the hand blender for longer than 15 seconds– it can cause overheating.
- The blender is only intended for domestic usage.

### **Know your Hand Blender**

The hand blender is designed for intermittent use. Do not use non-stop for long periods. Allow to cool down before reusing.

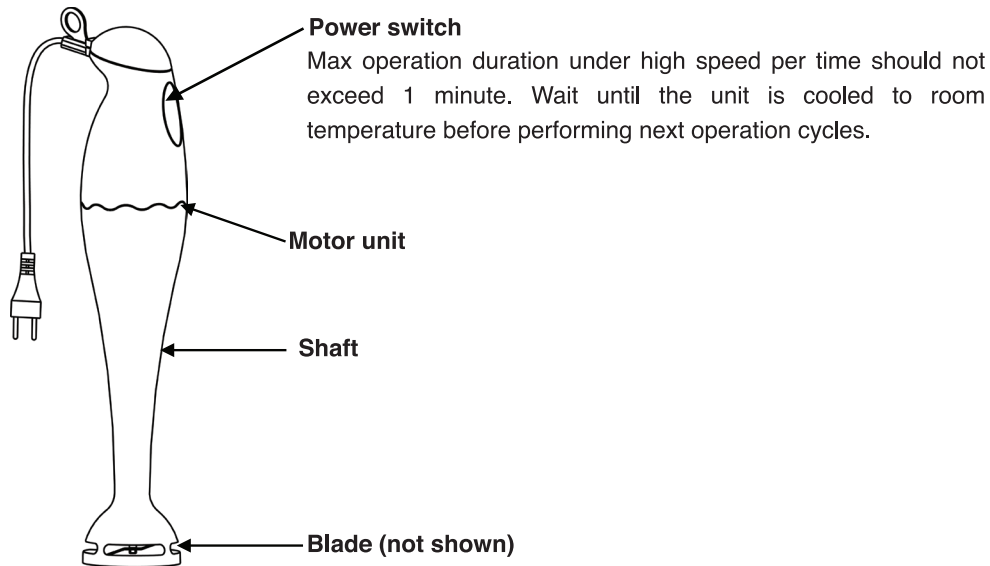

### **Before Operating your Hand Blender**

- Clean all the parts thoroughly before you use the appliance for the first time.
- Remove all the packaging material.

### **Operating your Hand Blender**

- Let hot ingredients cool down before you process them.
- Cut large ingredients into small pieces.
- Assemble the appliance properly before you put the plug in the wall outlet.
- Unwind the power cord completely and plug into the power socket.
- Press the power switch to start blending.
- Move the appliance slowly up & down and in circles to blend the ingredients.
- After you have finished blending, release the power button and unplug the appliance.
- Detach the blender shaft from the motor unit.

### **Hand Blender Can Be Used For**

- Blending fluids such as dairy products, sauces, fruit juices, soups, mixed drinks & shakes.
- Mixing soft ingredients such as pancake batter or mayonnaise.
- Pureeing cooked ingredients, for example baby food.
- Whipping cream.
- Can be used for puree and blending sauces.
- Can be used to chop nuts in semi liquid sauce.

### **For Saucepan Blending**

- Take the pan off the heat and let it cool slightly, otherwise your hand blender could overheat.
- To avoid splashing, place the blade in the food before switching on.
- Hold the power handle in an upright position then press the button.
- For best results, blend the ingredients thoroughly.
- If your blender gets clogged, unplug and clean the unit.

### **Cleaning & Maintenance**

- Always switch off and unplug before cleaning.
- Don't touch sharp blades.
- Some food substances, such as egg or carrot may discolor the plastic. Rubbing with a