

# AIRDOPES 207



# boat

## AIRDOPES 207

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 207. Please consider this manual as your guiding map towards the unparalleled shores of auditory realm. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual. Also, you may refer to the same at times when you face any sort of difficulty.



### PACKAGE CONTENTS

- 1 1x Pair of TWS Earbuds
- 2 1x Charging Case
- 3 1x Type-C Charging Cable
- 4 1x User Manual
- 5 1x Warranty Card
- 6 1x Catalogue
- 7 1x FAQ Card

### OVERVIEW

- 1 CTC (Capacitive Touch Control)



### POWER ON (FIRST TIME USER)

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Courtesy our IWP™ (Insta Wake N' Pair) technology, the earbuds power on automatically, get connected and enter the connection mode

OR

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds

Step 2: After powering on, the earbuds enter the Connection Mode, indicated by alternate red and blue LED flashes on primary earbud and blue LED flashes once every 5 seconds on the secondary earbud

### CONNECTION MODE

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 207' and pair accordingly.

Congratulations! Your earbuds are now connected successfully via Bluetooth

Note:

- Pairing mode lasts for 5 minutes. If the pairing time is missed, then you will need to reconnect the earbuds and follow the above-mentioned procedure.
- Airdopes 207 remembers previously connected devices; once switched on, the earbuds automatically reconnect to the previously connected devices in working range.

### SINGLE EARBUD USAGE

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for switching on the desired earbud

Step 2: The selected earbud automatically enters the connection mode indicated by red and blue LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 207' to connect

Notes:

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage
- You cannot skip tracks or return to the previous tracks in Mono (single-earbud) mode

### QUICK GUIDE ON FUNCTIONALITIES

- 3 Seconds: Long touch either CTC for 3 sec to activate voice assistant
- 3 Seconds: Long touch both CTCs for 3 seconds to manually power on
- 5 Seconds: Long touch both CTCs for 5 seconds to manually power off
- 5 Seconds: Long touch both CTCs for 5 seconds to perform factory reset

### CHARGING THE EARBUDS

Step 1: Please insert the earbuds back inside the charging case in correct orientation and close the lid

Step 2: In charging status, the red LED turns on for 2 secs when case lid gets opened. LED stays off when the lid stays closed.

Step 3: Once the earbuds get fully charged, the charging case automatically switches off to save power, and the red LED stays turned off.

Note:

- Before using the earbuds for the first time, it is recommended to fully charge the earbuds. Also, please keep the lid of the charging case closed while charging.

### CHARGING THE CASE

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

#### Remaining case battery led indications

Case	Normal State	Charging State
Low Battery	Red LED blinks thrice upon opening the case lid	First shows the normal state then goes into slow breathing red LED
30%-70% Battery	White LED blinks thrice upon opening the case lid	First shows the normal state then goes into slow breathing white LED
70%-99% Battery	Green LED blinks thrice upon opening the case lid	First shows the normal state then goes into slow breathing green LED
Fully Charged	LED stays off	Solid green LED

#### Case LED indication when Earbuds are getting charged from the case

- This is to indicate the earbud getting charged from the case (when case lid gets closed).
- CYAN for 5 seconds to indicate LEFT bud is charging from the Case
- PURPLE for 5 seconds to indicate RIGHT bud is charging from the Case
- If both are properly charged, BLUE for 5 seconds

### BASIC FUNCTIONS

- Voice Assistant: Long touch either CTC for 3 seconds to activate default voice assistant
- Answer: Single tap the CTC on either earbud to answer an incoming call
- Hang Up / Reject Call: Double tap the CTC on either earbud to end / reject call
- Play/Pause Music: Single tap either earbud's CTC to play or pause music
- Next Track: When playing music, double tap the right earbud's CTC to skip to the next song
- Previous Track: When playing music, double tap the left earbud's CTC to return to the previous song

Note:

- Volume can only be controlled via the media device

### VOICE ASSISTANT

Step 1: Long touch the CTC on either earbud for 3 seconds to activate the smart voice assistant  
Step 2: The respective voice assistant screen pops up and you may place your commands at ease

### BEAST™ MODE

Triple tap the left CTC to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Triple tap the left CTC once again, to turn it off and return to standard Music Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

Tips: You may try out the following commands,

- What is the weather?
- Play a song
- Set a reminder



Note: If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.

### ENX™ TECH

Our ENX™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENX™ as the quad mics are equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!

### SMART POWER OFF

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid

The earbuds automatically switch off (and enter charging mode).

### MANUAL POWER OFF

Step 1: Long touch either CTCs for 5 seconds to manually power off the earbuds

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid

### FACTORY RESET

Perform the factory reset in case you feel any difficulty while operating your Airdopes.

\*NOTE: Before performing reset, clear "Airdopes 207" from pairing device history by forgetting device

Step 1: Take out the earbuds from the charging case, and long touch the CTC for 5 seconds on both the earbuds.

Step 2: Place the earbuds inside the Case (Earbuds will automatically power-off in the charging case).

Step 3: Close the lid, wait for 5 seconds. After successful factory reset, Red LED blinks quickly 5 times on Case and Earbuds.

Step 4: Take out the earbuds from the charging case and perform a fresh connection.

Note: To complete the factory reset, all of the above steps should be performed.

Congratulations! Your Airdopes 207 has been Reset

### SPECIFICATIONS

Headphone Type	TWS
Bluetooth Version	V5.3
Music Playtime	Up to 10 HRS per charge, Up to 40HRS additional with Case (at 60% volume)
Standby Time	6 months
Transmission Range	10m
Driver Size	13mm*2
ENX™	Yes
ASAP™ Charge	Yes
Frequency	20HZ-20KHZ
Battery	320mAh (Case) ; 35mAh*2 (Earbuds)
Charging Time	40min (Earbuds) ; 1H 40min(Case)
Charging Interface	USB Type C
Water Resistance	IPX5

### WARNING

- Please follow the instructions to operate.
- Please don't use the earbuds in extreme temperatures.
- Please don't use the product near water.
- Please keep the product away from heat sources, as the heat may damage it.
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing & extend the ear-buds' service life.

