♣ ambrane



ABSOLUTE BASS IN MINI SPACE!

EVOKE CUBE * 5W BLUETOOTH SPEAKE

🤧 made in india



Welcome

Thank you for purchasing the Ambrane Evoke Cube' Bluetooth Speaker. We recommend you to read the instruction manual carefully before using the product.

Package Contents • 1 N Evoke Cube Bluetooth

 
- Speaker

 1 N Charging Cable
- 1 N User Manual Scan Card
 - 1 N Rating Card

Product Overview

Experience max bass in mini size with the Ambrane Evoke Cube' Bluetooth speaker. Have a party anywhere, anytime with a playtime of up to 12 hours. Equipped with 40mm speaker drivers, an inbuilt mic and Bluetooth V5.1, it is time to enhance your audio and call experience.

Short Press: Volume Increase Long Press: Next Song



Short Press: Volume Decrease Power ON/OFF Long Press: Previous Song



Micro Charging Jack

Operating Instructions

Power ON and Pairing

- Long-press the power button for 5 seconds and the LED indicator will start flashing blue. The speaker will turn on and enter into pairing mode.
- Search for "Ambrane Evoke Cube'" on your device's Bluetooth list and select to connect.

Note: Upon second use and thereafter, the speaker will automatically connect if the Bluetooth of the device is turned on.

Power OFF

Long-press the power button for 5 seconds to turn off the speaker.

Charging Instructions

- $\bullet \ \mathsf{Before} \ \mathsf{using} \ \mathsf{it} \ \mathsf{for} \ \mathsf{the} \ \mathsf{first} \ \mathsf{time}, \\ \mathsf{fully} \ \mathsf{charge} \ \mathsf{the} \ \mathsf{device}.$
- Connect the provided USB cable to the Micro USB port on the speaker and the USB port on a computer or a USB adapter.
- The red LED indicator will turn on while charging.

Basic Key Operation

FUNCTION	OPERATION
Play/ Pause Music	Single press the ▶■ button
Previous Song	Long-press the (-) button for
	about 2 seconds
Next Song	Long-press the (+) button for
	about 2 seconds
Increase Volume	Single press the (+) button
Decrease Volume	Single press the (-) button
Answer/ Hang-up	Single press the ▶∎ button
Phone Call	3 - p
Reject Ca ll	Double press the ▶∎ button

How to switch to SD Card Mode

- To switch to SD Card Mode, single press the power button while the SD card is inserted inside the slot.
- Note: Single press the power button to switch back to the Bluetooth mode.

Product Specifications

• Bluetooth Version : 5.1

Working Distance : ≥10m

 Frequency Response : 60Hz-20kHz

• Output : 5W

• Driver Impedance : 4Ω

* Driver impedance . 412

Battery Capacity : 550 mAh

 Playtime : Up to 12 Hrs (at 70% volume)

Charging Time : 1 Hour 30 Minutes

• Speaker Driver : 40mm

Multifunctional Control Buttons

In-Built Mic

Charging Type: Micro USB

SD Card Support
 Safety Hazards

WARNING

 Please read these safety warnings carefully to ensure your personal safety and to prevent product damage:

Fire and Electric Shock Hazard

 Do not expose your Evoke Cube^{*} to extremely high or low temperatures.

- Do not leave your Evoke Cube⁺ in direct sunlight for extended periods of time.
 Do not leave your Evoke Cube⁺ near open flames such as
- cooking burners, candles, or fireplaces.Do not block any ventilation openings.

Battery/Charger Hazard

- Do not dispose of your Evoke Cube^{*} in the fire. The battery could explode causing severe injuries.
- Only charge the battery in accordance with the user instructions supplied with the product.
- Do not attempt to disassemble the Evoke Cube' charger or force open the built-in battery because this may result in electric shock causing injury.
- Do not clean the Evoke Cube* when it is being charged.
 Always unplug the charger first before cleaning.

Automobile Accident Hazard

Do not leave or store the Evoke Cube^{*} or any of its accessories near or over your automobile's airbag area because a serious injury may result when an airbag deploys.

CAUTION

- Do not use abrasive cleaners to clean your Evoke Cube because this could cause scratches and damage.
- Do not bring your Evoke Cube' into contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your Evoke Cube* unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your Evoke Cube' yourself, it does not contain any user-serviceable

components.			
\bullet Do not attempt to replace your Evoke Cube $^{\circ}$ battery, it is builtin and is not changeable.			
 Observe all signs and displays that require an electrical device or RF radio product to be switched in the designated area. 			
Turn off your Evoke Cube' prior to boarding an aircraft. Do not use Evoke Cube' inside an aircraft unless allowed by your			

 Dispose of the Evoke Cube' and the Evoke Cube' battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

Warranty Card and Terms & Conditions NOTE: For valid warranty claim, all information on the

airlines.

Dealer's Stamp:

warranty	certificate	has	to	be	completed	and	presente	d
along witl	h the origino	ıl invo	oice	€.				
All warrar	nty informat	ion r	oro	duc.	t features an	ıd sne	cification	2

are subject to change without prior notice.

• All matters are subject to Delhi Jurisdiction.

Customer's Name:
Contact Number:
Customer's Address:
Model No.:
Purchase Date:
Invoice Number:

- Ambrane Evoke Cube+ Wireless Speaker comes with 365 days warranty from the date of purchase.
- · Warranty can not be claimed if the product is damaged by wrong operation or force majeure.
- Accessories supplied with Ambrane Evoke Cube[†] Wireless Speaker are not covered under the warranty.

CUSTOMER CARE:

224, Second Floor, D-Mall, Netaji Subhash Place, Delhi, India - 110034 Contact No.: +91 1145911111. E-mail: care@ambraneindia.com Web: www.ambraneindia.com



"Listening at a high volume for a long time may damage your hearing."

Join the Ambrane Ally!









