


# **IFB**

## ***NEPTUNE***

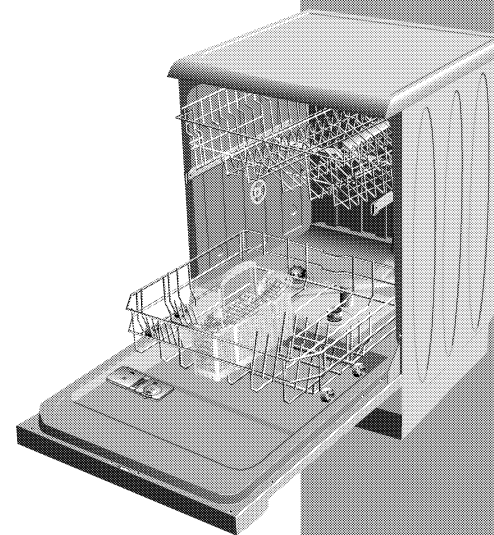

**INSTRUCTIONS FOR USE**

5. The company is not liable for any delay in servicing due to reasons beyond the control of the company or any of its authorized service centre.
6. This warranty is not applicable, if the dishwasher is used for commercial purpose or at places like institutions, hostels, hospitals, community halls and other similar applications.
7. For any service under this warranty beyond city / town / municipal limits from the company/authorized service centre, a fixed charge of Rs. 50/- will be collected from the customers in addition to the actual to and fro charges by the shortest route. Alternatively, the customer can bring the appliance to the nearest service centre for carrying out the necessary repairs, at customer's own cost.
8. During the warranty period, whenever the appliance is shifted from the original city of purchase to another city/town where service is provided by the company's authorized service agent, a warranty transfer charge of Rs. 300/- will be collected from the customer by the company's authorized service agent. The above charges also include the reinstallation charges of the appliance. However, in case of transfer to a city where the company provides direct service, a nominal charge of Rs. 50/- only will be collected from the customer towards reinstallation. The Company, however, shall not undertake the responsibility of shifting / transferring the appliance from the location where the appliance is originally installed.
9. This warranty is issued subject to the jurisdiction of Kolkata courts. and/or other judicial/quasi judicial forums having jurisdiction over the registered office of the company.
10. This is the **ONLY WARRANTY** covering the appliance given by the company.

**CUSTOMER COPY**

Serial no:..... Model: .....

Owner's Name & Address .....

.....

Date of purchase: .....

Date of installation : .....

Telephone no: .....

Email address: .....

Signature of customer: .....

**IFB SERVICE STATION COPY**

Serial no:..... Model: .....

Owner's Name & Address .....

.....

Date of purchase: .....

Date of installation : .....

Telephone no: .....


Email address: .....

Signature of customer: .....







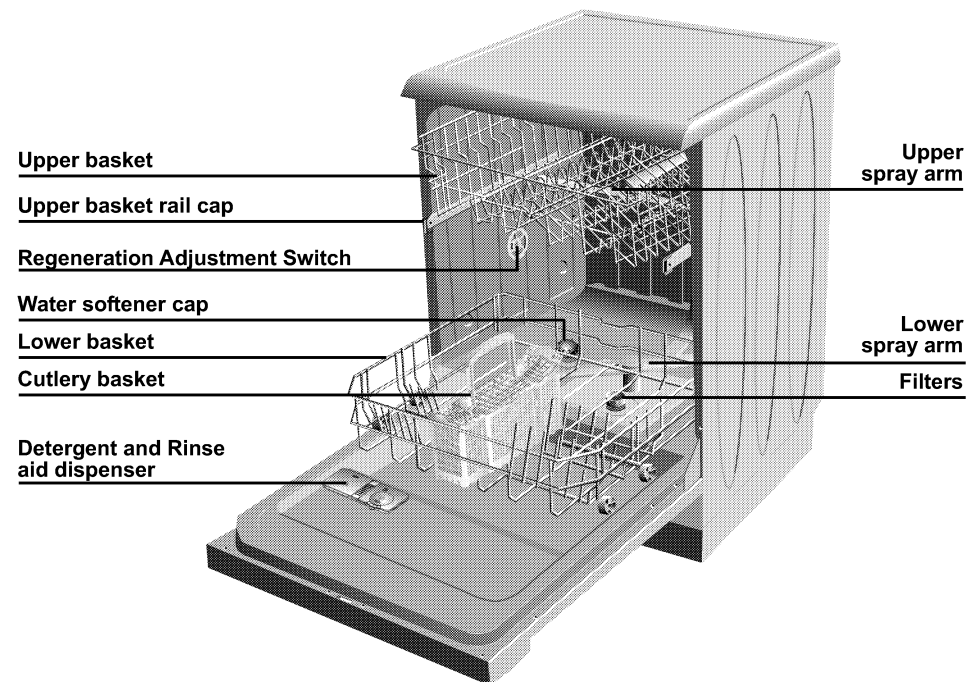


Dear customer,

Please read these instructions before installing the dishwasher and using it for the first time. The information contained herein is provided to avoid accident risks and/or damage to your appliance

Please keep these instructions in a safe place for your future reference



**TABLE OF CONTENTS**

	<b>1. Section</b>	Warning and safety information	3
		Electrical safety	3
		Children's safety	3
		General	4
		Environmental care	5
		Unsuitable dishware	5
	<b>2. Section</b>	Before first use	6
	<b>3. Section</b>	Connections	6
		Electricity connection	6
		Water connection	7
	<b>4. Section</b>	Usage Information	8
		Water Softener	8
		Detergent	10
		Rinse - Aid	11
	<b>5. Section</b>	Operating the Dishwasher	13
		Loading the Dishwasher	13
		Folding Plate Support Rods	13
		Upper Basket Height Adjustment	14
		Three-way Split Cutlery Basket	14
		Operating dishwasher	15
	<b>6. Section</b>	Unloading dishwasher	17
		How to clean your machine	17
		How to clean the filters	17
		How to clean the spray arms	18
	<b>7. Section</b>	How to change the place of your dishwasher	18
	<b>8. Section</b>	Troubleshooting	19
	<b>9. Section</b>	Standards and testing information	20
		Water Hardness Level & Regeneration settings	21
		Water Hardness Level	21
		Regeneration Adjustment Switch	21
		Warranty Card	23

IFB Industries Ltd. ("The Company") warrants to the original domestic purchaser of this Dishwasher ("Appliance") that it is free from defects in workmanship and materials. During 24 months from the date of purchase of the new dishwasher all the parts of the dishwasher which prove to be defective in workmanship and/or materials shall be replaced or repaired free of charge on intimation to the company / companies authorized service centre nearest to the place where the appliance is installed. This warranty is subject to limitations of warranty.

**LIMITATIONS OF WARRANTY**

1. This warranty is not valid in case of following events :
  - a) If the warranty card is not fully and properly filled in and signed at the time of purchase / installation by the company's authorized dealer /service engineer.
  - b) If the completed warranty card is not presented to the authorized personnel at the time of service / repair.
  - c) If the appliance is not used in accordance with manufacturer's instructions given in the "**Operating Manual**".
  - d) If the appliance has been installed, serviced, repaired, opened or tampered by any unauthorized personnel.
  - e) If defects arise/caused by accidents, alteration, misuse, neglect, abuse, substitution of original components with spurious/non genuine components, attacked by household pest/rodents, fire, flood, earth quake, lightning and/or any other acts of God/natural, calamities.
  - f) If defects arising with optional accessories like trolleys, machine cover etc.
  - g) If damages occur by improper electrical circuits outside the dishwasher or by any electrical supply thereof.
  - h) If the machine serial number on the appliance is defaced, missing or altered.
  - i) If any substandard detergent , rinse aid , salt has been used in the appliance.
  - j) If the appliance is taken out of India.
2. This warranty does not cover any type of painting, plating including rusting etc., or defects thereof.
3. The company is not liable for any incidental or consequential damages.
4. Parts replaced or repaired under this warranty are warranted throughout the remaining of the original warranty period.

## Technical Specifications

Height	850 mm
Width	598 mm
Depth	570 mm
Depth (Open door)	1150 mm
Additional height adjustment	15 mm
Net Weight	52 kgs
Gross Weight	56.5 kgs
Capacity	12 Place settings
No of programmes	7
Salt indicator	LED Display
Rinse aid indicator	LED Display
Water supply hose connector	¾ BSP internal thread
Water pressure	0.3 - 10 bars
Max. energy consumption/cycle	1.9 kWh
Voltage	220 - 240 V
Electrical supply	Single phase 15 Amps
Frequency	50 Hz
Heater	2kW
Water consumption	4.2 - 17.5 Litres
Max. Power	2.2 kW

\*Specifications are subject to change without notice.

\*Cycle time, water consumption and electricity consumption indicated under test conditions and will vary depending on water pressure, ambient temperature, operating voltages etc.



## Warnings and Safety Information

### Electrical safety

The dishwasher should be operated under the operating voltage specified. For electrical safety, only earthed plugs and plug sockets should be used. The user is responsible for meeting these basic safety requirements. The life of your machine and your safety depend on your using an electrical installation compliant to standards.

Do not use an extension cable.

When disconnecting your machine from the mains supply, always pull from the plug. Never pull the cord itself.

### Child safety

Never allow you children play with your dishwasher.

Dishwasher detergents contain irritants and abrasives. These ingredients might have caustic effects in the eyes, mouth and throat. They can be extremely dangerous if swallowed. avoid contact with skin and eyes. Check that the detergent receptacle is empty after completion of the wash cycle.

Keep detergents out of children's reach and do not put detergent in the machine until right before you start the washing program.

The water in your dishwasher is not suitable for drinking, for this reason do not allow your children near your machine when the front door is open.

Never allow your children play on or sit onto the front door when the front door is open.

After unpacking your machine, keep the packing material out of children's reach.

### Warning !

The appliance is not intended for use by young children or infirm persons without supervision.



## Warnings and Safety Information

### General

This dishwasher has been designed to clean your dirty dishes at home.

Never use chemical solvents in your machine; this may lead to explosion risk.

Never use material other than coarse salt/specially produced softening salts in the salt container of your machine.

Never use materials other than specially produced detergents and rinse-aids in the detergent and rinse-aid containers of your machine.

When you want to change the position of your machine, follow all the warnings mentioned in this section after making sure that the machine is empty.

Please dispose of packaging material and old appliances carefully. Please ensure old machines do not become a threat to child safety. It is known that children lock themselves in unused machines. To avoid such a problem it is advised that you cut the mains cable off and break the door latch so it does not lock.


The door of your machine is designed to support the weight of a full basket when the lower basket is pulled all the way out. Never place any other load on the door, otherwise the machine may tip over.

## Water Hardness Level & Regeneration settings:

The dishwasher requires lime free water. Hard water leaves watermarks on your dishes. Your dishwasher has a special water softening system to remove the hardness of the tap water. Setting this system correctly will increase the washing effectiveness.

To find out the water hardness level of water in your area, contact your local Water Board or Determine water hardness level by the help of test strip provided.

### Test Strip

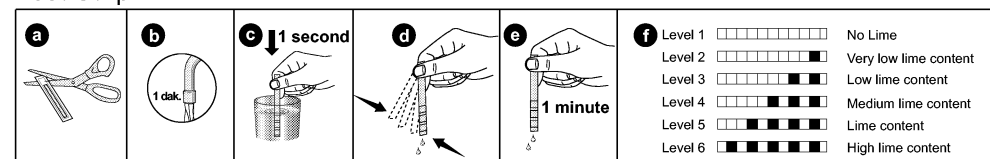


Remove the test strip from its packing. Let the water flow from your tap for 1 minute. Fill a glass with tap water and dip the test strip into water for 1 second. Take the test strip out of the water and shake it. Hold for 1 minute. Set the water hardness level of your dishwasher according to the result shown by the test strip.

If you move to a different location, the level of water hardness will possibly be changed. It is essential to reset the water hardness in order to obtain optimum washing efficiency.

### Water Hardness Level

Hardness Level	Clarke degrees dE	German degrees dH	French* degrees dF	Position of the Programme Knob **	Regeneration Adjustment Switch	Hardness Level Displayed
Level 1	0-6	0-5	0-9	1		Wash light comes on.
Level 2	7-14	6-11	10-20	2		Rinse light comes on.
Level 3	15-21	12-17	21-30	3		Dry light comes on.
Level 4	22-28	18-22	31-40	4		End light comes on.
Level 5	29-42	23-34	41-60	5		End, Wash, Rinse, and Dry lights come on.
Level 6	43-75	35-60	61-107	5		End, Wash, Rinse, and Dry lights come on.

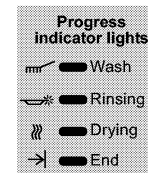


If the hardness of the water you use is more than 9F (French Hardness) or if you are using pit water, we recommend that you use filters and purifiers.

\* If your tap water is below 9F (French hardness), you do not need to use special dishwasher salt in your machine. In this case, salt indicator light (if available) will be on continuously.

\*\* If your machines' Programme Knob has 1 / 2 / 3 / 4 positions, you can set the hardness level 5 or 6 by turning it to position 5 after the last position clockwise.


### Regeneration Adjustment Switch

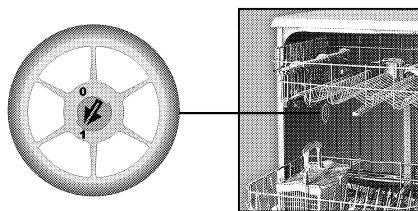

Level 6 High lime content





If water hardness Level is 6 (high lime content), turn the Regeneration Adjustment switch on position 1 after setting the hardness by turning the Programme Knob on position 5.

- When your machine is switched off, turn the Programme Knob to position 1.
- While keeping the Start/Stop button pressed, switch the machine on by pressing the On/Off button, and release the On/Off switch.
- Press and hold Start/Stop button for 10 seconds.
- Last setting will be displayed on the panel of your dishwasher for 5 seconds.
- Water hardness level 1 will be shown on the panel, since Program Selection Button is set at that position.
- You can set the level of hardness by changing the position of the Programme Knob according to the table given above.
- After the hardness setting is selected, save the selected value by pressing the Start/Stop button once more.
- Switch the machine off by pressing the On/Off button.

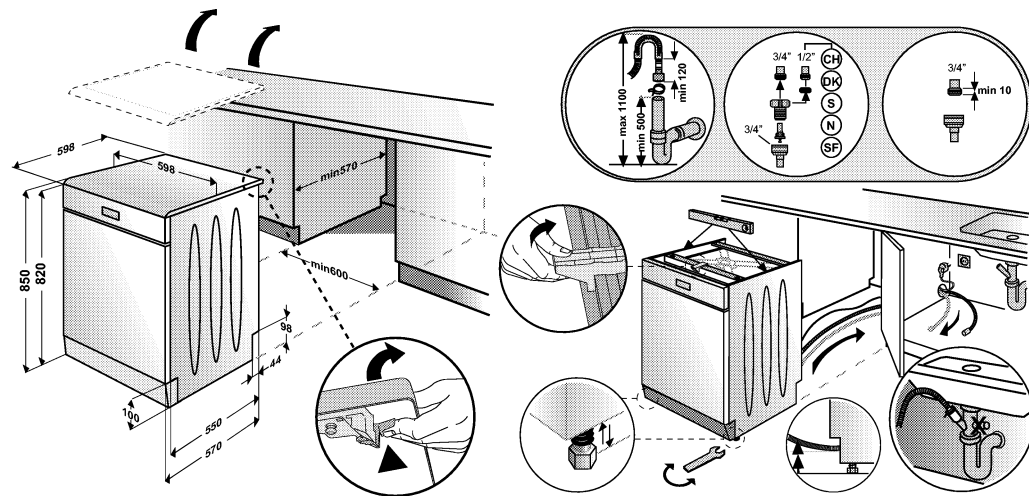

### Standard loading and Testing Institute information

Loading capacity : Lower and upper baskets: Standard 12 place settings  
 Detergent: 30 gr. as compliant to EN 50242-DIN 44990.I EC436 international norms  
 Testing program: Reference programme.

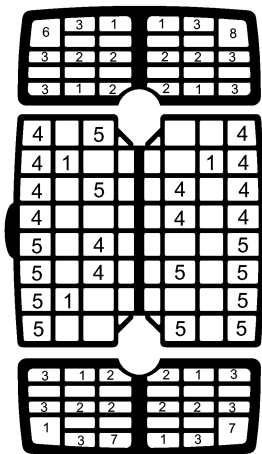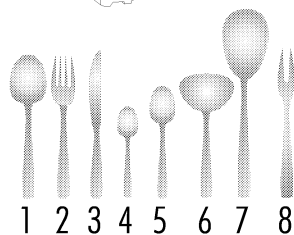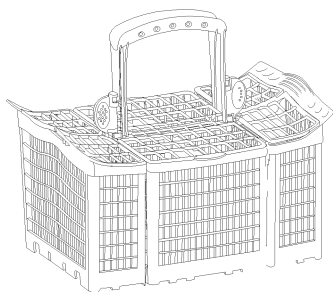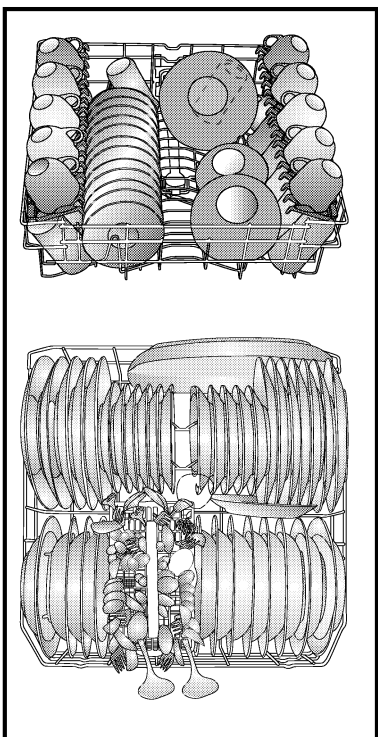

### Warnings and Safety Information

### Warnings about the environment

### Recycling

Please help us protect our environment. Packing materials and some parts of your machine are produced of recyclable materials. These materials are marked up with recycling symbol and material type information (>PE<, >PS<, >POM<, ...). These raw materials should not be mixed with daily garbage and should be given to recycling centers.

### Energy and water saving

Remove the food remains (bones, pips, etc.) from dirty dishes. Start your dishwasher after fully loading the machine. Do not use the pre-wash program unless required. Make your program selection according to the dirt level given in the program selection chart on the daily usage card.

If you have a hot water inlet hose in your machine, you can use a ready hot water source (central hot water supply or hot water supply with solar energy) up to 60°C. You will save energy and help preserve natural resources.(please read the water inlet hose connection).



### Unsuitable dishware

Do not wash items soiled with cigarette ash, candle, dyes, etc. since these may harm your machine

Do not wash forks, knives and spoons with wooden or bone handles, items stuck together with adhesives, plastic items not resistant to high temperature and copper and tin items in your dishwasher.

As with hand washing, some "on-glaze" decorated china, aluminum or silver have a tendency to discolor or fade. Also, certain types of glassware and crystals may lose their shine and become opaque in time.

Pay special attention to whether or not the dinnerware you wash in the dishwasher is dishwasher-proof.

Do not overload your dishwasher or do not load items other than those mentioned in this manual.

"Modern china or porcelain" may be marked underneath with a code which indicates its suitability for machine washing. This will be in the form of V D N + a letter +three figures.

The last number indicates the suitability.  
 5 = withstands machine washing upto (75°C)  
 3 = withstands machine washing upto (45°C)  
 1 = risk of damage if washed.



## Before first usage

After having opened the packing of your dishwasher, check the machine against any possible transportation damage. Never install and use damaged machines. If you're machine is damaged contact your seller or any authorized service immediately. Always have your machine installed by authorized service staff to ensure correct installation

Any repairs and maintenance work on this dishwasher should be carried out by authorized service staff only. Repairs conducted by third persons are not only dangerous, but also might lead to the cancellation of your warranty. The authorized service shall not be responsible for the renewal of your electricity and installation. Ensure your electricity and water connection are suitable for the machine before calling the authorized service engineer for installation.

Make sure the electricity and water connections of your dishwasher are in compliance with the instructions for assembly as stated in the relevant part of this manual

Any water remaining in the dishwasher after production is carefully removed due to reasons of hygiene. Therefore, always select pre-wash or a programme with pre-wash before first time you use this appliance.

Before the first wash, add 1 lt of water in the salt container of your machine



## Connections

### Electricity



Information regarding the electrical specifications of your machine is provided on the sticker on the right side of the interior door.

If you have to make the connection of your machine to the mains voltage other than stated on the sticker, have a proper transformer connected.

If the fuse in your house is less than 15Amps, have a 15 Ampere fuse connected

Always call the authorized service whenever you want to change the mains cable of your machine.



## Troubleshooting

Before calling your nearest service centre check the following:



Is the machine connected to the mains supply



Is the fuse in the mains plug has not blown.



Is the water tap fully turned on?



Is the machine switched on?



Is the dishwasher door closed firmly?



Are the filters clogged?



Is the detergent dosage and/or rinse aid sufficient? Is there enough salt in the water softener?



## EC declaration of conformity

This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC directives.

Load capacity : 12 place settings.

**73/23/EC**  
**89/336/EC**  
**93/68/EC**  
**IEC 436/DIN 44990**  
**EN 50242**



## How to clean up your machine


### How to clean the spray arms

#### Upper spray arm:

Turn the nut anti-clockwise and remove both the nut and the spray arm.  
Flush away food particles under running water.  
Put the spray arm back on and screw on the nut turning clockwise until a clicking sound is heard.

#### Lower spray arm:

Remove the spray arm from its slot by releasing the latches and pulling it upwards.  
Flush away the food particles under running water.  
Reinsert the spray arm back into its original position

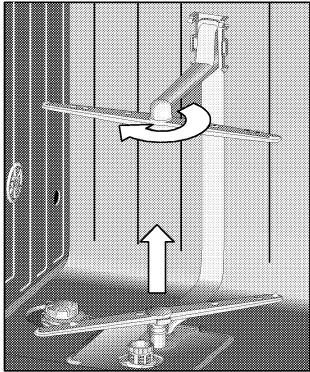

## How to change the place of your dishwasher

Empty your machine and shut the water intake valve.

Disconnect the water inlet and drainage hoses.

Disconnect all other hoses/cables that may prevent the movement of your machine.

Make sure th hoses do not get tangled during carriage.

Please keep the machine upright or laying on its back during carriage to prevent water getting into the control panel. Getting water into the control panel may cause product failure.



## Connection

### Water Connection





#### Water inlet hose connection

There are two different types of water inlet hoses:  
- Cold water inlet hose (up to 25°C)  
- Hot water inlet hose (up to 60°C)  
please check which one is applicable to your model.

If you are willing to connect your machine to natural energy resources or to the central hot water supply, first check out whether your water inlet hose type is suitable by checking the temperature values written on the hose. If your hose is not suitable, apply to your authorized service to change the hose.

The water inlet hose is directly connected to the tap. The water pressure coming from the tap must be minimum 0.3 and maximum 10 bars.


Please use a valve if the water pressure exceeds 10 bars. Please turn on the tap and check for leakages after connecting the hose. For safety reasons Please ensure the tap is turned off when the machine is not used;

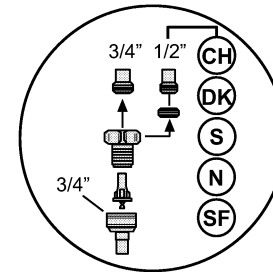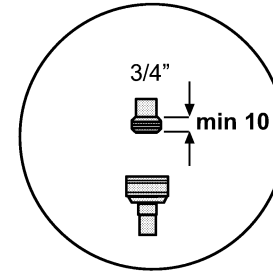



## Connections

### Drain hose connection

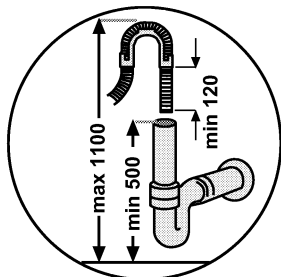

Fit the drainage hose of your machine to the drainage pipe without bending.

If the length of the hose is not sufficient, apply to the authorized service for an extension made from the same material as the original. Remember that the length of the hose should not exceed 4 meters even when with an extension. If the drainage hose is longer than 4 m. the dishes will not be cleaned properly. Secure your hose firmly to the drainage pipe to avoid it coming off during the washing process.

## Usage Information

### Water Softener

#### Water Hardness

The dishwasher requires lime free water. Hard water leaves water marks on your dinnerware. Your dishwasher has a special water softening system to remove the hardness of the water (Water softener).



## Unloading dishwasher

Dishes should be allowed to cool for about 15 minutes after the end of the program.

Dishes will cool quicker, if the door is left open slightly. Caution: Beware of hot steam if you open the door immediately after the program ends.

First unload the lower, then the upper rack. This prevents drops of water from falling onto the full lower basket when the dishes in the upper basket are being removed.

## How to clean your machine

Cleaning your machine at regular intervals ensures longer product life and reduces the risk of recurring problems.

Always unplug the appliance and shut the water connection valve before cleaning.

Wipe the control panel with a soft damp cloth.

Do not use corrosive substances.

Wipe clean the door gasket with a damp cloth

## How to clean the filters

For the efficient operation of your dishwasher, check the filters and the spray arms before each wash.

There are three different filters in your machine

Main filter  
coarse filter  
Micro filter

To clean the filters:

Remove the coarse filter by turning it anti clockwise.

Remove the micro filter from the coarse filter by releasing the latches.

Pull the main filter off.



Clean all three filters under running tap water with a brush.

Reinsert the main filter in its place.

Place the micro filter into the coarse filter. Ensure the marks align properly.

Turn the main filter clockwise until you hear a clicking sound.

For a better wash performance it is important that you fit the filters correctly.

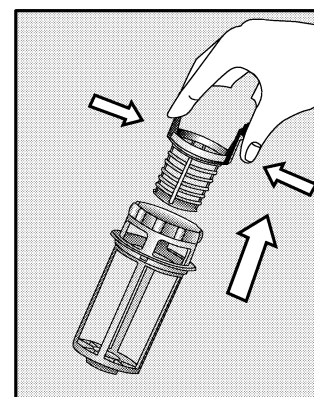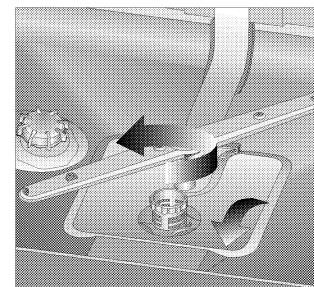

### How to cancel the washing programme








To cancel a programme while the machine is operating:  
Press and hold start/stop button for 5 seconds. The indicator light will start flashing. The machine will drain the water inside the machine for 45 seconds. The programme is cancelled when start/stop indicator light goes off. Then, you can choose and start a new programme.

**! Important:** Depending on the stage of the programme you have cancelled, there may be detergent residue or rinse aid inside the machine and on the load. Make sure the items in the dishwasher are not used before washing properly.

### How to change the washing programme

To change the programme selection while the machine is operating:  
Press start/stop button. The indicator light will go off.  
Select the new programme. Press start/stop button. The indicator light will be on and new programme will start.

**! Important:** The new programme will NOT start right from the beginning. It will start from the stage last carried out by the previous programme selection.

Programme symbols and temperatures	1  Prewash	2  30 min. 35°C	3  Delicate 40°C	4  Eco 50°C	5  Normal 55°C	6  Daily 60°C	7  Intensive 70°C
	For rinsing dishes that will not be washed immediately	Glasses, lightly soiled dishes and short programme	Glasses, lightly soiled dishes	Soiled dishes that have been kept in the machine	Soiled dishes	Soiled or heavily soiled dishes	Heavily soiled dishes that have been kept in the machine OR Heavily soiled dishes requiring pre-wash.
Detergent compartment A=25 cm <sup>3</sup> / 15 cm <sup>3</sup> B=5 cm <sup>3</sup>	-	A	A	A+B	A+B	A+B	A+B
programme sequence		35 °C wash ▼ Cold rinse ▼ Hot rinse ▼ Drying	Prewash ▼ 40 °C wash ▼ Cold rinse ▼ Hot rinse ▼ Drying	Prewash ▼ 50 °C wash ▼ Cold rinse ▼ Hot rinse ▼ Drying	Prewash ▼ 55 °C wash ▼ Cold rinse ▼ Hot rinse ▼ Drying	Prewash ▼ 60 °C wash ▼ Cold rinse ▼ Hot rinse ▼ Drying	50°C Prewash ▼ 70 °C wash ▼ Cold rinse ▼ 50 °C rinse ▼ Hot rinse ▼ Drying
Consumption figures							
Water (Liter)	4,2	11,8	15,8	15	15,8	15,8	17,5
Energy (kWh)	-	0,78	0,98	1,05	1,26	1,36	1,65
Duration (min)	14	30	80	150	100	110	115


\* Values declared on the product or in the operating instruction booklet / programme chart and quick reference card supplied with the product are obtained in tests performed under controlled laboratory conditions and these tests are as defined in relevant standards

\*\* Reference programme for the Testing Institute and energy labeling.  
Testing program: Eco 50°C as compliant to EN 50242 international norms.




## Usage Information

### Filling in the Water softener

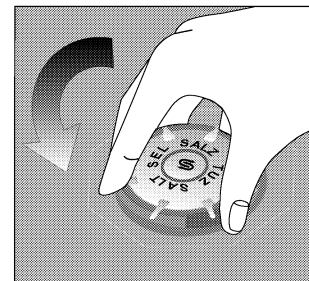

Only use coarse salt or any other salt recommended to dishwasher in your machine to soften the hard water. Never use other types of salts including table salt, animal feeding salt, sea salt, culinary salt. These types of salt do not dissolve in water easily and will damage your appliance beyond repair.

When you run the dishwasher, the Water softener will be full of water. Therefore, adding softening salt should always be done immediately before you start the dishwasher.

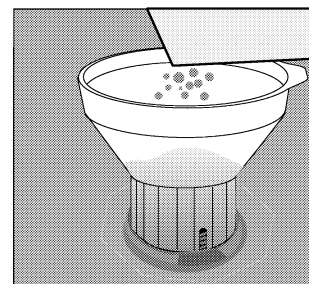

Every time you add salt in your dishwasher, always run the pre-wash program if you are not going to use the dishwasher immediately. This way, any excess salt solution will be immediately washed away.

You can put approximately 2 kg softening salt in the Water softener. When using salt tablest, do not fill container to the top. We recommend small grained or powder salt.

After salt is put in the machine for the first time, low salt indicator light will be off.



## Usage Information Detergent usage

### Detergent

Use only detergent suitable for household dishwashers. Keep detergents in a cool and dry place and out of the reach of children.

Detergent must be added to the container before each use.

A detergent overdose may cause scratches your dishes and there may be traces of detergent left in your machine.

Detergents are classified into two groups: the ones containing phosphate and the ones not containing phosphate. You can use both types of detergents.

### Eco/Bio Programs and Enzyme Based Detergents

Unlike traditional detergents, new detergents contain natural enzymes rather than the caustic chemicals. Enzyme based detergents can be decomposed biologically. Furthermore, their ability to clean is more effective in lower temperatures than traditional detergents.

You can maintain the wash performance of the normal detergent in 65°C, by using the proper Eco/Bio program with the enzyme based detergent in 50-55°C. If your dishwasher has the Eco/Bio program, use enzyme based detergents.


### Warning!

"Two-in-One", "Three-in-One" Detergents


Detergents that are marketed as "Two-in-One", "Three-in-One", generally, do not produce the best possible results. They may be effective under certain conditions. You may be able to find out about these conditions by contacting the manufacturer of these detergents. These detergents contain pre-determined amounts of detergent, softening salt and/or rinse aid and therefore can not be adjusted to best suit the requirements of the dishes being washed and the water supply available in your home.

If you experience problems after using such detergents, contact the manufacturer of detergent for assistance. The guarantee does not cover damages as a result of these detergents.

Your dishwasher is equipped with adjustable rinse aid dosage, adjustable water softening salt dosage and you can put the correct amount of detergent required in to the detergent dispenser. By this way, best possible results can be achieved.

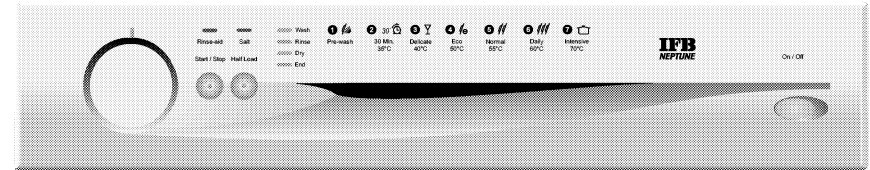

## Operating the dishwasher

 


On / Off Button




Salt indicator




Rinse-aid indicator

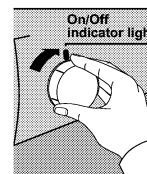


On/Off indicator light

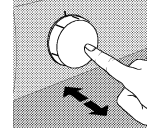

Start/Stop Button

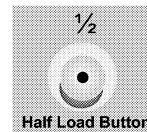

Half Load Button

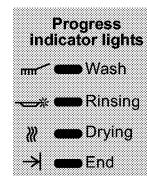

Progress indicator lights

Wash

Rinsing

Drying

End

- Turn the tap on. Open the door of the machine.
- Check that the upper and lower spray arms can rotate freely. Pour (Put in) the detergent.
- Close the door of the machine.
- Push in the on/off button and check that the indicator light comes on. Check the salt and rinse aid level indicators before you start the machine. If necessary add salt and rinse aid.
- Select the required programme by referring to the programme chart. Press the programme selection knob and it pops out. You will see the starting positions of the programmes. Select the desired programme by turning the selector knob. Push in the knob to prevent accidental operation. Then select from available options, if required.
- Press start / stop button and check that the function indicator light comes on.
- It will not affect the sequence if you leave the programme selection knob pushed in or out. Keep the knob pushed in to prevent children from tampering with the machine. Do not open the dishwasher door whilst the appliance is in operation. However, in case the door is opened while the machine is working, then a safety mechanism ensures the machine immediately stops. Water may be very hot, so be careful.

- ! Care must be taken if opening the door, as steam and water will escape.
- Press the on/off button after the programme is completed. The indicator light will go off.
- Turn of the water tap, unload the baskets.

## Options

### Half Load (1/2)

Select Half Load when using any wash programme [Except Pre-wash] to save on water, electricity and time if the machine is only half full. You can place dishes anywhere in the machine; some upper and some lower basket.

If this option is selected, programme starts from the Main Wash step and Progress Indicator lights for both Pre-wash and Main Wash programmes come on and remain on at the same time.

### Programme Sequence

The programme sequence throughout the washing process can be monitored from the progress indicator lights on the control panel.


- ! Dry progress indicator light will not come on when using the Rapid programme.
- △ Following the rinsing stage, in order to drain and remove water from inside the machine completely, the machine will pause for approximately 35 minutes. Do not worry this is not a fault. Then drying stage will start and Dry progress indicator light will come on.
- △ Do not switch the machine off before End light comes on.

Long cutlery, such as ladles and long knives, etc must be placed horizontally on top of the full cutlery basket or on the racks to prevent accidental injury. Place spoons and forks in the cutlery basket with handles down and knives with handles up to prevent accidental injury.

### Upper Basket Height Adjustment

The default position of the upper basket of your machine is adjusted at the higher position. According to the size of the dishes you can change the position of the upper basket. To do this, Release the latches on both the right and left tracks by turning them sideways. Remove the basket.

Change the position of the rollers and place the basket back on the track then shut the latches.

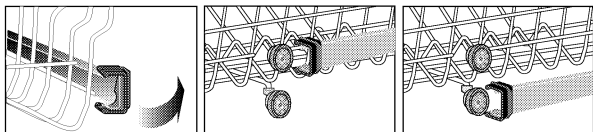

### Three-way split cutlery basket

Depending on the amount of load and load type, three-way split cutlery basket can be split into three parts. Part B and/or part C can be placed in the upper basket.

To dismantle the three-way split cutlery basket follow the below instructions and see the diagrams supplied.

Rotate handgrip which is at the bottom of handle.

Remove top and bottom hangers by sliding each part in opposite direction. If you want to reassemble the cutlery basket, the reverse of the above operations should be carried out.

Part A can not be placed into the upper basket.

Long cutlery, such as ladles and carving knives, should not be placed in the upper basket parts B or C. They can be placed on the side racks on the upper basket.

In order to obtain the best cleaning and drying performance in cutlery basket, use the separators of parts A, B and C.



To remove the separators follow the below instructions

For Part A ;

Press from the sides and the separators can be removed easily

For Parts B and C;

Press from the sides where handle is placed and the separators can be removed easily.

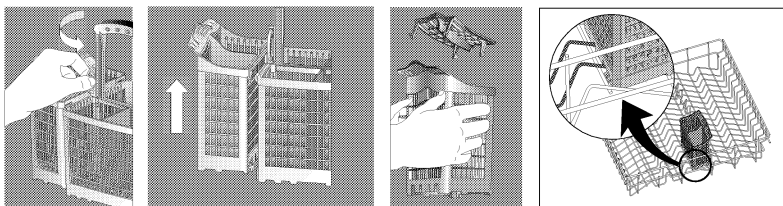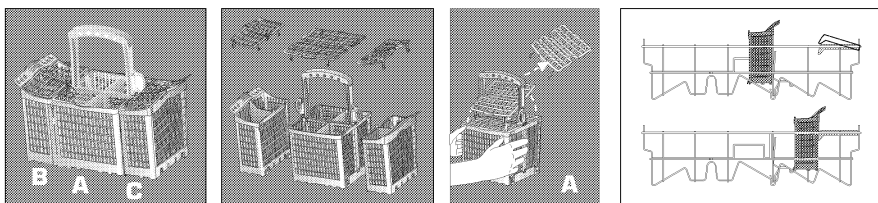

### Usage Information

#### Pouring the detergent

If the dishwasher is considerably full and the dishes are relatively dirty, fill the main container (A) up to 25cm<sup>3</sup> level. If the dishwasher is not quite full and the dishes are only slightly soiled, fill the main container (A) only up to 15cm<sup>3</sup> level.

If your dishes are kept unwashed for a long time and the food particles are stuck on the dishes also fill the small container (B) up to 5cm<sup>3</sup>.

of soiling and the water hardness in your area it may be necessary to add more detergent.

detergents are poured into the dispenser. If you are using tablet detergent read the manufacturer's recommendations on the packaging in order to determine where the tablets should be placed inside the dishwasher (detergent dispenser, cutlery basket, etc.) put in the detergent, shut the container lid (D) and ensure you hear the clicking sound.

During the wash programme the detergent will dispense automatically and the lid (D) will remain open when the programme finishes.

Do not use detergent when using the pre-wash programme.

#### Rinse-aid usage



#### Rinse aid



Use only rinse aid intended for household dishwashers.


The rinse aid is specially formulated to be used in the dishwashers for the prevention of watermarks and scale on dishes and to increase the efficiency of the washing and drying processes. Therefore, make sure that there is adequate amount of rinse aid in the rinse aid dispenser of your machine.

You can adjust the amount of rinse aid used during the wash programme by turning the rinse aid dispenser regulator (C).

The dispenser regulator (C) may be set between levels 1 and 6 (6 being the maximum amount of rinse aid usage). Your machine is pre-set at the factory to level 3.

According to the finish and drying results obtained, adjust the dose of rinse aid by means of the six position selector. (Position 1: minimum dose, Position 6: maximum dose.) Gradually increase the dose if there are drops of water or lime spots on the dishes after washing. Reduce it if there are sticky whitish streaks on the dishes.

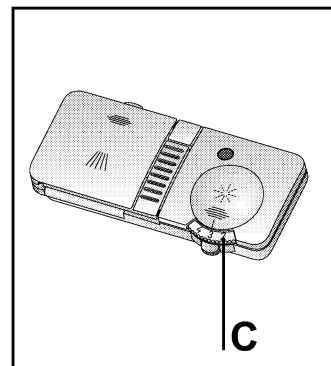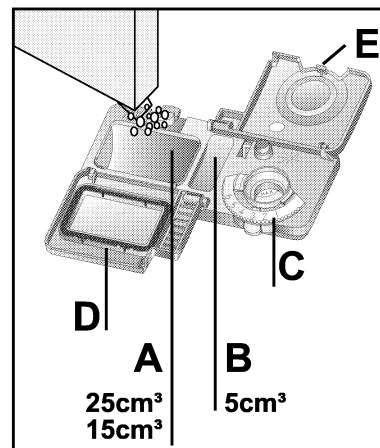


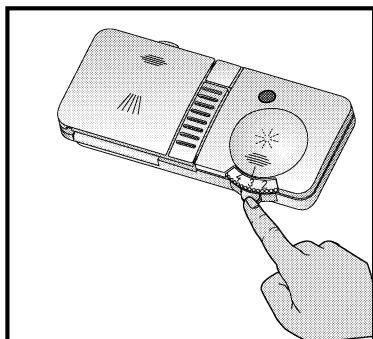

## Usage Information

### Filling the rinse aid dispenser

Open the rinse aid container lid.  
 Fill up with rinse aid until the container is full to level of 'max' mark.  
 Put the lid (E) on and ensure you hear the clicking sound.  
 Remember to CLOSE the lid after every refill.  
 Make sure you clean any rinse aid that you might have spilled.

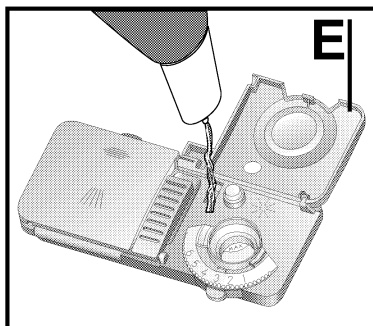

**Visual indicator**

**Dark = sufficient rinse aid**

**Light = add rinse aid**



## Operating the dishwasher

### Loading the dishwasher

There are three separate baskets, in which you can put your dinnerware, in your machine.



The shelves on the rack are made adjustable to accommodate tall pieces.

Loading the dishwasher correctly will increase the washing, drying and energy performance of your machine. Examine the information given in this section and the information stated in the daily usage card given with the manual.

Place large or heavily soiled items in the lower basket, and small, light or delicate articles in the upper basket.

Place tall, narrow items in the middle of the racks.

Long-stemmed glasses should lean against the basket, the racks, or the supports (if applicable), not against the dishware.

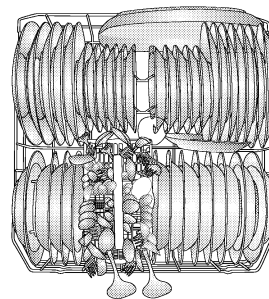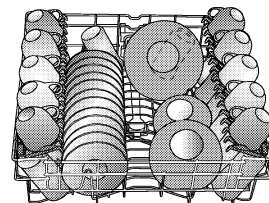

When loading your dishwasher please ensure tall glasses (and/or wine glasses) rest against the sides of the upper basket or the glass holders. Do not allow tall glasses to rest against each other since they may be damaged during washing if not properly supported.

You can fold the glass holders in the upper basket when you need more space for larger items (Glass holders are not available on all models. Models with glass holders may also differ: certain models have fixed glass holders while others have removable single or two piece glass holders).

### Folding Plate Support Rods

There are four separate "folding plate support rods" in the lower basket of your dishwasher designed to allow you more space to accommodate saucepans and large bowls in the lower basket. You can either fold each section (1,2,3,4) individually or, all at once, to create a large empty space. Simply press the handgrips (A) and fold them down.

