

KENT SANDWICH TOASTER

Make Healthy and Crispy Sandwiches

Instruction Manual

KENT
Smart Chef
Appliances

HOUSE of PURITY

**NON-TOXIC
CERAMIC
COATING**
For Healthy Cooking



INTRODUCTION

We, at KENT, have always believed that a clean and healthy life is the right of every individual. This ethos is what made us embark on the journey to develop innovative solutions for purifying the water that we drink, vegetables and fruits that we eat, the homes that we live in and air that we breathe.

Use of innovative technology and the support of a competent service network, have enabled us to create a brand which has become synonymous to well-being. Continuing with the tradition, we now present the KENT Sandwich Toaster, a new age kitchen aid to make tasty and healthy sandwiches in the comfort of your home.

Apart from being convenient to use, KENT Sandwich Toaster comes with a non-toxic ceramic coating that lets one make healthy sandwiches without the fear of burning the food.

FEATURES OF KENT SANDWICH TOASTER

1. Non-toxic ceramic coating for healthy cooking
2. Sandwich toaster makes 4 sandwiches at a time
3. Ergonomic handle with lock
4. Automatic temperature cut-off
5. Easy to use, clean and store

KNOW YOUR PRODUCT

Power indicator



Ready indicator

Handle

Non-toxic ceramic coating plate

Lock

ITEMS IN THE BOX

1. KENT Sandwich Toaster :01 No.
2. User Guide :01 No.

USING KENT SANDWICH TOASTER

1. Remove any stickers that might prevent from operating the unit.
2. Check the unit for damages. Do not use in case of any damages.
3. Before switching on the appliance, make sure that your home main voltage corresponds to the unit's operating voltage.
4. Clean the parts of the KENT Sandwich Toaster before using the appliance for the first time (see 'Cleaning & Maintenance' section).
5. Make sure all parts are completely dry before you start using the appliance.

HOW TO OPERATE

1. Clean the parts before using.
2. Plug in the appliance and let it pre-heat for 2-3 minutes. While it is preheating, the LED light will glow. Once it is ready, the green light will turn off.
3. Open the lid. You may grease the surface with little oil.
4. Place the bread filled with desired ingredients/ filling.
5. Close the lid and let it cook for about 2 to 4 minutes, till the light turns off or until the bread turns golden brown (the time to cook will vary).
6. Once the snack is cooked, open the lid and take it out.
7. After cooking, unplug and let it cool before cleaning and storing.

Note: Never use metal tongs or a knife as these can cause damage to the ceramic coating.

CLEANING & MAINTENANCE

- Switch off and unplug the appliance before cleaning it.
- Wipe the main unit with a moist cloth and non-abrasive liquid cleaner.
- Do not immerse the appliance in water or any other liquid.
- Never put any part of the appliance in the dishwasher.
- After cleaning it thoroughly, dry it using a soft cloth.
- Ensure that the appliance is completely dry before storing it.

Note: Never immerse the unit in water, nor rinse it under the tap. Wipe it with a dry cloth.

PRECAUTIONS

- Do not disassemble, repair or alter the appliance on your own. It may cause appliance failure or breakdown.
- The input voltage must not exceed the rating; it might damage the appliance.
- Unplug before cleaning/moving the appliance.
- Do not use the appliance with damaged power cord or plug.
- Do not install the appliance near any heat source.
- If the appliance is not being used for longer time, unplug it.
- Do not use the appliance when it is in recumbent or inclined position.

IMPORTANT SAFETY INSTRUCTIONS


When using an electrical appliance, basic precaution should always be followed, including the following:

1. Unplug, when not in use and before servicing.
2. After cooking, unplug and let it cool before cleaning and storing.
3. To reduce the risk of electric shock, do not use near or on wet surfaces.
4. Use the appliance only as described in the manual.
5. Do not use the appliance if cord or plug is damaged or worn out. Replace the damaged cord or plug immediately.
6. Do not try to service the appliance on your own.
7. Keep cord away from heated surfaces.
8. Do not unplug the appliance by pulling the cord. Always unplug by pulling the plug and not the cord.
9. To avoid electric shocks, do not use the appliance with wet hands.
10. Keep hair, loose clothing, fingers and all parts of body away from moving parts.
11. This appliance is suitable for indoor use only.
12. Keep away from children.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance does not start	There is a connection problem	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket
	The appliance is defective	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance
The appliance suddenly stops working while running	The appliance has overheated	Let the appliance cool for 20 minutes before attempting to restart it
	The appliance is defective	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance

TECHNICAL SPECIFICATIONS

Model Name	KENT SANDWICH TOASTER
Model Number	116024
Net Weight	1.60 kg
Plate Size (mm)	223 (W) x 130 (H)
Input Power Supply	Single phase 220-240 V AC, 50Hz. 
Total Power Consumption	700 W



HOUSE of PURITY



Innovations for
Better Living

Imported & Marketed by:
KENT RO SYSTEMS LTD.
A-6, Sector-87, Noida-201301.

For customer complaints, contact our Customer Care Officer at:
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India. Call: 092-789-12345
E-mail: service@kent.co.in or visit us at www.kent.co.in