



Imported & Marketed by:
KENT RO SYSTEMS LTD.
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India

For customer complaints, contact our **Customer Care Officer** at:
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309,
India. Call: 92-789-12345 | E-mail: service@kent.co.in
or visit us at www.kent.co.in

Made in People's Republic of China

KENT CRISP POP-UP TOASTER

The secret to making perfect toasts

Instruction Manual



FEATURES



6 HEATING
MODES



2 SLICE POP-UP
TOASTER



SLIDE OUT
CRUMB TRAY



CANCEL
FUNCTION



Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to **KENT**.

At the outset, allow us to thank you for your trust in **KENT Smart Chef Appliances**. At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with **KENT Crisp Pop-up Toaster** performance and that it will serve you and your family's need without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarize yourself with operation and maintenance.

With the robust quality, you can look forward to years of trouble-free service.

To ensure that the warranty of your appliance is effective, it is important that you fill up the enclosed warranty card and mail it to us within 15 days of purchase.

In case you require any further information, please contact your nearest **KENT** dealer or branch.

Bon Appete!

KENT RO Systems Ltd.

TABLE OF CONTENTS

1.	Introduction	1
2.	Features of KENT Crisp Pop-up Toaster.....	1
3.	Know Your Product.....	2
4.	Items in the Box.....	2
5.	Using KENT Crisp Pop-up Toaster.....	2
6.	Operation	3
7.	Cleaning & Care Instructions	3
8.	User Instructions	4
9.	Technical Specifications	5

INTRODUCTION

We, at KENT, have always believed that a clean and healthy life is every individual's right. This ethos is what made us embark on a journey to develop innovative solutions for purifying the water that we drink, vegetables and fruits that we eat, homes that we live in and the air that we breathe.

With the use of innovative technology and supported by a competent service network, we have been able to create a brand which has become synonymous to well-being and health.

KENT Crisp Pop-up Toaster is all set to become your favourite kitchen appliance. That's because, this amazing toaster helps you make perfect toasts, just the way you like it. Whether it is light, medium, or dark brown, its easy-to-use 6 heating modes offer you control over the browning of your toasts. On top of that, it is extremely easy to clean and store. So, go ahead make your mornings perfect with perfect toasts.

FEATURES OF KENT CRISP POP-UP TOASTER

1. Variable electronic timing control with 6 Heating modes: Achieve the desired colour and crispness for your toasts easily.
2. Reheat: Toasts aren't warm anymore? That's okay! Reheat them instantly.
3. With wide slots, you can easily cook up to 2 slices at a time!
4. Removable crumb tray: Cleaning your toaster is now simple. Remove the tray, clean it and slide it back in place.
5. Mid cycle cancel/ Stop function: You can cancel the toasting process at any time.
6. It comes with a convenient auto pop-up function and auto shut-off function.
7. Anti- jammed protection: No more worries of burnt toasts as its anti-jammed function is here to prevent it.

KNOW YOUR PRODUCT



ITEMS IN THE BOX

- | | |
|-------------------------------|-----|
| 1. KENT Crisp Pop-up Toaster: | 1 N |
| 2. Power Cord : | 1 N |

USING KENT CRISP POP-UP TOASTER

- Remove any stickers that might prevent normal operations.
- Check the unit for damages. Do not use in case of any damages.
- Before switching on the appliance, make sure that your home's main voltage corresponds to the unit's operating voltage.
- Clean the parts of the KENT Crisp Pop-up Toaster before using (see 'Cleaning & Maintenance' section).
- Make sure all the parts are completely dry before you start using the appliance.

OPERATION

1. Place toaster in a flat, dry and stable surface.
2. Place bread or other toaster food into the slot, then press the lever down, and it remains down until the bread is toasted.
3. Plug in the toaster and adjust to the type of toasting according to your requirements with the regulator.
4. If you want to stop the toasting cycle, press the stop button. The bread will pop up and automatically switches off the heating elements.
5. If the bread sticks in the toaster, unplug it, and wait for it to cool down and then remove the bread.

CLEANING AND CARE INSTRUCTIONS

Let The Toaster Cool Completely Before Cleaning

1. Unplug toaster from the electrical outlet.
2. Don't use coarse or abrasive cleaner or steel wool to clean toaster. Never spray or apply cleaners directly to the toaster. Spray the cleaner/cleanser on soft cloth and wipe the appliance to clean.
3. Wipe the outside of the toaster with a soft, damp cloth, and polish it with a soft and dry cloth.

USER INSTRUCTION

When using electrical appliances, basic safety precautions are mandatory to follow along with the below mentioned instructions:

1. Don't place any part of toaster in water or any other liquid.
2. First use toaster for few minutes without bread. There will be a little smoke but it is entirely normal.
3. Don't touch the hot surface.

4. If the cord is damaged, to avoid hazards, it must be replaced by the manufacturer or by an authorized technical service.
5. Do not use it outdoors.
6. Keep toaster out of reach of children.
7. Use only pre-sliced bread.
8. Don't insert oversize foods, metal foil packages, or metal utensils to avoid an electric shock.
9. Don't use toaster near a place which has curtain and decorative fabric etc. In this way it is easy to catch a fire.
10. Don't place it on or near hot gas, electric burner or heated oven.
11. Don't operate it in the presence of explosive or flammable fumes.
12. When the toaster is plugged in, please don't move the food.
13. Don't clean with metal scouring pads. As the pieces can break off the pad and touch electrical parts involving a risk of electrical shock.
14. Make sure to turn off the power supply, when it is cool, hold on and remove the crumb plate.
15. This appliance can be used by children aged from 8 years and above. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of appliance by a person responsible for their safety, the children should be supervised to ensure that they don't play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children who are less than 8 years old.
16. When the appliance works, the superficial temperature gets very high.
17. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

Warning: If toasts are of small size i.e. less than 85mm, you must pay attention to the potential risk of burning when taking out the bread slice.

PLEASE KEEP THESE INSTRUCTIONS

This appliance is for household use only.

WARNING: THIS APPLIANCE MUST BE EARTHED.

TECHNICAL SPECIFICATIONS

Product	KENT Crisp Pop-up Toaster
Product Code	116105
Product Colour	White
Net Weight	0.73 kg
Input Power Supply	220-240V
Power Consumption	650-750W