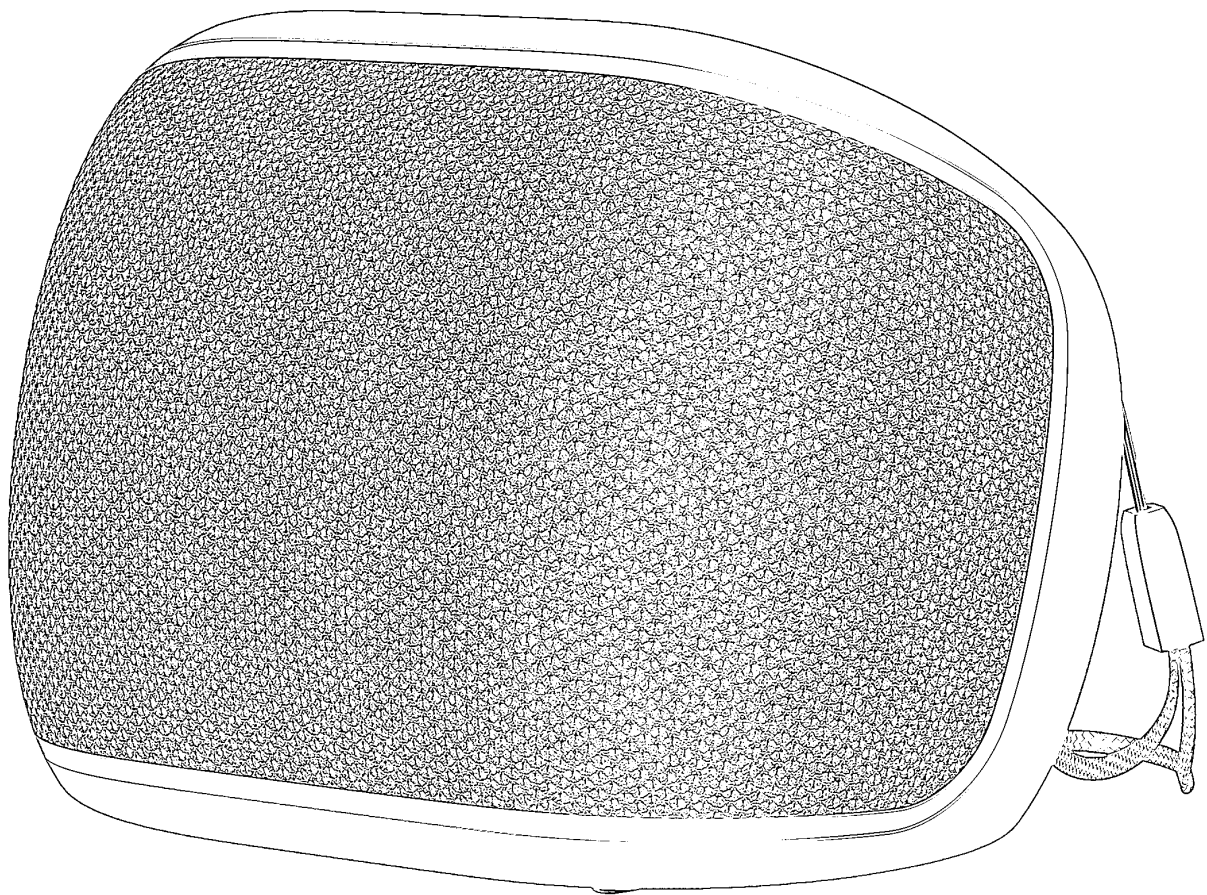 




**LAPCARE<sup>®</sup>**

Expect More Explore More

# **Bluetooth Speaker Instruction Manual**



# **PULSE LBS-333**

## Manual for speaker

Small, compact size gives your audio powerful sound. The clear sound is powered by new generation amplifiers, that you can take with your enjoy anywhere.

### FEATURES:

1. Portable speaker for your smart phone, tablet, laptop, or MP3 Player.
2. Light-weight, small in size, but incredible sound.
3. Plastic housing provides protection and great sound.

### COMPONENTS INCLUDED

1. speaker
2. Audio cable
3. Micro USB charging cable

# Specification

IPX4	:	Splashproof
Chip	:	AC6925E
Bluetooth version	:	V5.0
Rated power	:	4W
Peak power	:	5W
Battery	:	3.7V /1000mAh
Playing Time	:	5- 6H (Standard volume)
Charging time	:	3H
Supported	:	BT, AUX, micro SD Card, FM, USB, TWS Pairing, Hands-free calls, Voice Assistant
Bluetooth range	:	~10M
Input voltage	:	DC5V/1A
Charging port	:	Micro USB
Net weight	:	219g
Product size	:	96 x 68 x 64 mm
Material	:	ABS + Fabric"



### Under Line-in Model:




 
 




"AUX" AUX audio playback: appendix provides the 3.5mm audio line. Can play music by link to mobile phone, MP3, MP4, PC, IPOD and other audio devices.




**Reminder:** When it's on AUX model, above buttons keeps on the same function.

### Under radio Model:

Insert the 3.5mm audio line in to the  Aux input slot as antenna. (some special model speaker need insert the charging line into the  charging hole).

Then long press the  turn on the speaker. After that short press the  change to the radio model. Afterwards you can short press the  button, waiting few seconds this speaker will auto search radio channel for you. When it finished you can short press the  or  button to change the channel manually. Of course you can long press the  or  button for volume decrease /increase.

 

 


 
### The interface description:

- 1,  The charging micro usb port.
- 2,  The Aux input slot.
- 3,  The TF card interface. (only some special model)

### SAFETY CAUTIONS:

1. Please read the instructions carefully before using.
2. Avoid contact with liquids; keep away from water, and high moisture conditions.
3. Do not locate the speaker or cord near heat sources such as radiators, heaters, air ducts. or direct sunlight.
4. Do not place a naked flame source such as candles on the Mini Speaker.
5. Recharge the battery with suitable voltage output(5V/500mA)
6. Do not hit the product severely, or insert any conductive objects into the speaker, or charging jack.
7. Do not block the speaker grill when the speaker is running.
8. Stop using at once if high temperature, smoke, burning smell, nor-normal noise, or fire are noticed coming from product.
9. Do not repair on your own, seek the help of a professional.
10. To avoid getting shocked, do not touch product with wet hands.
11. Keep out of reach of children.

#### Button description:

- 1,  Long press for volume decrease; short press for last song.
- 2,  Short press for pause or answer / off the phone.
- 3,  Long press for volume increase; short press for next song.
- 4,  Long press for switch on/off.
- 5,  short press for radio /bluetooth play/line in model change
- 6,  short press for radio channel auto search when this speaker under radio model.

#### TRIPLE SHOOTING

##### No Sound:

1. Audio cable is not fully plugged into the 3.5mm audio port on speaker or device.
2. Audio cable is damaged.
3. Source of audio is not working.
4. No LED indication when audio cable is plugged-in.
5. Mini speaker is out power.

##### Not charging:

1. Input power source is not normal(5V/500mA)
2. Micro USB adaptor of charging cable is not fully plugged into the mini speaker charging port.
3. Charging cable is damaged.
4. Battery failure.

##### No LED indication:

1. LED indication failure.
2. No battery power left.
3. Audio cable is not fully plugged into the socket.