

2.75 INCH



**Packaging Content:** Sound Bar : 1 U,  
Charging Cable : 1U and User Manual

**WARRANTY CARD MULTIMEDIA SPEAKER SYSTEM**

MODEL	SERIAL NO.

CUSTOMER'S NAME .....

.....

Address .....

.....

.....

Bill No. .... Bill Date .....

DEALERS STAMP  
AND SIGNATURE

**GIZmore**  
NEW AGE SOUND

**GIZBAR 900**  
SOUNDBAR



3.75 INCH



For Consumer Complaint, Contact:  
**ZAZZ TECHNOLOGY CONNECT PVT. LTD.**  
A-30, First Floor, F.I.E.E Complex, Okhla Industrial Area,  
Phase-2, New Delhi-110020  
Email:Customercare@gizmore.in  
Customer care No: +919654034400

**User Manual**

# Introduction

## 1.1 Acknowledgments

Thank you for choosing our speaker. It based on the mainstream low-power portable Bluetooth version 5.0 program that allows you to enjoy music anytime, anywhere.

This manual describes the various features of the product, tips and cautions, please read this manual carefully before using the product.

## 1.2 Precautions

### Care and maintenance

- Keep the device dry. Do not let the device, battery, contact with water and water vapor.
- Do not make the equipment, battery to strong impact or shock, or cause equipment, battery failure.
- Do not place the speaker or battery to high or low temperature area, place the device, it may cause the device, battery failure.
- Do not strike, throwing, needling speaker, and to avoid drop, crush, bend product.
- Do not disassemble the device, otherwise the device will not be covered by the warranty.



Dear Customer,

We congratulate you for having purchased multimedia speaker system. We are confident that you will enjoy it. This card is a key to service and warranty:


### Terms Conditions of Warranty

- (1) This set is warranted against defective parts / defective parts / components and faulty workmanship for a period of 1 year from the date of purchase.
- (2) This Warranty covers only the repairs and does not entitled you for replacement of this product.
- (3) The customer has to provide original Warranty Card duly filled and stamped by the Dealer at the time of using our service or the original purchase invoice.
- (4) This Warranty does not cover any form of damage resulting from dust, foreign object, fire, water, input voltage beyond specification, riot, mishandling, commercial use, lightening, flood or any act of natural calamity.
- (5) Company will not accept any responsibility for damage arising out of unauthorized modifications or alterations, repairs, or mishandling Incurred during transit.
- (6) This Warranty does not cover the cost of transportation of the product from the place of installation to the service centre.
- (7) The company shall not be liable for any delay from causes beyond its reasonable control in repairing due to non availability of any component, accessory, labour problem, public movement, war and any unavoidable circumstances.

### 3.2.2 Bluetooth phone call (Hands Free)

1. When a call comes in Bluetooth mode, press Play key to access the call, make a call.
2. During a call, the volume up and down keys may be used to adjust voice volume.
3. Short press the Play / Pause button  End the call.
4. Double Play / Pause  The most recent call-back call.

### 3.2.3 Music player

1. Stand-alone Play / Pause . You can Play /Pause music.
2. Press **+** Switch to the next song, press **-** Switched to the previous.


### 3.3 External TF Card Audio Player

TF card: Insert the downloaded music TF card, you can play music (support FAT32 file system format maximum 32G).

### 3.4 AUX/Line-In

Using AUX cable connected AUX  of the speaker, the other terminal from Mobile / Tablet/ Computer/TV, it will sound "Aux Mode" or "Line-In" mode., then operated on the terminals.

### 3.5 FM Mode

1. FM Radio: Short press "M" key to enter the FM radio mode switching.
2. Auto Search: Long press the Play/Pause  button, auto search radio signal after station search is completed, it will automatically jump to the first channel and play.

### 1.3 Safety Tips

Before using the product, please read the information in this section, and let your children know that information. For more detailed information, please refer to the safety instructions and precautions.

- Do not use products while driving, so as not to hinder safe driving.
- In medical sites, please comply with the relevant rules or regulations. Near medical equipment, please turn off product.
- Turn off the products before boarding, so as not to interfere with the plane control signals.
- Turn off the products in the vicinity of high-precision electronic devices, or it may cause electronic equipment failure.
- Do not disassemble products and accessories, only authorized center are allowed to repair this product.
- Please away from magnetic equipment, the radiation of products will erase the information stored on the magnetic device.
- Do not using products in place where high temperature, flammable gases (such as a nearby gas station).
- Please put the accessories out of the reach of small children. Do not allow children to use the product without human supervision.
- Please comply with relevant laws and regulations when using this products, and respect others' privacy and legal rights.
- Strictly follow the instructions in this manual when using the USB

charging cable, as this may damage your product.

- Do not use products in the bathroom or other wet environment, to avoid or rinsing liquid.

## Overview

### 2.1 Equipment packing list

The box includes the following items:

- Bluetooth Soundbar \* 1
- USB Charging Cable \* 1
- User Manual \* 1

### 2.2 Charging

Before using the machine for the first time, charge the battery: Use 5V USB Interface power adapter to charge the product.

**\* Be sure to use a 5V output adapter for charging, charging not less than 5V, above 5V will burn the device.**

Please select charging adapter strictly accordance with product specifications .

### 2.3 Specifications

- |                    |   |              |
|--------------------|---|--------------|
| ● RMS              | : | 10W (5W x 2) |
| ● Speaker Driver   | : | 2" x 2       |
| ● Bluetooth        | : | 5.0          |
| ● Battery Capacity | : | 2000mAh x 2  |

● Battery Charging Power : DC5V / 1A

● Working time Upto : 4 hours

Transmission distance : 10 Meter (Transmission distance varies due to differences in environmental factors and Bluetooth cell phone devices )

## Quick Start

### 3.1 Charging

1. Please use 5V/1A charger to the device via the USB cable. The battery life will vary depending on the volume and the use of different environments.
2. Please charge instantly when voice "low battery, please charge", if not , speaker will turn off automatically when the power is low.
3. If the machine is not used for a long time, be sure to charge at least twice a month may protect the battery to extend battery life.

**\* Make sure the output voltage of the charger again before charging , it must not be used more than 5V, otherwise it will burn audio equipment.**

### 3.2 Bluetooth speaker and Bluetooth devices

#### 3.2.1 Bluetooth connection

1. The audio switch to Bluetooth mode (mode switching key press "M")
2. Open the Bluetooth device (Smart Phone / Tablet, etc.), search for the name of this device pairing "SOUND BAR", success can be connected to the display.