

WARRANTY

- Havells provides a Two year warranty* for this product from the date of purchase against manufacturing defect(s) due to defective materials or workmanship. If the product becomes defective within the warranty period, Havells will repair, free of charge.
- The warranty provisions do not cover failure due to accident, misuse, abuse, negligence or non-observation of local regulations on part of the user. The warranty provisions do not apply where the appliance has been serviced by a person not authorised by Havells or serviced with no approved parts thereby causing further fault/damage to the product.

ENSURE FOR WARRANTY

- Retain the warranty card duly filled in and stamped by authorised dealer along with original invoice/cash memo.

Havells India Ltd.

QRG Towers, 2D, Sector-126, Expressway,
Noida - 201304. U.P. (INDIA)

E-mail : customercare@havells.com,

Website : www.havells.com,

Consumer Care No.: 1800 11 0303, 1800 103 1313,
(All Connections), 011-4166 0303 (Landline)

Join us on Facebook at www.facebook.com/havells and
share your ways to save the planet!

Diagrams or figures in this document are for illustration purposes only.

Copyright Subsists. Imitation of trade dress, graphics and color scheme of this document is a punishable offence.

Actual products may vary in colour, design, description and colour combination etc. Although every effort has been made to ensure accuracy in the compilation of the technical detail within this publication. Specifications & performance data are constantly changing.

Regional & Branch Offices:

NORTH - REGIONAL OFFICE: Corporate Office: QRG Towers, 2D, Sector-126, Expressway, Noida-201304, Tel: 0120-3331000, Delhi: Tel: 011-47676700, 23888200, Chandigarh: Tel: 0172-4232400-401, Dehradun: Tel: 0135-6670202, Noida / Haryana: Tel: 0120-3331000, Ludhiana: Tel: 0161-4676000 / 24, Jammu: Tel: 0191-2478330, 2479330, Sri Nagar: Tel: 0194-2490431, Jaipur: Tel: 0141-3914645, 3988210, Jodhpur: Tel: 0291-9214201640 / 45, Lucknow: Tel: 0522-6672100, Kanpur: Tel: 0512-6710400, 6710409

EAST - REGIONAL OFFICE: Kolkata: ICC Tower, 5th Floor, 4 India Exchange Place, Kolkata-700001, Tel: 033-40129851/ 52, Bhubaneswar: Tel: 0674-6668101/102/103/104, Guwahati: Tel: 0361-2134521, 2458923, 2460355, Siliguri: Tel: 0353-2525907, Ranchi: 0651-2244861, 2244862, 2244864, 2244868, 2244869, Jamshedpur: Tel: 0657-6542492, 09234369436, Patna: Tel: 0612-2207221, 2207222, 2207223, 2655518

WEST - REGIONAL OFFICE: Mumbai: 1271, Solitaire Corporate Park, Bldg. No. 12, 7th Floor, Andheri - Ghatkopar Link Road, Chakala, Andheri (East), Mumbai- 400093. Ph.: 022 - 67298600-602, Ahmedabad: Tel: 079-40061111, 40060738-740, Indore: Tel: 0731-2572340-41, 4009998 (Airtel), Rajkot: Tel: 0281-2481112, 2921212, Nagpur: Tel: 0712-2240932, 2242692, 2242699, Pune: Tel: 020-64016413 / 14, Raipur: Tel: 0771-4243400 / 01, Surat: Tel: 0261-2350137, 9979890137, Jabalpur: Tel: 0761-4064491

 
 
 
 
 
 
 
 
 
 
 
 
 
SOUTH - REGIONAL OFFICE: Chennai: Sigapi Achi Building, No. 18 / 3, 6th Floor, Rukmani Lakshmi Pathy Road, Egmore, Chennai-600008, Tel: 044-42280600, 605, Bangalore: Tel: 080-49075000, Coimbatore: Tel: 0422-4550200, 2305199, 2306199, Hyderabad: Tel: 040-27533372, 27533355, 27533632, 66320407/0408/6401/6402, Kochi: Tel: 0484-4099000, Vishakapatnam: Tel: 0891-6514339, Vizag: Tel: 0891-6514339, Vijayawada: Tel: +91-9247058847/57, Calicut: 0495-4019194, Madurai: 0452-4267022, Trivandrum: 0471-4015323, Hubli: 0836-4248600, Trichy: 09944460160

Representative Offices: • Goa • Solapur • Gwalior • Kathmandu • Bhopal



 
 
 
 
 
 
 
 
 
HAVELLS

 
 
 
 
USE & CARE MANUAL DRY IRON

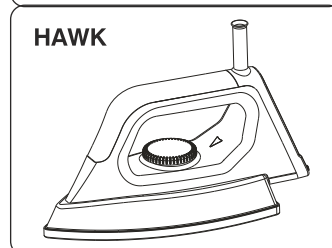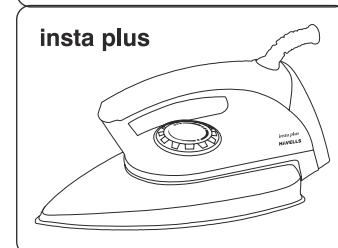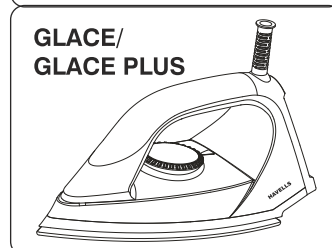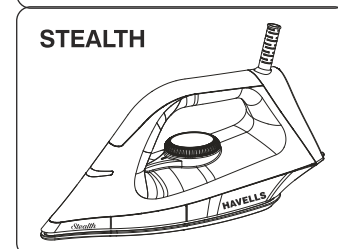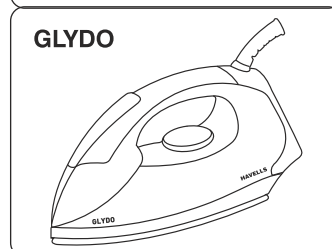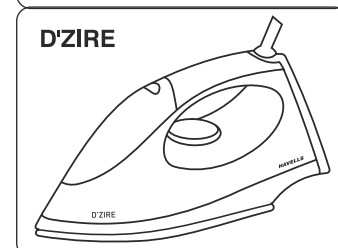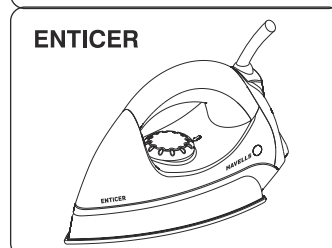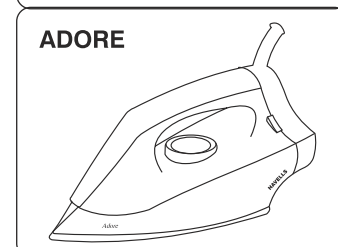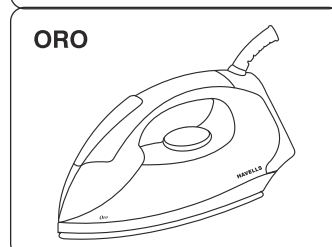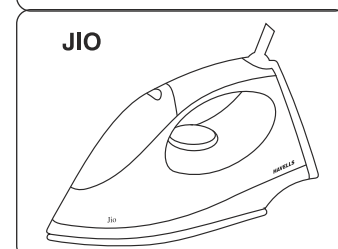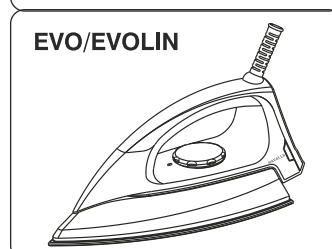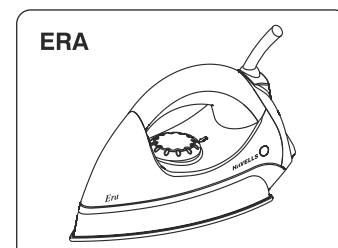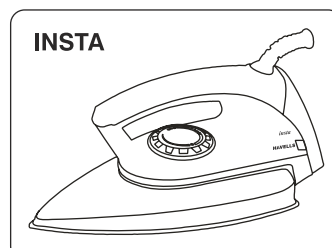

2 YEAR Product
Warranty*

► SPECIFICATION / IDENTIFICATION OF PARTS
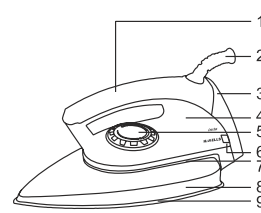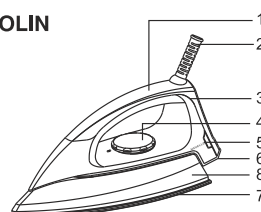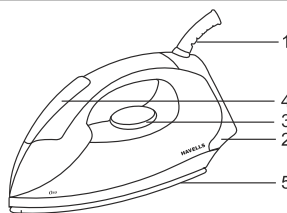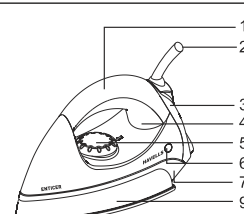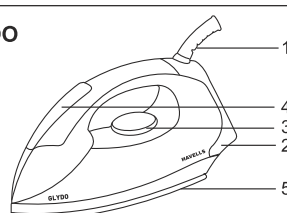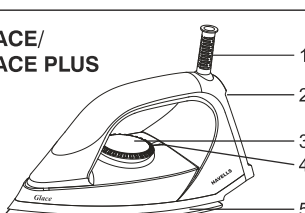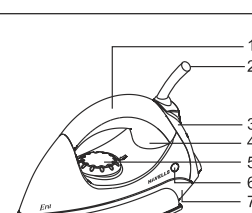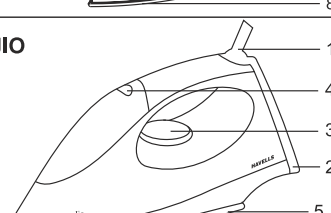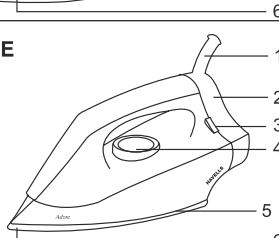
<p>INSTA</p> 	<ol style="list-style-type: none"> 1.Handle Grip 2.Cord Swivel 3.Back Cover 4.Main Body 5.Temperature Control Dial 6.Indicator Lamp 7.PBT 8.Stainless Steel cover 9.Soleplate
<p>EVO/EVOLIN</p> 	<ol style="list-style-type: none"> 1.Handle Grip 2.Cord Swivel 3.Main Body 4.Temperature Control Dial 5.Indicator Lamp 6.PBT 7.Soleplate 8.Stainless Steel cover
<p>ORO</p> 	<ol style="list-style-type: none"> 1.Cord Swivel 2.Back Cover 3.Temperature Control Dial 4.Indicator Lamp 5. Button Groove 6.Soleplate
<p>ENTICER</p> 	<ol style="list-style-type: none"> 1.Handle Grip 2.Cord Swivel 3.Back Cover 4.Main Body 5.Temperature Control Dial 6.Indicator Lamp 7.PBT 8.Soleplate 9.Stainless Steel cover
<p>GLYDO</p> 	<ol style="list-style-type: none"> 1.Cord Swivel 2.Back Cover 3.Temperature Control Dial 4.Indicator Lamp 5. Button Groove 6.Soleplate
<p>GLACE/ GLACE PLUS</p> 	<ol style="list-style-type: none"> 1.Cord Swivel 2.Back Cover 3.Temperature Control Dial 4.Indicator Lamp 5. Button Groove 6.Soleplate
<p>ERA</p> 	<ol style="list-style-type: none"> 1.Handle Grip 2.Cord Swivel 3.Back Cover 4.Main Body 5.Temperature Control Dial 6.Indicator Lamp 7.PBT 8.Soleplate 9.Stainless Steel cover
<p>JIO</p> 	<ol style="list-style-type: none"> 1.Cord Swivel 2.Back Cover 3.Temperature Control Dial 4.Indicator Lamp 5. Button Groove 6.Soleplate
<p>ADORE</p> 	<ol style="list-style-type: none"> 1.Cord Swivel 2.Back Cover 3.Temperature Control Dial 4.Indicator Lamp 5. Button Groove 6.Soleplate
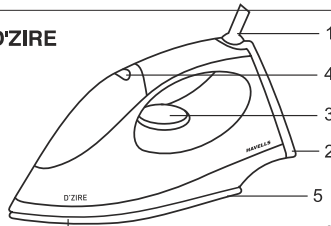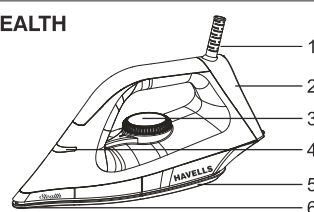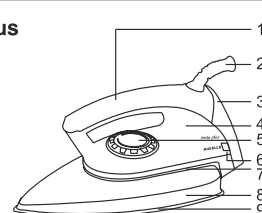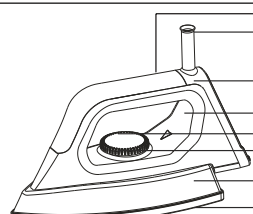
<p>D'ZIRE</p> 	<ol style="list-style-type: none"> 1.Cord Swivel 2.Back Cover 3.Temperature Control Dial 4.Indicator Lamp 5. Button Groove 6.Soleplate
<p>STEALTH</p> 	<ol style="list-style-type: none"> 1.Cord Swivel 2.Back Cover 3.Temperature Control Dial 4.Indicator Lamp 5. Button Groove 6.Soleplate
<p>insta plus</p> 	<ol style="list-style-type: none"> 1.Handle Grip 2.Cord Swivel 3.Back Cover 4.Main Body 5.Temperature Control Dial 6.Indicator Lamp 7.PBT 8.Stainless Steel cover 9.Soleplate
<p>HAWK</p> 	<ol style="list-style-type: none"> 1.Handle Grip 2.Cord Swivel 3.Back Cover 4.Main Body 5.Temperature Control Dial 6.Indicator Lamp 7.Stainless Steel cover 8.Soleplate

MODELS	COLOUR	SPECIFICATION
INSTA/INSTA GOLD	—	750 W 230 V, 1 Phase AC, 50 Hz
ERA	Grey / Purple / Blue	1000 W 230 V, 1 Phase AC, 50 Hz
ERA GOLD	Teal Gold	
EVO/EVOLIN	—	1100 W 240 V, 1 Phase AC, 50 Hz
JIO	Blue/Pink/Green	1000 W 230 V, 1 Phase AC, 50 Hz
JIO GOLD	Cobalt Gold	
JIO HERITAGE	Blue / Purple	
ORO	Grey / Violet	1000 W 230 V, 1 Phase AC, 50 Hz
ORO GOLD	Mulberry Gold	
ORO HERITAGE	—	
ADORE	Grey/Sea Green/Peach	1100 W 240 V, 1 Phase AC, 50 Hz
ADORE GOLD	Heather Gold	
ADOREHERITAGE	—	
ENTICER	—	1000 W 230 V, 1 Phase AC, 50 Hz
D'ZIRE	—	1000 W 230 V, 1 Phase AC, 50 Hz
GLYDO	—	1000 W 230 V, 1 Phase AC, 50 Hz
STEALTH	—	1000 W 230 V, 1 Phase AC, 50 Hz
GLACE	Honey Mustard / Ruby	750 W 230 V, 1 Phase AC, 50 Hz
INSTA PLUS	Peach	1000 W 230 V, 1 Phase AC, 50 Hz
HAWK	Blue	1100 W 240 V, 1 Phase AC, 50 Hz
GLACE PLUS	Blue	1000 W 230 V, 1 Phase AC, 50 Hz

IMPORTANT INSTRUCTIONS

For Household use only:

Thank you for buying Havells appliance. To enable your product to give you many years of perfect trouble free service, we recommend you to carefully follow the instructions of the manual. While using this appliance under given precautions need to be followed strictly.

- Read and follow all the instructions in this manual even if you are familiar with the product, and find a place to keep it handy for future reference.
- Your attention is drawn particularly to the sections concerning “Important Instructions”, “Warranty” and Service statements.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.
- Do not operate the product with damaged cord / plug, after the product malfunction, is dropped, and appears to be damaged in anyway.
- To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by gripping the plug-do not pull on the cord.
- Do not leave the appliance unattended when switched on.
- Avoid touching hot surfaces, Use handles and Knobs.
- This product is intended for household use only.
- Do not attempt to repair the appliance yourself, instead take it to the authorized Havells service center.

YOUR DRY IRON FEATURES

- Temperature control dial: Setting correct temperature for fabric.
- Linished / Non-Stick Teflon coated Soleplate: Safe and Smooth ironing.
- Indicator lamp: Power supply status.
- Swivel cord: Durability and ease of use.




HOW TO USE YOUR IRON

This iron is designed to iron clothes for household only.

- Remove any protective films or stickers from the sole plate.
- Unwind and straighten the power cord.
- Connect the iron to a suitable input AC mains supply outlet.
- Turn the Temperature Dial to the correct fabric selection; Indicator lamp light will glow.
- Indicator lamp light goes off when the required temperature is reached.
- Begin first time ironing with an old fabric to remove any dirt marks from the sole plate.
- Always test the temperature by first ironing on similar area. Remember an iron heats up faster than it cools down. So start with cool fabric and work up to hotter fabric selection settings. If you turn a setting down, allow the temperature to adjust before continuing ironing.
- Unplug the iron from the power supply immediately after use. Unplug the iron by gripping the plug and pulling it from the outlet. Never pull on the cord from the socket.

IRONING ON DIFFERENT FABRIC

- Heat sensitive clothes ironing, please cover a piece of cloth on the clothes first, then ironing, or else the clothes will be burnt.
- Cotton material ironing, please adjusting temperature according the heat resistant of the material.

Cloth Material	Temperature Setting	Marks in Clothes	Preferable Ironing Method
Man-Made Fabric	●		Ironing the back of clothes without any water or cover a piece of cloth on the fabrics you want to iron
Synthetic Fiber	●		Dry ironing the back of the clothes
Silk	● ●		Dry ironing the back of the clothes
Wool	● ●		
Cotton	● ● ●		According to the thickness and gruffer to iron. For some fuscous clothes, better adopt to back ironing.
Linen	● ● ●		

HOW TO CARE FOR YOUR DRY IRON

- Wipe thoroughly with a damp cloth or sponge.
- Never use abrasives, heavy duty cleansers, vinegar, scouring pads or sharp objects.
- Do not use metal scouring pads since they will scratch the coating on soleplate.
- After the iron is cool down completely, wind the cord around the storage wrap on the heel of the iron. Do not wind it too tightly as this may damage the iron.

NOTE (DON'Ts)

- Do not touch the soleplate while the iron is hot.
- Do not leave the iron unattended while connected to the electrical supply.
- Do not immerse the dry iron on water.

WARRANTY CARD

Customer Name _____

Customer Address _____

Pin Code _____

Date of Purchase _____

Dealer's Name & Address _____

Dealer's Stamp:

Product Model _____

Product Serial No. _____

