



## SPECIFICATIONS

- Bluetooth version: 5.0
- Speaker driver unit size: 4 INCH
- Output power: 16W
- Frequency response: 100Hz-20KHz
- Signal to noise ratio: >85dB
- FM scan range: 87.5-108.0Mhz
- Wireless range: 10 meter
- Max memory USB/SD: 32GB
- USB charging: DC 5V
- Battery capacity: 1200mAh
- Play time: Upto 4 hours at 50% Volume
- Charging via USB port (PC): 2-3 hours charging time


## CONNECT TO BLUETOOTH DEVICE

1. Turn on the iGear Dynamo.
2. Switch ON your mobile device's Bluetooth.
3. Search for the name "iGear Dynamo" and pair the device.
4. Once the device is paired, Bluetooth will automatically connect when the unit is turned on.

## TWS OPERATION

1. Turn on both the speakers at the same time.
2. Choose one of them, on one of the speaker press and hold the "M" button for a few seconds, then a notification sound will indicate of pairing.

Note: TWS works in Bluetooth Mode only

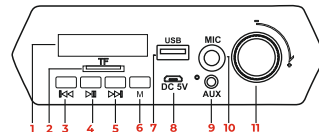

1. Digital Display
  2. TF Card slot
  3. Previous/Back Button
  4. Play/ Pause Button
  5. Forward/ Next Button
  6. Mode Button
  7. USB slot
  8. 5V Charging Port
  9. AUX Port
  10. Mic Port
  11. Power (ON/ OFF) /Master volume knob
- NOTE: If FM mode reception is not good, connect a Micro USB cable for better FM reception.

## ACCESSORIES

- Charging cable: 1 piece
- Remote: 1 piece
- Corded Mic: 1 piece
- Aux cable: 1piece.

## AUX-IN

To use AUX-IN, simply plug in the audio cable into the AUX jack, and press 'M' to switch to AUX-IN mode. You can long press and to turn down and turn up the volume. Please note that under AUX-IN mode, you will not be able to shift to Prev. and Next through the buttons on the Bluetooth speaker, but it can be controlled by the connected devices.

## USB / TF CARD

Insert the USB/TF card into the USB/TF slot. It will read the MP3 format music automatically. Press to Play/Pause. Short Press or to switch to Prev or Next Song. Long press or to increase or decrease the volume.

## FM RADIO

Long press the Play/Pause button, it will search for the available stations and save them automatically. Once the search is completed, Short press the or button to switch between the saved stations. Long press or to increase or decrease the volume.

## CHARGING

Use the original charging cable to charge the device  
A Red LED lights up when the device is charging.

Warranty period: 1 Year  
In case of consumer complaints:  
Toll free number - 1800 22 8495  
Email: sales@igear.asia  
(Between 10am to 5pm, Mon-Fri)