


Precaution

1. Do not expose the product to high temperature, water or moisture
2. Do not attempt to open or disassemble the product. You can get an electrical shock.
3. Product should be opened by the Zebronics Authorised service personnel only else the warranty will be void.
4. Please turn off the power and pull out the plug when the product is not in use.
5. USB connection can be used only for playing track stored from U-disk. Charging for mobile or digital products is prohibited

Packing list

Subwoofer	1unit
Satellite.....	2 units
Input cable.....	1unit
User manual.....	1unit
Remote.....	1unit

Rear panel description

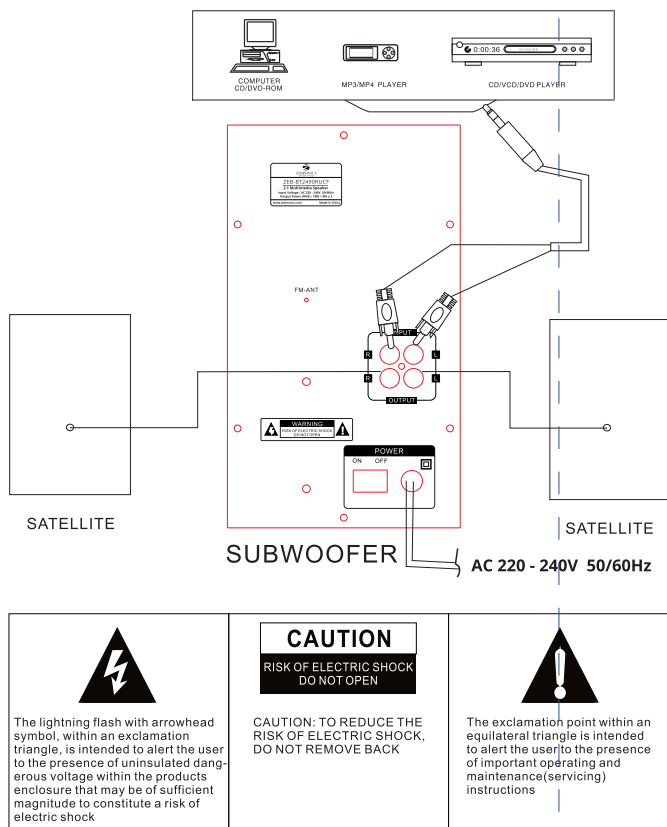

2.1 Speaker ZEB-BT2490 RUCF



User Manual

ISO 9001:2015 Certified Company
www.zebronics.com

285

95

95

Remote Control

INPUT -----	The input signal switching (AUX/Bluetooth/USB/SD/FM)
STANDBY -----	Stand by (on/off) mode for speaker unit.
PREV/FM -----	Previous track in USB & SD Card modes, previous FM station in FM mode.
PLAY/PAUSE --	Play & pause in USB & SD Card modes, Mute/Unmute in AUX & FM modes, Long press for auto searching - FM station in FM mode.
NEXT/FM+ -----	Next track in USB & SD Card mode Next FM station in FM mode.
0-9 -----	0 TO 9 button is the selection key to select the tracks in the USB and SD Card
100+ -----	This is used to select track when more than hundred tracks in your USB/SD Card.
EQ -----	Equalizer presets in USB & SD/MMC modes. PASS/POP/ROCK/JAZZ/CLASS/COUN.
- VOLUME+ ----	Volume level increase & decrease

BLUETOOTH CONNECTION INSTRUCTIONS:

First, press the **INPUT KEY** to switch to the "BT" **Bluetooth Audio INPUT** mode. Next open the phone's Bluetooth and search for the Bluetooth device. Click on the Bluetooth name "**ZEB-BT2490RUCF**" to connect.

Features


2.1 Channel Speaker
Wireless BT/USB/SD/FM/AUX
LED display
10.92 cm Subwoofer
Volume, Bass & Treble Adjustment
Blue LED Power indicator
Remote control

Specification:

Output power (RMS)	
Subwoofer	: 18 Watts
Satellite	: 8 Watts x 2
Total	: 34 Watts
Driver size	
Subwoofer	: 10.92 cm x 1
Satellite	: 7.62 cm x 2
Impedance	
Subwoofer	: 6Ω
Satellite	: 4Ω
Frequency response	: 40Hz-20kHz
S/N Ratio	: ≥80 dB
Separation	: ≥45 dB
File format support (USB/SD)	: MP3
Line input	: 2ch RCA
Max. supported memory size (USB/SD)	: 32GB
FM frequency range	: 87 MHz - 108 MHz
BT name	: ZEB-BT2490RUCF
BT version	: 4.2
Product dimension (W x D x H)	
Subwoofer	: 150 x 280 x 260mm
Satellite	: 95 x 92 x 150 mm
Net. weight	
Subwoofer	: 2.3kg
Satellite	: 380g x 2
Total	: 3.06kg

Front Panel description

Function Instruction

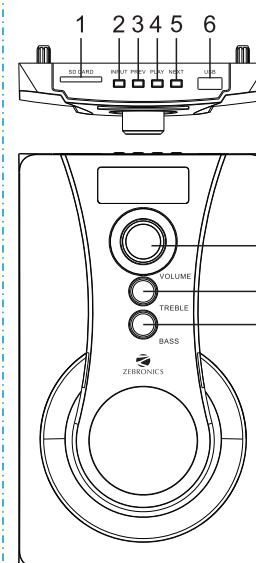

1. SD CARD: SD/MMC Card Slot
2. INPUT: Select the Input source (Aux, Bluetooth, USB, SD, or FM)
3. PREV:
In USB/SD mode: Press to go to previous track.
In FM mode: Press to go to previous pre-saved FM channel.
In all modes: Press and hold to decrease the volume.
4. PLAY:
In USB/SD mode: Press to Play the track. Press again to Pause the playing track. Press to Play again.
In FM mode: Long Press to search and save the FM Channels. Short Press will Mute the audio in Aux & FM Modes. Press again to release it from Mute.
5. NEXT:
In USB/SD mode: Press to go to next track.
In FM mode: Press to go to next pre-saved FM channel.
In all modes: Press and hold to increase the volume.
6. USB: USB Port for the pen drive
7. VOLUME: Volume +/- control
8. TREBLE: Treble +/- control
9. BASS: Bass +/- control