 


INSTRUCTION MANUAL

AGARO

UPRIGHT VACUUM CLEANER

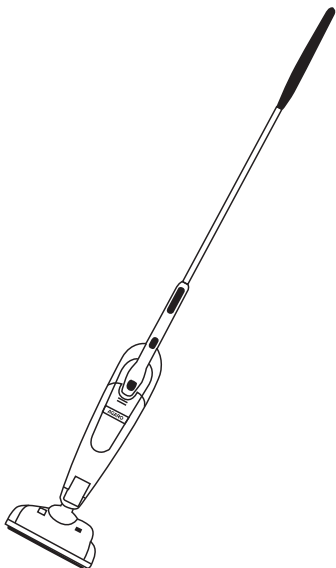


Model : **REGAL** PLUS



Caution:

- Before using the appliance, make sure the dust cup is properly installed
- Make sure the main power supply is 220-240V~ 50Hz
- Do not vacuum water or inflammable material
- Do not store or use the machine close to high temperature places
- If abnormal noise, smell, smoke or any other failure is detected, you should turn off the appliance and unplug it. Then contact with the service center for repair. Do not repair by yourself
- If the supply cord is damaged, it must be replaced in order to avoid a hazard
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play with the appliance
- The plug must be removed from the power socket before any maintenance or replacement


How to assemble:

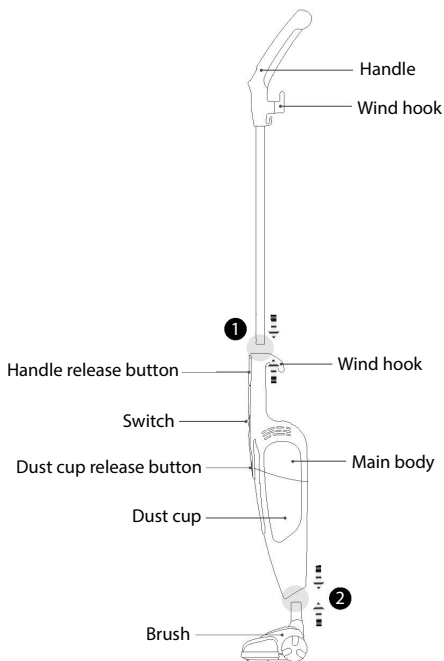


1. Connect the handle to the main unit: insert the connector with the unit. Press the handle release button and pull the handle if you want to remove the handle.
2. Insert the brush interface to the suction end.

How to use the accessories

1. Install nozzle tool and brush: Select crevice nozzle or brush and insert at the suction end according to your cleaning need.

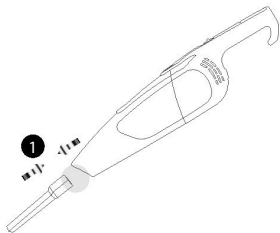


2. Connector tool: To be used to connect the multipurpose brush.

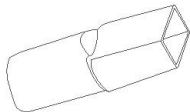

How to Use:


1. The power switch has two different positions. Slide the switch button to "ON" to start the unit and "OFF" to switch OFF the unit.

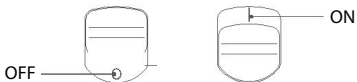


- Select the correct accessory and connect at the suction end. Switch on the vacuum cleaner for cleaning and switch off after using it.
- Use the upper hooker to wind the power cord during storage and lower hooker to unwind the power cord during use.

Maintenance

1. Hold the dust cup and press the button to remove the dust cup from the main body.

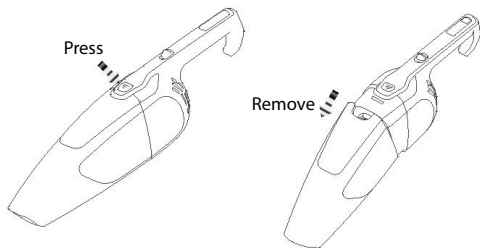

2. Clear the dust cup. A soft brush can be used to clean dust on filter.

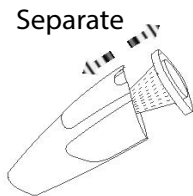

3. If the filter gets blocked, wash the filter and get it dry. Put it back after 24 hours.

Problem	Solution
Power plug is not fitted Properly in the socket	Filter is not installed on place
No power	Reinsert in the plug
Power switch not working	Check the circuit breaker
Motor thermal protector	Press the switch of VC pull the plug & wait for thermal protector
Low Suction	
The main brush or accessories block	Clear the blockage
	Clear the dirt timely
Too much dust in filter	Clear filter
Dust leak out from the VC	
Problem	Solution
Filter is broken	Replace filter
	Reinstall filter

LIMITED ONE YEAR WARRANTY

WARRANTY CARD

Product Name : Upright Vacuum Cleaner
Model : Regal Plus
Name of the Customer :
Address of the Customer :
Contact No. of the Customer :
Name of the Dealer :
Address of the Dealer :
Date, Month & Year of Purchase : / /
Warranty Valid up to : / /

Customer purchasing from online platforms needs to produce the Online Partner's Invoice copy to claim the warranty.

.....
Dealer's Stamp & Signature

Terms & Conditions apply

AGARO

Imported & Marketed by:

Universal Corporation Limited

Sikkim Commerce House, 4/1, Middleton Street, Kolkata-700071

Phone: 1800-120-7897, Email: info@uclindia.com

www.agarolifestyle.com