



ELECTRIC KETTLE

EK 3710

Instruction Manual



Dear Customer,

Congratulations!

You are now the proud owner of USHA Electric Kettle.
Innovatively designed, using only the highest quality material and components, your USHA Electric Kettle is designed for years of trouble free performance.

Please read this Instruction Manual carefully before using and keep it cautiously after reading for future reference.

Best Wishes



CONTENTS

Know your Electric Kettles

| | |
|----------------------------|---|
| Description of Parts | 3 |
| Key Features | 3 |

Safety Instructions

| | |
|----------------------------|-----|
| Important Safeguards | 4-5 |
|----------------------------|-----|

Operating Instructions

| | |
|--------------------------------------|-----|
| Operating your Electric Kettle | 5-6 |
|--------------------------------------|-----|

| | |
|--------------------------------|---|
| Care and Cleaning | 6 |
|--------------------------------|---|

Miscellaneous

| | |
|--------------------------------|---|
| Technical Specifications | 7 |
| Troubleshooting | 7 |
| Disposal | 7 |

| | |
|----------------------------|---|
| Warranty Card | 8 |
|----------------------------|---|

| | |
|--------------------|------|
| Notes | 9-10 |
|--------------------|------|

KNOW YOUR ELECTRIC KETTLE

DESCRIPTION OF PARTS

1. Body
2. Handle
3. ON/OFF Switch
4. Spout
5. Lid Lock
6. Power Indicator
7. Power Base



KEY FEATURES

1. SS 201 food safe material
2. 1.0 L capacity
3. Wider mouth for easy cleaning
4. Keeps water warm till 30 min (up to water temperature 70 degree)
5. 360 degree cordless power base
6. Inside Water level indicator
7. Auto cut off
8. Power On Indicator
9. Concealed heating element – The appliance comes with a concealed heating element which prevents mineral deposits in water to settle around the element while in operation and improves the efficiency of the kettle.
10. Cool touch handle
11. Power switch on handle for ease of use
12. 16 Amp plug with earth pin for safety.
13. Flexible power cord of 1.2 metre length
14. Cord Winding for easy storage - The appliance provides the facility to wind the kettle cord at the bottom of kettle power base. This prevents physical damage to the electric cord as well as helps in storing the kettle with ease.

SAFETY FEATURE

Dry boil protection with quicker shut off:

The kettle is designed to provide maximum level of safety to the users. The kettle shuts off in case it is left operating without any water content. The appliance also protects against overheating. The kettle shuts off when temperature of the water being boiled exceeds threshold temperature.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

This appliance corresponds to accepted technological standards with regards to safety. Nevertheless, we consider it our obligation to make you aware of the following safety instructions.

GENERAL SAFETY

1. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
2. Never use the cord to pull the plug out of the socket. Instead pull out using the lead of the plug.
3. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid risks.
4. Never use the kettle if it has been dropped or has evidently been damaged.
5. Repairs to this appliance may only be carried out by qualified service engineers. Considerable danger may result from improper repairs. If repairs become necessary please contact the nearest authorized company service centre or call our toll free no. 1800 1033 111.
6. Always pull out the plug before cleaning and attending the kettle, after each time it is used and for faults during operation.
7. This appliance is not advised to be used by anyone (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless properly guided about the use of the appliance in a safe manner by the person concerned for their safety.
8. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
9. Do not place on or near a hot gas or electric burner or in a heated oven.
10. Do not operate the appliance without anything in it to avoid damaging the heating elements.
11. Ensure that the kettle is used on a firm and flat surface out of reach of children; this will prevent the kettle from overturning and avoid damage or injury.
12. To protect against fire, electric shock or personal injury, do not immerse cord, electric plugs in water or other liquids.
13. While water is boiling, or just after water has been boiled, avoid contact with steam from the spout.
14. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
15. Be careful of refilling when the kettle is hot.
16. Do not touch the hot surface. Use the handle or the button.
17. The attached base cannot be used for other than intended use
18. Extreme caution must be used when moving an appliance containing hot water.
19. The kettle is for household use only. Do not use outdoors.
20. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
21. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.

22. To disconnect, turn any control to "off," then remove plug from wall outlet.
23. The kettle can only be used with the stand provided.
24. If the kettle is overfilled, boiling water may spill out.
25. Always ensure the lid is closed and do not lift it while the water is boiling . Scalding may occur if the lid is removed during the brewing cycles.
26. The appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - Farm houses.
 - By clients in hotels and other residential type environments.
 - Bed and breakfast type environments
27. Save these instructions.
28. Packaging material, e.g. plastic bags, should not be accessible to children.
29. This appliance can be used by children from 8 years and above if they have been properly supervised about the safe use of the appliance. Cleaning and maintenance of the appliance should not be done by children below the age of 8.

OPERATING INSTRUCTIONS

OPERATING YOUR ELECTRIC KETTLE

FIRST USE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water. Wipe the surface with damp cloth.

HOW TO OPERATE

1. Place the unit on a level surface.
2. To fill the kettle, remove it from the power base and open the lid by pressing the lid release button, fill with the desired amount of water, and then close the lid. Alternatively, the kettle maybe filled through the spout. The water level should not exceed MAX marks or sit below MIN level. Too little water will cause the kettle to switch off before the water has boiled.
NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.
3. Position the kettle on the power base.
4. Connect the plug into a power outlet. Press down the On/Off switch, the indicator will light up. Then the kettle will start to boil the water, once the water has been boiled the On/Off switch will be automatically switched off. You can shut off the power by lifting the On/Off switch at any moment during boiling water. If you want to boil water again, only press down the On/Off switch directly to restart the kettle.

NOTE: Ensure that the On/Off switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch is constrained or if the lid is opening

- Lift the kettle from the power base and then pour the water.

NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in scalding, besides, don't open the lid while the water in the kettle is hot.

- The kettle will not re-boil until the On/Off switch is pressed down again.
- The kettle may be stored on the power base when not in use.

NOTE : Always disconnect the power supply when not use.

CARE AND CLEANING

Always disconnect the appliance from the power outlet and cool it down completely before cleaning.

- Never immerse the kettle, power cord or power base in water or allow moisture to contact with these parts.
- Wipe the appearance of body with a damp cloth or mild cleaner.
- Remember to clean the filter at intervals. For easier cleaning, detach the filter and then replace it after cleaning.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the Kettle to prevent the gloss loss.

- When not in use or while storing, the power cord can be wounded at the bottom of the appliance.

REMOVAL OF MINERAL DEPOSITS (DESCALING)

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale at the bottom of kettle interior so as to cause the operation to become less efficient. You can use the commercially available descaler and follow the instructions on the package of descaler.

Alternatively, you may follow the below instructions to use the white vinegar

- Fill the kettle with 3 cups of white vinegar, then add water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
- Discard the mixture in the kettle, then fill the kettle with clean water, boil it and then discard the water. Repeat several times until the odour of vinegar has gone. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

MISCELLANEOUS

TECHNICAL SPECIFICATIONS

| | |
|------------------------|-------------|
| Mains Voltage | 230V, 50 Hz |
| Power | 1350 W |
| Maximum Filling Volume | 1.0 L |

TROUBLESHOOTING

- The appliance switches off before boiling:
 - The base of the kettle is too thickly scaled. Treat with standard commercial descaling agent suitable for stainless steel. Note the directions for use from the manufacturer.
- The appliance does not switch off :
 - Close lid until it locks
 - Insert the strainer correctly
- The kettle pours badly
 - Descale the strainer insert
- The appliance cannot be switched on :
 - After operating with very little or no water, the appliance has not yet cooled sufficiently. Wait a short time before trying again.

ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!
Please remember to respect the local regulations: Hand in the non-working electrical equipment's to an appropriate waste disposal centre.



WARRANTY CARD

This appliance is warranted for 2 years against all manufacturing defects from the date of sale. In the event of any complaint, please contact Usha Care at: Toll Free No. 1800 1033 111.

The warranty is valid only when:

1. The appliance has been installed, used and maintained in accordance with the instruction manual.
2. The warranty card and cash memo duly signed by the authorized dealer are presented with the complaint.
3. The appliance has not been opened or tampered with, by any unauthorized person.

This warranty does not apply for:

1. Damages due to chipping, peeling, plating and denting.
2. Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord.
3. Normal wear and tear of parts.
4. Damage resulting from accidents, mishandling or negligence on part of the customer.

Liability for consequential loss or damage is neither accepted nor implied.

S.No: _____

DATE: _____

CASH MEMO: _____

DEALER'S NAME AND ADDRESS: _____

OWNER'S NAME & ADDRESS: _____

NOTES



ELECTRIC KETTLE

EK 3710

To explore our range of
product and recipe log
on to www.usha.com
www.ushacook.com

