

CROSSBEATS

enigma

USER MANUAL





**TOUCH ENABLED EARBUDS
WITH ANC MODE**



OVERVIEW

1. Touch area
2. Charging pin earbud
3. Charging pin case
4. Reset button
5. Wireless charging
6. LED lights on case
7. USB-C charging port

1



Take out the earbuds from the charging case

2



The earbuds will auto power on

3



Search for CB-ENIGMA in your phone's Bluetooth list

4



Click to connect

FIRST TIME PAIRING

MONO PAIRING

1



For mono mode, take out either of the earbud when already paired

2



The music will automatically play in that particular earbud

 

 
RESET



Press the button on the charging case to reset the earbuds

MONO PAIRING & RESET

Note:  Tap  Touch and hold

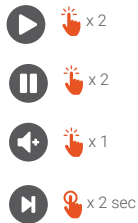

CONTROLS



NORMAL MODE

AMBIENT MODE

**ACTIVE NOISE
CANCELLING MODE**

NOTE: Switch between 3 different noise cancelling mode by double tapping on the left earbud.

DIFFERENT SOUND MODES



Use the TYPE-C cable
provided in the box for charging

or



Place the charging case on the
wireless charging dock/pad

CHARGING





Standard white light will be visible on case while earbuds are charging

White light on case will start to blink when you open the case indicating pairing

LED INDICATORS ON CASE



 +91 96112 93293

 +91 96112 93293

 support@crossbeats.com