



Microwave Oven

INSTRUCTION MANUAL

MODEL:EPBI MWO G28 TOUCH

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

| | |
|--------------------------------|--------------------|
| Model: | EPBI MWO G28 TOUCH |
| Rated Voltage: | 230V~50Hz |
| Rated Input Power(Microwave): | 1450W |
| Rated Output Power(Microwave): | 900W |
| Rated Input Power(Grill): | 1000W |
| Oven Capacity: | 25L |
| Turntable Diameter: | Ø315mm |
| External Dimensions: | 595x401x388mm |
| Net Weight: | Approx. 19.5 kg |

IMPORTANT SAFETY INSTRUCTIONS

WARNING

1. **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
2. **Warning:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. **Warning:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
4. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.
5. Only use utensils that are suitable for use in microwave ovens.
6. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
7. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
8. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

9. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
10. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
12. The oven should be cleaned regularly and any food deposits removed.
13. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
14. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)
15. The microwave oven must be operated with any cabinet door open.
16. The microwave oven must be operated with the decorative door open.
17. **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

To Reduce the Risk of Injury to Persons Grounding Installation

DANGER

Electric Shock Hazard
Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2)The extension cord must be a grounding-type 3-wire cord.
 - 3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. **Cleaning Tip**---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

| Utensils | Remarks |
|-----------------------|--|
| Aluminum foil | Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls. |
| Browning dish | Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. |
| Dinnerware | Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. |
| Glass jars | Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break. |
| Glassware | Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. |
| Oven cooking bags | Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape. |
| Paper plates and cups | Use for short-term cooking/warming only. Do not leave oven unattended while cooking. |
| Paper towels | Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. |
| Parchment paper | Use as a cover to prevent splattering or a wrap for steaming. |
| Plastic | Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. |
| Plastic wrap | Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. |
| Thermometers | Microwave-safe only (meat and candy thermometers). |
| Wax paper | Use as a cover to prevent splattering and retain moisture. |

Materials to be avoided in microwave oven

| Utensils | Remarks |
|---------------------------------|--|
| Aluminum tray | May cause arcing. Transfer food into microwave-safe dish. |
| Food carton with metal handle | May cause arcing. Transfer food into microwave-safe dish. |
| Metal or metal-trimmed utensils | Metal shields the food from microwave energy. Metal trim may cause arcing. |
| Metal twist ties | May cause arcing and could cause a fire in the oven. |
| Paper bags | May cause a fire in the oven. |
| Plastic foam | Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. |
| Wood | Wood will dry out when used in the microwave oven and may split or crack. |


SETTING UP YOUR OVEN

Names of Oven Parts and Accessories


Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

| | |
|-------------------------|---|
| Glass tray | 1 |
| Turntable ring assembly | 1 |
| Instruction Manual | 1 |

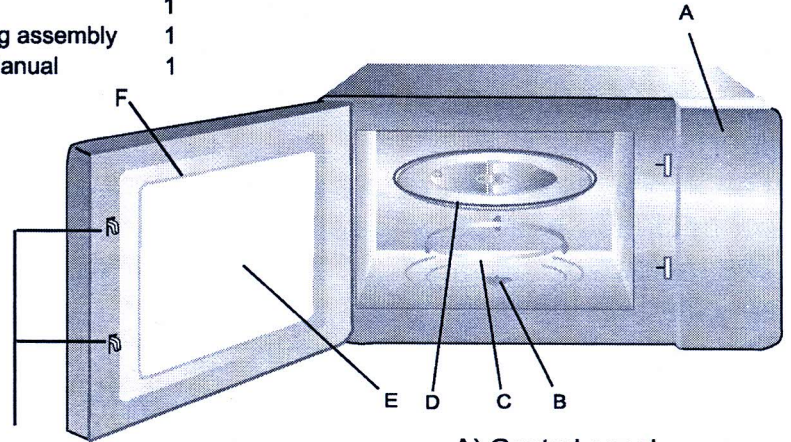


- A) Control panel
- B) Turntable shaft
- C) Turntable ring assembly
- D) Glass tray
- E) Observation window
- F) Door assembly
- G) Safety interlock system

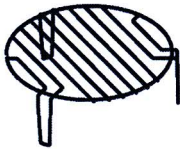

Grill Rack(Only be used in grill function and be placed on the glass tray)

Turntable Installation

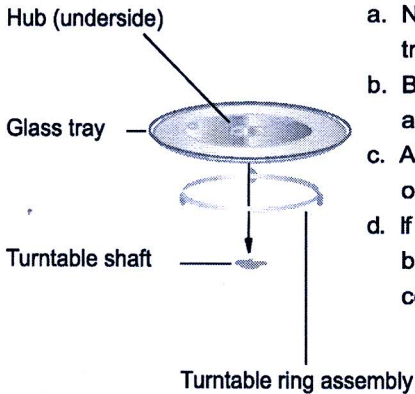

- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food are always placed on the glass tray for cooking.
- d. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

Installation and connection

1. This appliance is only intended for domestic use.
2. This oven is intended for built-in use only. It is not intended for counter-top use or for use inside a cupboard.
3. Please observe the special installation instructions.
4. The appliance can be installed in a 60cm wide wall-mounted cupboard (at least 55cm deep and 85cm off the floor).
5. The appliance is fitted with a plug and must only be connected to a properly installed earthed socket.
6. The mains voltage must correspond to the voltage specified on the rating plate.
7. The socket must be installed and connecting cable must only be replaced by a qualified electrician. If the plug is no longer accessible following installation, an all-pole disconnecting device must be present on the installation side with a contact gap of at least 3mm.
8. Adapters, multi-way strips and extension leads must not be used. Overloading can result in a risk of fire.

The accessible surface may be hot during operation.



Installation Instructions

Please Read the Manual Carefully Before Installation

Please note

Electrical connection

The oven is fitted with a plug and must only be connected to a properly installed earthed socket. The socket must only be installed and the connecting cable must only be replaced by a qualified electrician, and in accordance with the appropriate regulations. If the plug is no longer accessible following installation, an all-pole isolating switch must be present on the installation side with a contact gap of at least 3 mm.


The fitted cabinet must not have a back wall behind the appliance. Minimum installation height: 85 cm.

Do not cover ventilation slots and suction holes.

Note:


Do not trap or bend the power cable.

A. Built-in furniture

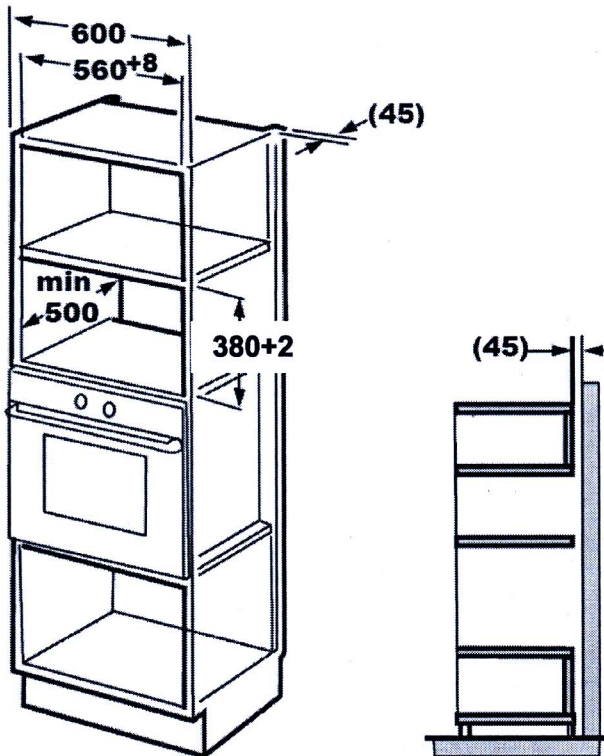


B.Prepare the cabinet


1. Read the instruction on the **BOTTOM CABINET TEMPLATE** , put the template on the bottom plane of cabinet.

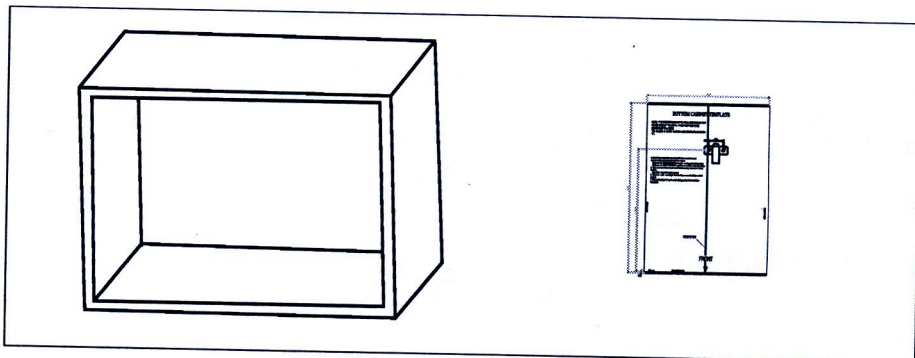

2. Make the marks on the bottom plane of cabinet according to marks "a" of the template

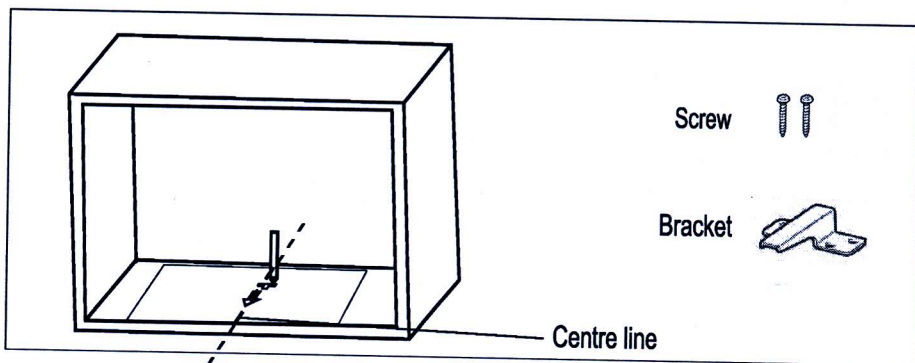


3. Remove the bottom cabinet template and fix the bracket with **screw** .

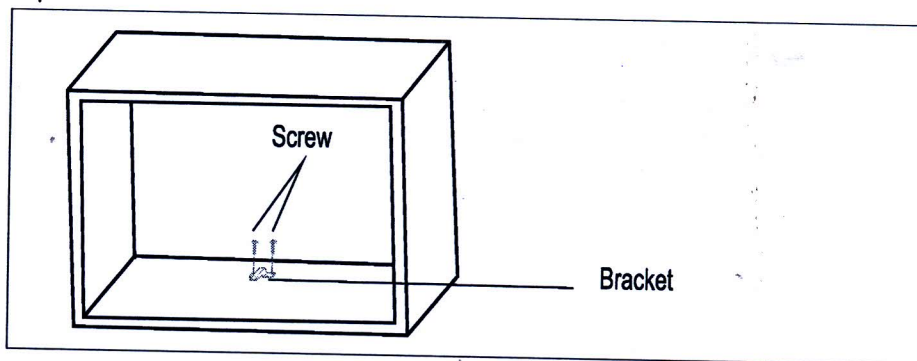


C. Install the oven

4. Install the oven to the cabinet

- Make sure the back of the oven is locked by bracket.
- Do not trap or kink the power cord.

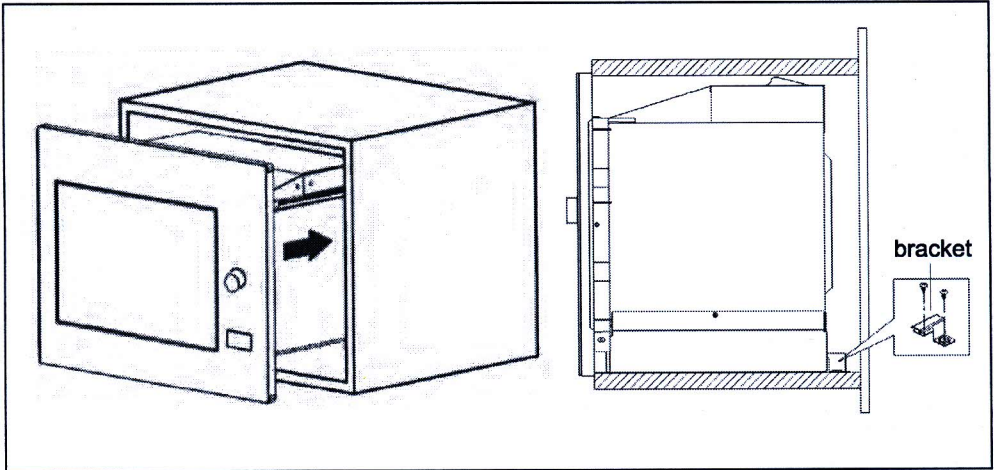

5. Open the door, fix the oven to the cabinet with **Screw** , at the **Installation Hole**.
Then fix the Trim-kit plastic cover to the installation hole.

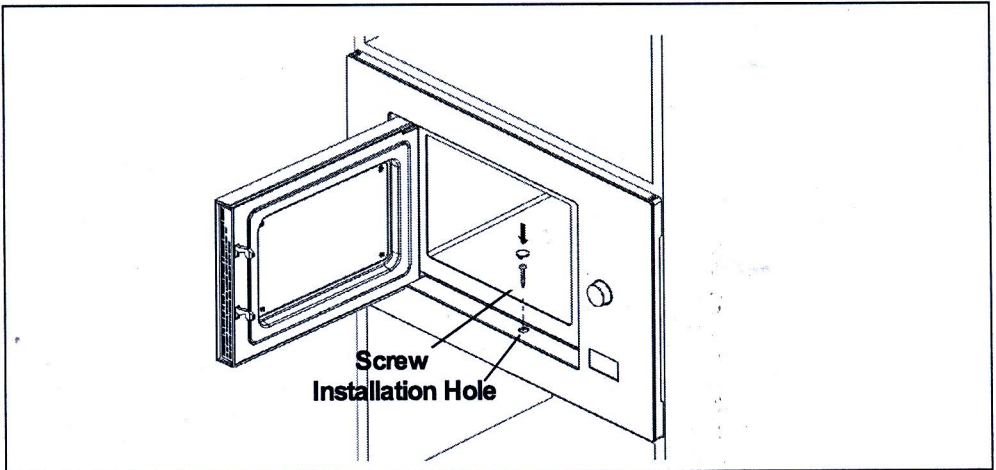

OPERATION INSTRUCTION

This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs better for cooking.

1. Clock Setting

When the microwave oven is electrified, the oven will display "0:00", buzzer will ring once.

- 1) Press " **Kitchen Timer/Clock** " twice, the hour figures flash;
- 2) Press " **+** " or " **-** " to adjust the hour figures. The input time should be within 0--23.
- 3) Press " **Kitchen Timer/Clock** ", the minute figures will flash.
- 4) Press " **+** " or " **-** " to adjust the minute figures. The input time should be within 0--59.
- 5) Press " **Kitchen Timer/Clock** " to finish clock setting ":" will flash, the " **●** " indicator will go out. The clock setting has been finished.

Note: 1) If the clock is not set, it would not function when powered.

2) During the process of clock setting, if you press " **Stop/Clear** ", the oven will go back to the previous status automatically.

2. Microwave Cooking

- 1) Press the " **Micro./Grill/Combi.** " key once, and "P100" will flash.
- 2) Press " **Micro./Grill/Combi.** " for times or press " **+** " or " **-** " to select the microwave power. "P100", "P80", "P50", "P30", "P10" will display in order.
- 3) Press " **Start/+30s/Confirm** " to confirm.
- 4) Press " **+** " or " **-** " to adjust the cooking time.
(The time setting should be 0:05- 95:00.)
- 5) Press " **Start/+30s/Confirm** " to start cooking.

NOTE: the step quantities for the adjustment time of the coding switch are as follow:

| | |
|------------|--------------|
| 0--1 min | : 5 seconds |
| 1--5 min | : 10 seconds |
| 5--10 min | : 30 seconds |
| 10--30 min | : 1 minute |
| 30--95 min | : 5 minutes |

Microwave Power Chart

| Microwave Power | 100% | 80% | 50% | 30% | 10% |
|-----------------|------|-----|-----|-----|-----|
| Display | P100 | P80 | P50 | P30 | P10 |

3. Grill or Combi. Cooking

Press " **Micro./Grill/Combi.** " once the screen will display "P100", and press " **Micro./Grill/Combi.** " for times or press " **(+)** " or " **(-)** " to choose the power you want, and "G", "C-1" or "C-2" will display. Then press " **Start/+30s/Confirm** " to confirm, and press " **(+)** " or " **(-)** " to set cooking time from 0:05 to 95:00. Press " **Start/+30s/Confirm** " again to start cooking.

Example: If you want to use 55% microwave power and 45% grill power(C-1) to cook for 10 minutes, you can operate the oven as the following steps.

- 1) Press " **Micro./Grill/Combi.** " once, the screen displays "P100".

- 2) Continue to press " **Micro./Grill/Combi.** " until the screen displays "C-1".

- 3) Press " **Start/+30s/Confirm** " to confirm.

- 4) Press " **(+)** " or " **(-)** " to adjust the cooking time until the oven displays "10:00".

- 5) Press " **Start/+30s/Confirm** " to start cooking .

Combination Power instructions:

| Program | Display | Microwave Power | Grill Power |
|---------|---------|-----------------|-------------|
| Grill | G | 0% | 100% |
| Combi.1 | C-1 | 55% | 45% |
| Combi.2 | C-2 | 36% | 64% |

Note: If half the grill time passes, the oven sounds twice, and this is normal. In order to have a better effect of grilling food, you should turn the food over, close the door, and then press " **Start/+30s/Confirm** " to continue cooking. If no operation, the oven will continue working.

4. Defrost By Weight

- 1) Press " **Weight/Time Defrost** " once, the screen will display "dEF1".
- 2) Press " **(+)** " or " **(-)** " to select the food weight. The range of weight is 100-2000g.
- 3) Press " **Start/+30s/Confirm** " key to start defrosting.

5. Defrost By Time

- 1) Press " **Weight/Time Defrost** " twice, the screen will display "dEF2".
- 2) Press " **+** " or " **-** " to select the cooking time. The maximum time is 95 minutes.
- 3) Press " **Start/+30s/Confirm** " key to start defrosting.

6. Multi-Stage Cooking

Two stages can be maximumly set. If one stage is defrosting, it will be put in the first stage automatically. The buzzer will ring once after each stage and the next stage will begin.
Note: Auto menu cannot be set as one of the multi-stage.

Example: if you want to defrost the food for 5 minutes, then to cook with 80% microwave power for 7 minutes. The steps are as following:

- 1) Press " **Weight/Time Defrost** " twice, the screen display "dEF2".
- 2) Press " **+** " or " **-** " to adjust the defrost time of 5 minutes;
- 3) Press " **Micro./Grill/Combi** " once, the screen will display "P100".
- 4) Press " **+** " or " **-** " to choose microwave power till "P80" displays;
- 5) Press " **Start/+30s/Confirm** " to confirm, the screen will display "P80".
- 6) Press " **+** " or " **-** " to adjust the cooking time of 7 minutes;
- 7) Press " **Start/+30s/Confirm** " to start cooking.

7. Kitchen Timer

- (1) Press " **Kitchen Timer/Clock** " once, the screen will display 00:00
- (2) Press " **+** " or " **-** " to enter the correct time.
(The maximum cooking time is 95 minutes)
- (3) Press " **Start/+30s/Confirm** " to confirm setting, timer indicator will be lighted.
- (4) When the kitchen time is reached, timer indicator will go out. The buzzer will ring 5 times.
If the clock has been set (24-hour system), the screen will display the current time.
Note: The kitchen Time is different from 24-hour system. Kitchen Timer is a timer.

8. Auto Menu

- 1) In waiting state, press "**+**" to choose the menu from "A-1" to "A-8".
- 2) Press "**Start/+30s/Confirm**" to confirm the menu you choose.
- 3) Press "**+**" or "**-**" to select the food weight.
- 4) Press "**Start/+30s/Confirm**" to start cooking.
- 5) After cooking finish, the buzzer sounds five times. The screen display "0:00".
If the time has been set, current time will be displayed.

The menu chart:

| Menu | Weight | Display |
|------------------|------------------------------|---------|
| A-1 Pizza | 200 g | 200 |
| | 400 g | 400 |
| A-2 Meat | 250 g | 250 |
| | 350 g | 350 |
| | 450 g | 450 |
| A-3 Vegetable | 200 g | 200 |
| | 300 g | 300 |
| | 400 g | 400 |
| A-4 Pasta | 50g(with 450 ml cold water) | 50 |
| | 100g(with 800 ml cold water) | 100 |
| A-5 Potato | 200 g | 200 |
| | 400 g | 400 |
| | 600 g | 600 |
| A-6 Fish | 250 g | 250 |
| | 350 g | 350 |
| | 450 g | 450 |
| A-7 Beverage | 1 cup(120 ml) | 1 |
| | 2 cups(240 ml) | 2 |
| | 3 cups(360ml) | 3 |
| A-8 Popcorn | 50 g | 50 |
| | 100 g | 100 |

9. Speedy Cooking

- 1) In waiting state, press " **Start/+30s/Confirm** " key to cook with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds. The maximum cooking time is 95 minutes.
- 2) During the microwave, grill, combination cooking and the defrost by time process, press " **Start/+30s/Confirm** " to increase the cooking time.
- 3) In waiting state, press " **⊖** " to set cooking time with 100% microwave power, then press " **Start/+30s/Confirm** " to start cooking.

Note: Under the states of auto menu and defrost by weight, cooking time cannot be increased by pressing " **Start/+30s/Confirm** ".

10. Lock Function for Children

Lock: In waiting state, press " **Stop/Clear** " for 3 seconds, there will be a long beep denoting entering the children-lock state and the current time will display if the time has been set, otherwise, the screen will display " **⏸** ".

Lock quitting: In locked state, press " **Stop/Clear** " for 3 seconds, there will be a long "beep" denoting that the lock is released.

11. Inquiring Function

- 1) In cooking states of microwave, grill and combination, press " **Micro./Grill/Combi.** " the responding power will be displayed for 3 seconds.
- 2) During cooking state, press " **Kitchen Timer/Clock** " to check the current time. It will be displayed for 3 seconds.

12. Specification

- (1) " **Start/+30s/Confirm** " must be pressed to continue cooking if the door is opened during cooking;
- (2) Once the cooking programme has been set, " **Start/+30s/Confirm** " is not pressed in 1 minute. The current time will be displayed. The setting will be cancelled.
- (3) The buzzer sounds once by efficient press, inefficient press will be no response.

Trouble shooting

| Normal | |
|--|---|
| Microwave oven interfering TV reception | Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal. |
| Dim oven light | In low power microwave cooking, oven light may become dim. It is normal. |
| Steam accumulating on door, hot air out of vents | In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal. |
| Oven started accidentally with no food in. | It is forbidden to run the unit without any food inside. It is very dangerous. |

| Trouble | Possible Cause | Remedy |
|--|--|---|
| Oven can not be started. | (1) Power cord not plugged in tightly. | Unplug. Then plug again after 10 seconds. |
| | (2) Fuse blowing or circuit breaker works. | Replace fuse or reset circuit breaker (repaired by professional personnel of our company) |
| | (3) Trouble with outlet. | Test outlet with other electrical appliances. |
| Oven does not heat. | (4) Door not closed well. | Close door well. |
| Glass turntable makes noise when microwave oven operates | (5) Dirty roller rest and oven bottom. | Refer to "Maintenance of Microwave" to clean dirty parts. |



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

PN:16170000A43236

