



ZEBRONICS  
ALWAYS AHEAD

2.1 Speaker  
ZEB **UDAAN 2**



User Manual

[www.zebronics.com](http://www.zebronics.com)

## Features

2.1 Channel speaker

Wireless BT/USB/AUX/FM

LED Display

Synchronized multi color dancing LED  
with on/off switch

Remote control

Volume, Bass & Treble adjustment

Wall mountable

## Specifications

Output power (RMS)

Subwoofer : 20 Watts

Satellites : 10 Watts x 2

Total : 40 Watts

Driver size

Subwoofer : 10.16 cm

Satellites : 7.62 cm x 2

Impedance

Subwoofer : 4 ohm

Satellite : 4 ohm

Frequency response : 40Hz - 20kHz

S/N Ratio :  $\geq 80$ dB

Separation :  $\geq 45$ dB

File format support

(USB) : MP3

Line input : 2ch RCA

Max. supported USB

memory size : 32GB

FM frequency range : 87.5 MHz - 108 MHz

BT name : ZEBRONICS

BT Range : 10 Meters  
(without obstacles)

BT version : 5.1

## Product dimension (W x D x H)

Subwoofer : 150 x 275 x 210 mm

Satellite : 96 x 95 x 135 mm

## Net. weight

Subwoofer : 2.75 kg

Satellites : 0.60 kg

Total : 3.35 kg

## Description of the Subwoofer control panel



**1. Mode**

**2. Play / Pause**

**3. Bass: To Adjust the bass**

**4. Volume : To adjust the volume level**

**5. Next**


**6. Prev.**

**7. Treble : To adjust the treble**

**8. USB**

**9. Light On / Off**

## Description of the rear side of the subwoofer

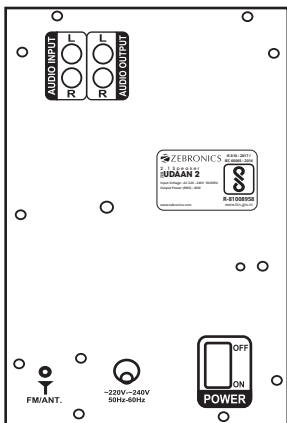

A: AUDIO INPUT (AUX)  
STEREO INPUT

These jacks are used to receive the Stereo signal from a CD/VCD/DVD (2 CH) player.

SPEAKER OUTPUT  
FRONT L/R

Front channel output terminals

B. AC POWER  
POWER ON and OFF

This turns the power of the speaker on/off.

AC/IN(~220V-240V 50/60Hz)

AC power cord.

## Unit Operation


1. First plug the cable of the satellite into the output jack on the rear panel of the woofer, one end of the audio cord into the input jack on the rear panel, the other end into the output jack of the computer or other audio equipment, the power cord into the power supply jack, switch on the unit, LED on the front panel light up, the system starts to work, the default is last working mode.
2. Rotating the VOLUME knob to adjust the volume, rotating the TREBLE knob to adjust the treble, rotating the BASS knob to adjust the bass.
3. When USB device is working, press the PLAY/PAUSE button pause the music, press the PLAY/PAUSE button again to resume music.
4. When it is in FM mode, long press the PLAY/PAUSE button to search the channel automatically according to local radio conditions. It can save 20 stations at most, after the search has been finished, it plays the first channel saved automatically.

5. When USB device is working, press the MODE button to cycle through the LINE IN, FM, USB, Bluetooth.
  
6. When USB device is working, press the PREV and NEXT button to choose the previous or the next track / channel, Press VOL- and VOL+ button to adjust the volume.
  
7. When BT mode, you can connect your BT enabled device. Once connected, audio can be streamed via BT from your phone.

### **Important Notes**

- Make sure that the power supply is proper and never handle the power cord or its plug with wet hands when plugging into, or unplugging from a power socket.
- Ensure that the main power switch is in the "OFF" position before connecting the AC Power cord to the power supply to avoid damage to the system.
- A damaged power cord can easily cause an electric shock or fire hazard. Never use a power cord if it has been damaged.

## Description of the Remote Control

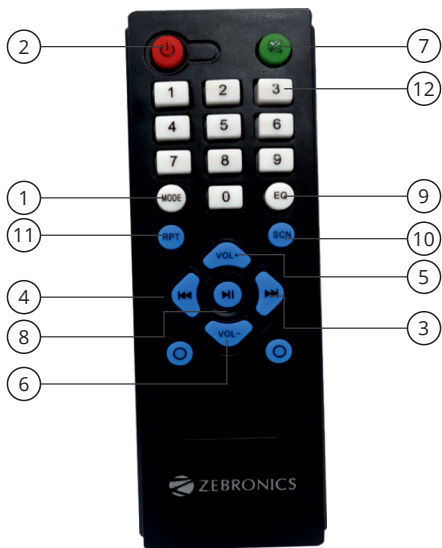

1. MODE cycle selection Aux - FM - USB - BT
2. POWER standby (STANDBY) ON/OFF
3. NEXT: to select the next song in USB or next channel in radio station
4. PREV: to select the previous song in USB or previous channel in radio station
5. VOL+: to increase the overall volume
6. VOL-: to decrease the overall volume

7. MUTE: Mute
8. Play/Pause: to play/pause in USB to search automatically in radio station, 20 channels can be saved up at most.
9. EQ: Normal Pop - Rock - Jazz - Classic - Cou
10. It scans for all FM stations in Radio mode
11. REP: to switch between REP ALL and REP 1 modes, when speaker unit starts, the default mode is REP ALL. Once pressed this button mode changes to REP 1.
12. 0 - 9: to select direct in USB/Memory card, to select 10 digits above by consecutively pressing

## Safety Precaution



## WARNING:

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

\* Note: This product is for indoor use only.





The lightning flash with arrow head symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated " dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the product.

### **Important safety instructions**

1. Read these instructions before using the product
2. Do not use this speaker unit near water
3. Clean only with dry cloth
4. Do not block any ventilation openings, install in accordance with the manufacture's instructions
5. do not install near any heat source such as radiators, heat registers, stoves or other devices (including amplifiers) that product heat.

6. Only use attachments/accessories specified by the manufacturer.
7. Unplug this speaker unit during lightning storm or when unused for long periods of time.

**ISO 9001:2015 Certified Company**  
**[www.zebronics.com](http://www.zebronics.com)**

