


Contents

Name of Parts	1
Safety precautions	2
Installation and Adjustment	3
Preparation before washing	6
The musts in washing	7
Usage of detergent	7
Usage of the Operation Buttons	7
Operating Procedure	12
Finish washing	13
After washing	13
Trouble shooting answer to question	14
Specification	15
E-waste Guideline	16
Warranty Card	17

Name of Parts

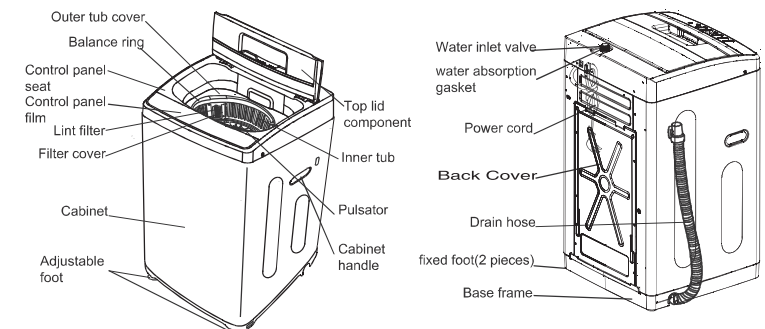

Reference machine snap for all TL model

Notes: All illustrations in this manual are given for reference only. Your products and accessories may show differences from these illustrations due to our continuous improvement.

Meaning and description of the symbols

	Contents marked with that symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the contents, otherwise it may cause damage of the machine or endanger the personal safety of the user.
	Contents marked with that symbol are actions forbidden to perform. Performing of those actions may result in damage of the machine or endanger the personal safety of the user.

- Please check if the power receptacle has good earthing condition before using to guarantee your safety.

Safety precautions

- Do not stretch hands into the working machine. It is dangerous even if the rotation is slow. Take special care of the children. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not decompose, repair or alter the machine by yourself.
- Do not put any hot or heavy items (such as the kettle with hot water) on the washing machine.
- Do not wash laundries with volatile materials (such as thinner, petrol etc.).
- The children shall not approach the working washing machine.
- Keep the machine away from direct sunlight and heat source like the heater.
- The lint filter shall be kept in good condition, and installed to proper position. If the lint filter is lost or damaged, please contact the local after-sales service department of our company.
- Please plug in the power cord on special receptacle with rated voltage. Be sure to use single-phase three pins receptacle. The earthing terminal of the receptacle must be earthed reliably. If possible, please adopt electric leakage protector.
- The washing machine must be positioned so that the plug is accessible. Be sure to pull the plug off and close the water faucet in following cases: power failure, delivering the machine, setting the machine title or cleaning the machine.
- Do not plug in or pull out the power plug with wet hand.
- Do not bend, extend, twist, bind by force. Do not press or nip it with weight.
- Keep the pin of the power plug clean, if the power plug is polluted with dust, please wipe with dry cloth carefully.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

*Motor used in machine is having Thermal Overload protection. So, in case of excessive heating, motor might trip and stop for cooling. In such case, it is suggested to wait till the temperature goes down before starting.

Usage of Drain Hose

The drainage shall be smooth with the drain hose.

- The drain hose should be installed at height less than 10cm for smooth drainage.
- Do not trample or press the drain hose.
- If the drain hose is too long, cut it at mid point. To make smooth drainage, cut the front end of the hose slantingly. But the hook of drain pipe can not be installed again.
- If extra drain hose is needed, please make separate purchase. The inner diameter of the extra hose shall not less than 30mm, and the length shall not exceed 1.5m.
- If the extra hose is too long, cut it either at A or at B point.

Note: The instructions for appliances connected to the water mains by detachable hose-sets shall state that the new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

Confirm the water faucet

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

water faucet, suitable / water faucet, not suitable

It is required that the front end shall be longer than 10mm. The exit end face of the faucet shall be fat and smooth. If not please file it to avoid leakage.

Connection between the water inlet hose jointer and the water faucet

- Press the lower end of the lock lever and push down the slider. Take off the water inlet hose jointer from the water inlet hose component. See to Figure 1.
- Take off the nameplate. Make sure the threading is 4mm above the upper surface of the nut. See to Figure 6. If the threading is less than 4mm above the upper surface of the nut, please loosen the screws.
- Loosen the screw till the water faucet can be accessed. Put the jointer of the water inlet hose on the faucet. See to Figure 2. (If the faucet is too large and the jointer can not be set on the water faucet, please loosen the four screws and take out the bushing in the jointer. The front end of the faucet must be smooth, otherwise it may leak water. See to Figure 3.)
- Fasten the four screws evenly. See to Figure 4.
- Twist the fastening nut. See to Figure 5. After installation, the threading is less than 2mm above the upper surface of the nut. See to Figure 6.

- Swing the hose gently to confirm if it is fastened stable.
- After installation, open the faucet to check if it leaks.
- Do not bend the hose with overstrain.
- Before each usage please check if the connection between the jointer of the water inlet hose and the water faucet, and the installation of the water inlet hose are firm, so as to prevent dropping from improper installation position.

Dismantle the water inlet hose

- Close the water faucet.
- Press the locking lever. Push down the slider. Then pull off the water inlet hose. If the machine is used frequently, the jointer of the water inlet hose can be kept on the faucet to prevent damaging the fixing screw.

Preparation before washing

- Connect the water inlet hose. Open the water faucet. Confirm that the washing machine is earthed reliably.
- Insert the power plug into the receptacle. The earth terminal shall not link to gas pipeline and faucet water pipeline.
- Put down the drain hose.

WOOL WASH

- Water Temp. should be below 30 degrees to avoid possible damages on clothes.
- When the working cycle is finished, get take out cloth and dry it to avoid retention & deformation.
- Appropriate wool detergent is suggested to achieve less damage & better washing effect.
- Clothes in white, black or other bright colors must be washed separately.

Connection between the water inlet hose and the washer

- Do not take off the water absorption cushion. Please check if the cushion is dropped or damaged before each usage. If it happens please contact our after-sale department immediately.
- Put the nut of the water inlet hose on the valve jointer.
- Fasten the nut. Swing it gently to confirm if it's suitable.

Connection between the jointer of the water inlet hose and the water inlet hose

- Push down the slider. Insert the water inlet hose into the jointer.
- Hang the lock lever to the jointer. Release the slider till a click sound is heard.

The musts in washing

- The capacity of washing and spinning of the machine refer to the largest weight of the standard laundries under dry condition that can be washed or spinned in one time. One time washing quantity shall be lower than the rated capacity.
- The thickness, size, type of the cloth will influence the actual washing capacity. It is suitable for one time washing to put in reasonable amount of laundries and the laundries can be turned round in washing.
- Do not select the high water level for laundries less than 1.0kg, so as to avoid splashing of water.

Usage of the detergent

- It is suggested to add washing powder into the tub directly under fuzzy program and reserve program.
- Dissolve directly inside the washing machine. (not applicable for fuzzy and reserve program)
- Add some water (select "1" water level).
- Add washing powder. Run for about 30s to fully dissolve the powder. Then push the "Start/Pause" button.
- Put in laundries. Select suitable water level. Push the "Start/Pause" button again.
- Washing powder with poor quality or long-time storage may get caked. Please clean the detergent box in usage.
- Quick dissolving of washing powder: 1. Prepare warm water of 40°C and container. 2. Add washing powder while stirring to dissolve it completely.
- Please add suitable washing powder as per the laundries quantity, the set water level and water quantity.
- If you select "Quick" program, it is suggested to use liquid detergent instead of washing powder to guarantee the washing effect.
- It is not recommended to use rich-foam washing powder.

How to use liquid detergents

Close the lid

If you open the lid during spin cycle the machine will stop and audible alarm will sound.

Put the liquid detergent box on the right of the detergent box. See the above figure. Before washing put the liquid into the detergent box directly as indicated the above figure. The usage and dose of the liquid detergent as per the specifications of liquid detergent. Washing powder with poor quality or long-time storage may get caked. Please clean the detergents box duly in usage.

Usage of the Operation Buttons

Explanation of Buttons (Applicable for 707 Series)

Flash Normally on: 41L # 46L, 33L # 37L, 24L # 29L, 12L # 18L

Wash: Normal, Rinse: Soak, Spin: Delicate, Tub Dry: Quick

Water Level, Delay, Program, Start/Pause

Explanation of Buttons (Applicable for 678 Series)

Flash Normally on: 41L # 46L, 33L # 37L, 24L # 29L, 12L # 18L

Wash: Normal, Rinse: Soak, Spin: Delicate, Tub Dry: Quick

Water Level, Delay, Program, Start/Pause

Explanation of Buttons (Applicable for 698 & 528 Series)

WASH: 45min, 30min, 20min, 15min, 10min, 5min, 3min, 2min, 1min, 0.5min

Air Dry: 20min, 15min, 10min, 5min, 3min, 2min, 1min, 0.5min

Function: K, J, I, H, G, F, E, D, C, B, A

Start/Pause, Power

Explanation of Buttons (Applicable for 789 & 826 Series)

Detergent/Water Level, Water Level, Flash: Normally on

Wash: 45min, 30min, 20min, 15min, 10min, 5min, 3min, 2min, 1min, 0.5min

Rinse: 5min, 3min, 2min, 1min, 0.5min

Spin: 1min, 0.5min

Process, DIY, Program, Start/Pause, Power

Explanation of Buttons (Applicable for 707E, 1269DB & AE/FE)

Detergent: 41L # 46L, 33L # 37L, 24L # 29L, 12L # 18L

Flash Normally on Wash: 41L # 46L, 33L # 37L, 24L # 29L, 12L # 18L

Rinse: Soak, Spin: Delicate, Tub Dry: Quick

Water Level, Program, Start/Pause, Power

Indicator mode and meaning

Off, Flashing: indicate the running program, or indicate the selected mode or indicate the water level, On: indicate the program about to run or indicate the selected mode or indicate the water level

Digital tube

- It displays total remained time during the running program (min) it displays the remained reserve time during delay program(hours).
- It displays abnormal symbol in abnormal situation.
- It displays "-" during detecting the actual washing time might be different with display time under the condition of different water pressure, different cloth material and different loading cloth.

Child lock function

- The function is intended for children safety and preventing the washing program from accidental changes by children
- (Applicable for 707, 707E, 1269DB, AE & FE Series) Set the desired washing program, after setting, press the Start/Pause button, and washing machine begin to run. Then hold the water level button and delay/program button at the same time for more than 3 seconds, you will hear three beep sound, digital tube display "CL", and the child lock will activate. The circular indicator light under right corner of the digital tube will flash. All of the buttons are locked and have no function.
- (Applicable for 789 & 826 Series) Press the Start/Pause button, and washing machine begin to run. Then hold the Process and DIY button at the same time for 3 seconds, you will hear 3 beep sound and Child lock will activate and "CL" will display.

- Release the child function: Press the water level button and delay button at the same time for more than 3 seconds. After three beep sound the child lock function is released, or the machine will set to child lock function automatically for using every time.

Note: if you open the lid when the child lock activates, digital tube displays "E2", beeps and stops running. If the safety can be sure and you need to go on with running, you need close the lid, press the water level button and delay button at the same time for more than 3 seconds to released the child lock function and then continue running, or the washing machine will drain after 10 seconds, and power will be off after 10 minutes.

(Applicable for 698 & 528 Series)

Child Lock J Child lock button
The function is intended for children safety and preventing the washing program from accidental changes by children

(Applicable for 678 Series)

- Set the desired washing program after setting, press the Star/Pause Button, and washing machine begin to run. Then hold progress Button and Delay Button at the same time for more than 3 seconds, you will hear three beep sound, digital tube display "CL", and the key lock will activate. All of the buttons are locked, and will not function.
- Release the Key Lock function: Press the program Button and delay at the same time for more than 3 seconds, after three beep sound, the Key Lock Function is released.

Note: if you open the lid when the Key Lock activate, digital tube display "E2", and beep, you need close the lid and press the Star/Pause to cancel, or washing machine will drain after 10 seconds, and power off after 10 minutes.

Additional Program features for 678 Series

Tub Dry
Push the "Tub Dry" button to select the tub dry procedure. The purpose is dry the outer tub and the inner tube, which can avoid growing mildew on the outer and the inner tube.

Air Dry
Push the "Air Dry" button to select the air dry procedure. The purpose is dry laundries. The max drying capacity of the fibre laundries is 2.5kg. "Air Dry" Program cannot be reserved.

Reserve Water
Push the "Reserve water" button to select reserve procedure. It will not drain off water unless press the "start/pause", the water will drain in container that more lower. It will reserve 4 hours if the procedure involved function of "Rinse" and alarm every 15 minutes. Like the button of "wool" "Drum Clean" "Anti Blanket" "Spin", it has no the function.

Door Lock Feature
In case of sudden power cut, top lid will not open and need to wait till power resumes.

Spin Program Selection Method for 70-789 Series

- Push the "power" button and then "Process" button.
- Change water level (0-10 level). Push "DIY" to change level.
- Change wash time (0-25 min). Push the process button till light blink on wash time. Push "DIY" to change time.
- Set wash time 0 to eliminate washing operation.
- Change rinse time (0-3 min). Push the process button till light blink on rinse time. Push "DIY" to change time.
- Set Rinse time 0 to eliminate rinsing operation.
- Change Spin time (0-9 min). Push the process button till light blink on spin time. Push "DIY" to change time.
- If user want to spin only, Push "DIY" to set wash time & rinse time into Zero. 3 Push "Start" Button to run machine.